

CATHEXISVISION CARBON 6 MANUAL





Contents

1. Introduction	8
1.1 Resources and System Components	8
1.2 Supported Languages	9
1.3 Requirements and Specifications	9
1.3.1 General Requirements	9
1.3.2 Product Interoperability1	.0
1.3.3 License Requirements1	0
1.3.4 Ports to Open 1	.0
1.4 Features and Abilities1	.1
1.5 Navigating This Document1	.1
2. Install Carbon1	.2
3. Add Accounts1	4
3.1 Add a New Account Type (Initial Connection)1	.4
3.2 Add a Site Connection 1	.4
3.2.1 Add a Site: Standard Connection 1	.5
3.2.2 Add a Site: Discovery Connection1	.5
3.2.3 Add a Site: Port Forward Connection1	.6
3.2.3 Add a Site: Subsequent Logins1	.6
3.3 Add a MultiSite Connection1	7
3.3.1 Configure MultiSite Connection1	.7
3.3.2 Add a Site to MultiSite 1	.7
3.4 Add an Enterprise Connection 2	2
3.4.1 Configure Enterprise Connection 2	2
3.4.2 Add a Site to Enterprise 2	3
4. General Interface2	7
4.1 Start Screen 2	7
4.1.1 Connection Logs 2	7
4.1.2 Updates (Enterprise Only) 2	7
4.2 Application Settings 2	8
4.2.1 Enterprise/MultiSite (Edit Connection Properties) 2	.8
4.2.2 Sites (Edit Connection Properties) 2	.8
4.2.3 Updates 2	9
4.2.4 Controllers 2	9
4.2.5 Advanced	1



4.2.6 Help	
4.3 Log In	
4.4 User Settings	
4.4.1 Further Settings: Change Password	
4.4.2 Further Settings: Global Settings	
4.4.3 Custom Resource ID Viewer	
4.4.4 Signing Out: Return to Menu	
4.5 Home Menu Tab	
4.5.1 Using Tabs	
4.6 Fullscreen	
4.7 Intercoms	
4.7.1 Add Intercom in CathexisVision	
4.7.2 Add Intercom in Carbon	
4.7.3 Open Intercom/Make a Call in Carbon	
4.7.4 Receive a Call in Carbon	
5. Monitoring Tab	40
5.1 Monitoring Tab at a Glance	
5.2 The Resource Folder Tree	
5.2.1 Using the Folder Tree	
5.2.2 Resource View Editor	
5.3 Monitoring Tab Settings Menu	
5.3.1 Monitoring Tab Settings	
5.3.2 Live Streaming Statistics	
5.4 Templates	
5.4.1 Choose a Template	
5.4.2 Template Editor: Create a Template	
5.4.3 Remove Template	
5.4.5 Change Template While Viewing Cameras	
5.5 Layouts	
5.5.1 Create Layout	
5.5.2 Locate Saved Layout	
5.5.3 Overwrite Layout	
5.5.4 Rename or Delete Layout	
5.6 Auto Layout and Auto Add Selection	
5.6.1 Auto Layout: Add Cameras	
5.6.2 Auto Layout: Add Camera Group	



	5.6.3 Auto Add Selection	50
	5.7 Event Black Screen Monitoring (BSM)	50
	5.7.1 Add Cameras to BSM	50
	5.7.2 Add VMS Events and Event Groups to BSM	51
	5.7.2 BSM Settings	51
	5.8 Viewing and Reviewing Cameras	53
	5.8.1 Camera Panel Display	53
	5.8.2 Zoom and PTZ	56
	5.8.3 Adjacent Camera Mapping	58
	5.8.4 Camera Tools Menu	59
	5.8.5 Review Tools	60
	5.8.6 Archiving	64
	5.8.7 Bookmarks	69
	5.8.8 Snap Search	72
	5.8.9 Motion Search (Quick)	75
	5.8.10 Motion Search	77
	5.8.11 Feature Search	80
	5.8.12 Integration Overlays	80
	5.8.13 Advanced: Connection Logs	81
	5.8.14 Dewarping	81
	5.8.15 Video Settings	81
	5.8.16 PTZ Menu	82
	5.8.17 Monitoring Using the Side Panel	83
	5.9 Using Maps from the Monitoring Tab	85
	5.9.1 Monitoring Tab Map Tools	85
	5.9.2 View the Map's Resources in Another Panel	85
	5.9.3 Inputs and Outputs	86
	5.9.4 Placing Layouts	87
	5.10 Cast a Camera or Layout to a Monitor	88
	5.11 Alarm Black Screen Monitoring (BSM)	88
	5.11.1 Icons and Tools	89
	5.11.2 Preview Alarm	89
6	. Databases Tab	91
	6.1 Select and View a Database	91
	6.2 Metadatabase Interface	91
	6.2.1 Configure Filters	93



6.3 Video Database Interface	
6.3.1 View Video Footage Associated with an Event	
6.4 Database Menu	
6.4.1 Export	
6.4.2 Manage Reports (Metadatabase Only)	
6.4.3 Settings	100
7. Maps Tab	101
7.1 Create New Map	101
7.1.1 Map Tools: Top Menu Bar	102
7.1.2 Add Resources to Map	103
7.1.3 Edit Map Appearance	
7.2 Using Maps	107
7.2.1 Open Map	107
7.2.2 Maps Tab Navigation	108
7.2.3 Using Icons	108
8. Configuration Tab	110
8.1 Navigating the Configuration Tab	110
8.1.1 Domain Panel Right-Click Options (MultiSite and Enterprise)	111
8.1.2 Set Custom ID	111
8.2 Home Menu	112
8.2.1 General	112
8.2.2 Settings	113
8.2.3 Licenses	117
8.2.4 Schedules (MultiSite or Enterprise)	118
8.2.5 Site Updates (Enterprise Connections Only)	119
8.3 Resource Management	125
8.3.1 Resources	125
8.3.2 Resource Tree: Auto or Manual Configuration (Sites and Enterprise)	129
8.4 User Management (Users)	131
8.4.1 Add, Delete or Disable a User (MultiSite and Enterprise Only)	132
8.4.2 Change User Details: Settings Tab	133
8.4.3 Site Roles (MultiSite Only)	134
8.4.4 Manage User Permissions	135
8.4.5 Manage Inherited Roles	138
8.5 Roles	139
8.5.1 Create a New Role	



8.5.2 Modify a Role	140
8.6 Permission Groups (Sites and Enterprise)	142
8.6.1 Create a New Permission Group	142
8.6.2 Edit a Permission Group	143
8.7 Alarms (MultiSite and Enterprise)	144
8.7.1 Alarms	144
8.7.2 Tags	146
8.7.3 Procedures	147
9. Feature Search	149
9.1 Open Feature Search in Carbon	150
9.2 Select Image	150
9.2.1 Upload Image	151
9.2.2 Find Image Using Thumbnail	152
9.2.3 Use Image from Monitoring Tab	152
9.3 Feature Area	153
9.4 Query Parameters	153
9.5 Search Results	154
9.5.1 Review Video Footage Using a Search Result	155
9.5.2 Search Using a Search Result	155
10. Archive Player	156
10.1 File Interface	156
10.1.1 Review Archive	157
10.2 Review Interface	157
10.2.1 More Options	159
10.2.2 Timeline and Review Control	161
10.2.3 Review Panel	165
11. Video Walls Tab	
11.1 Add a Monitor	168
11.1.1 New Monitor (Single Site Connection)	168
11.1.2 New Monitor (Enterprise or MultiSite)	171
11.2 Create New Monitor in CathexisVision Carbon Monitor Desktop App	173
11.2.1 Carbon Monitor Desktop App: Settings	174
11.3 Set User Permissions in Carbon	175
11.4 Control Monitor in Video Walls Tab	177
11.4.1 View Options	177
11.4.2 Options: Basic Live Streaming Control	



11.4.3 Manage View (Camera Panels)	178
11.5 Manage Video Walls	
11.5.1 Create Video Wall	
11.5.2 View Video Wall	
11.5.3 Control/Edit Monitor from Video Wall	
11.5.4 Edit a Video Wall	
12. Dashboard Tab (Enterprise Connections Only)	
12.1 Health Information Display	
12.2 View Site Information/Details	
12.3 Export Data Table	
13. Hardware Tab (Enterprise Connections Only)	
13.1 Select Domain	189
13.2 Select Category (Cameras, Video Databases, Disks or Servers)	189
13.2.1 Display Columns	190
13.2.2 Graph (Disks)	191
13.3 Change List Display (Cameras, Disks, Servers)	191
13.4 Generate Reports	192
14. Alarms Tab (MultiSite and Enterprise)	
14. Alarms Tab (MultiSite and Enterprise) 14.1 Open Alarms	
	193
14.1 Open Alarms	193 194
14.1 Open Alarms 14.1.1 Quick Actions	193 194 194
14.1 Open Alarms14.1.1 Quick Actions14.1.2 Open Alarms Tab Viewing Options	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.4 Assign to Me 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 14.1.6 Tags 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 14.1.6 Tags 14.1.7 Preview Alarm 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 14.1.5 Close 14.1.6 Tags 14.1.7 Preview Alarm 14.1.8 Handle Alarm (Alarm Viewer) 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 14.1.6 Tags 14.1.7 Preview Alarm 14.1.8 Handle Alarm (Alarm Viewer) 14.2 Alarm Reports 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 14.1.5 Close 14.1.6 Tags 14.1.7 Preview Alarm 14.1.8 Handle Alarm (Alarm Viewer) 14.2 Alarm Reports 14.2.1 Copy and Paste 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 14.1.5 Close 14.1.6 Tags 14.1.7 Preview Alarm 14.1.8 Handle Alarm (Alarm Viewer) 14.2 Alarm Reports 14.2.1 Copy and Paste 14.2.2 Further Options (Alarm List and Alarm Summary) 	
 14.1 Open Alarms 14.1.1 Quick Actions 14.1.2 Open Alarms Tab Viewing Options 14.1.3 Filters Panel 14.1.3 Filters Panel 14.1.4 Assign to Me 14.1.5 Close 14.1.6 Tags 14.1.6 Tags 14.1.7 Preview Alarm 14.1.8 Handle Alarm (Alarm Viewer) 14.2 Alarm Reports 14.2.1 Copy and Paste 14.2.2 Further Options (Alarm List and Alarm Summary) 14.2.3 Alarm List 	

While Cathexis has made every effort to ensure the accuracy of this document, there is no guarantee of accuracy, neither explicit nor implied. Specifications are subject to change without notice.




1. Introduction

This *CathexisVision Carbon 6 Manual* explains the installation, configuration and operating procedures of the Carbon 6 user interface. Carbon can be used to access:

- I a single site (a single CathexisVision site installation)
- multiple sites (a CathexisVision Multisite installation)
- multiple sites (a CathexisVision Enterprise installation)

1.1 Resources and System Components

The diagram below illustrates the basic components of Carbon, CathexisVision sites, Enterprise servers, MultiSite servers, and the CathexisVision Mobile app.

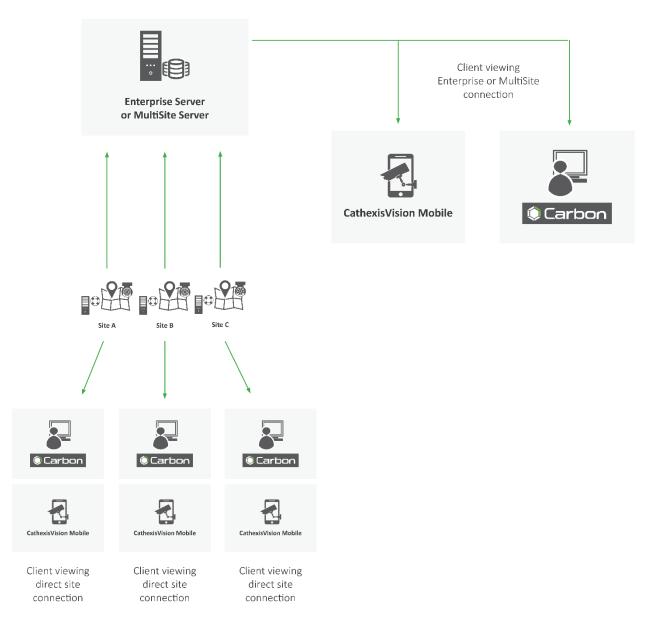

For more information about Carbon, CathexisVision Mobile app, or MultiSite and Enterprise products, consult the following documents, available on the Cathexis website (<u>http://cathexisvideo.com/</u>):

- Carbon Suite 6 Release Notes
- Carbon 6 White Paper
- Carbon 6 Quick Start Guides
- CathexisVision MultiSite 6 Installation Guide
- CathexisVision Enterprise 6 Installation Guide
- CathexisVision Mobile 6 App-note
- CathexisVision Mobile 6 Quick Guide
- CathexisVision Mobile 6 White Paper

Consult the CathexisVision Setup Manual for information on setting up CathexisVision.

1.2 Supported Languages

- English,
- Croatian*,
- French*,
- German,
- Italian*,
- Portuguese*,
- Russian,
- Spanish*,
- Ukrainian*.
- *Note:
 - These languages are supported in Carbon 4.2 and later.
 - Full translation support is offered in Carbon 6.2.

1.3 Requirements and Specifications

1.3.1 General Requirements

- Windows 10 and later; Windows Server 2019 and later.
- Minimum 8GB of RAM required.



1.3.2 Product Interoperability

The table below shows the Carbon's interoperability with other CathexisVision products.

	Carbon		
	4	5	6
CathexisVision 2022	Ø	0	0
CathexisVision 2023	Ø	Ø	0
CathexisVision 2024	-	-	0
Enterprise 4	0	0	0
Enterprise 5	Ø	Ø	0
Enterprise 6	-	-	0
MultiSite 4	Ø	0	0
MultiSite 5	Ø	0	0
MultiSite 6	-	-	0

Supported - Not supported

1.3.3 License Requirements

License	Name	Description	
None	Carbon	Local sites must be licensed as per existing requirements.	

For information on MultiSite and Enterprise licensing requirements consult the *CathexisVision Software Product Description and Licensing* document. Download it from <u>https://cathexisvideo.com</u>.

1.3.4 Ports to Open

Open the following ports on an NVR site for incoming connections from Carbon, CathexisVision, or CathexisVision Mobile	NVR site	TCP 30010 to 30100
Open the following ports on an Enterprise/MultiSite to allow	MultiSite	TCP 28000 to 28019
incoming Carbon or site connections	Enterprise	TCP 28000 to 28029




1.4 Features and Abilities

The available features depend on the connection being made from the Carbon interface. For more information, consult the *CathexisVision Carbon 6 White Paper*.

1.5 Navigating This Document

Click the links below:

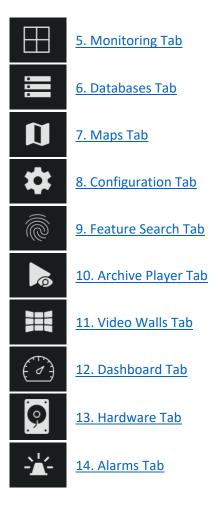





2. Install Carbon

Download the CathexisVision Carbon desktop installation software from the Cathexis website at https://downloads.cathexisvideo.com/ or contact Support at support@cathexisvideo.com/ or contact Support@cathexisvideo.com

Once the software has been downloaded on the required client unit, run the installation, which will present the setup wizard. Follow the steps below.

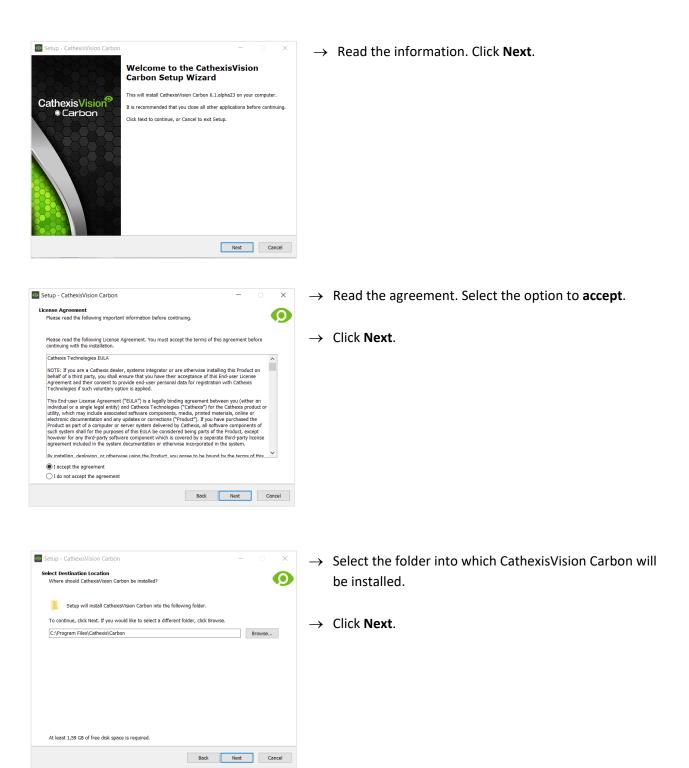



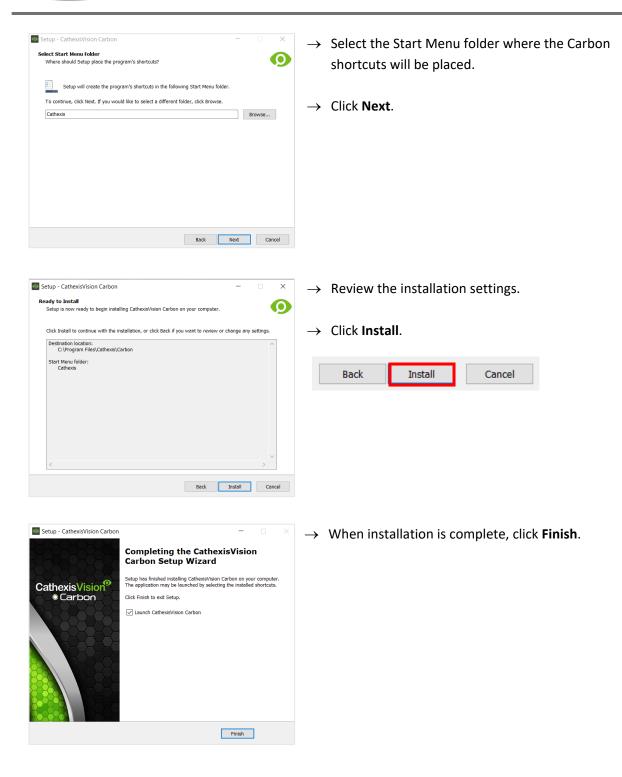




3. Add Accounts

This chapter covers how to add a new account type:

- <u>Site connection (3.2)</u>
- MultiSite connection (3.3)
- Enterprise connection (3.4)

3.1 Add a New Account Type (Initial Connection)

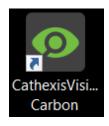

1. Open Carbon by double-clicking the desktop icon.

After opening the app for the first time, the new account type screen will open.

2. Choose an **Enterprise / MultiSite** or **Site** connection type. This will allow the user to add a new Enterprise, MultiSite or Site, and will take the user to the configuration screen.

3.2 Add a Site Connection

There are three types of site connections: <u>Standard</u>, <u>Discovery</u> or <u>Port Forward</u>. The table below describes the differences between them.

Connection	Description		
Standard	A Standard connection refers to a direct network connection, where the viewing station has a direct connection to the recording unit/s or site. Address: This is the IP address of the master unit.		
Discovery	A Discovery connection is to be used in the setup of a failover solution. If the site master is failed over and connection to the site master is lost, the client viewer can discover the IP address of the site master unit. This means that if the IP address of the site master changes, the client viewer will be able to rediscover the IP address and not lose its connection.		
Port Forward	Port forwarding allows a remote client viewer to connect to a site from outside the local area network. The router is configured to route the inbound client connection to the site master unit. The master unit thus acts as a proxy to reach all the servers that make up the site.		
	Address: This is the IP address/host name (FQDN) of the master unit.		



3.2.1 Add a Site: Standard Connection

.	New site	×
Name		
Connection	Standard	•
Address		
	Cancel	ОК

→ Type the site **Name** and **Address** supplied by the administrator.

(Address: This is the IP address of the master unit.)

- $\rightarrow\,$ Select the Standard connection type from the drop-down menu.
- \rightarrow Click **SAVE** (or **OK**, depending on whether this is an initial or subsequent login).

3.2.2 Add a Site: Discovery Connection


.	New site 🛛 🗙	\rightarrow	Enter the	site Name .
		\rightarrow	Click the C	Connection drop-down menu to see options.
Name		\rightarrow	Click Disco	overy. The bottom row will now say "Site ID".
Connection	Discovery	\rightarrow		field where the text reads "Get site ID". A new vill open ("Setup site discovery").
Site ID	Get site ID		\cap	This starts the process to fetch the Site ID
	Cancel OK		Ų	from the site master unit.
	Setup site discovery X	\rightarrow	Enter the	Site address, Login, and Password provided by
Site address	~	the administrator.		
Login	· ·			
Password	~	\rightarrow	Click Next	• The Site name and Site ID will be displayed.
	Next >> Cancel			
	Setup site discovery X	\rightarrow	Click OK .	
Name	Site A	The	e configure	d site information will be displayed.
Connection	Discovery -			
Site ID	4B80BDDC_5061817B	\rightarrow	Click OK .	
	CANCEL OK			



3.2.3 Add a Site: Port Forward Connection



In port forwarding, the master unit acts as a proxy to reach all servers that make up the site.

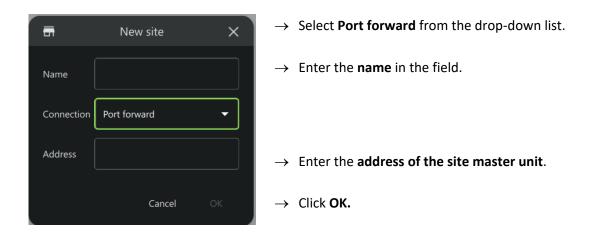

3.2.3 Add a Site: Subsequent Logins

Sites		
	Sites	۹ +
.	New site	×
Name		
Connection	Standard	-
Address		
	Cancel	ОК

- \rightarrow Click **Sites** on the menu at the top left-hand side.
- \rightarrow Click the **plus icon**. This will open the **New site** dialogue.

Follow the steps outlined above to add a new site connection:

3.2.1 Add a Site: Standard Connection

3.2.2 Add a Site: Disovery Connection

3.2.3 Add a Site: Port Forward Connection



3.3 Add a MultiSite Connection



Consult the *CathexisVision MultiSite Installation Guide* for more information on downloading and installing MultiSite.

Follow the steps below to:

- make the <u>first connection</u> to a MultiSite through Carbon
- Add CathexisVision sites to the MultiSite connection.

3.3.1 Configure MultiSite Connection



After opening Carbon for the first time, select the **Enterprise/MultiSite** connection type.



- \rightarrow Enter an **ID** for the MultiSite connection.
- \rightarrow Enter the **IP address** of the MultiSite server.
- \rightarrow Click SAVE.

The user may then log in to MultiSite.

3.3.1.1 MultiSite Login



 \rightarrow Enter the credentials for login and password supplied by the administrator.

Note: The default login for MultiSite is Username: admin Password: 123456

 \rightarrow Click SIGN IN.

3.3.2 Add a Site to MultiSite


To add a site (i.e. register a site with a MultiSite server):

- 1. The new site must be <u>added</u> to the MultiSite root domain.
- 2. The user must initiate a <u>token</u> from MultiSite.
- 3. This token must then be <u>entered</u> on CathexisVision client or server software.



3.3.2.1 Add New Site to Root Domain


In MultiSite, all sites are attached to the root domain.

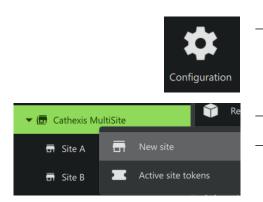

- \rightarrow Log in to MultiSite through Carbon.
- → From the Carbon home screen, click the Configuration icon to open a new tab.
- \rightarrow Right-click the root domain.
- $\rightarrow~$ Click **New site**. The **New site** dialogue will open.

3.3.2.2 New Site: Get Token

In the New site dialogue:

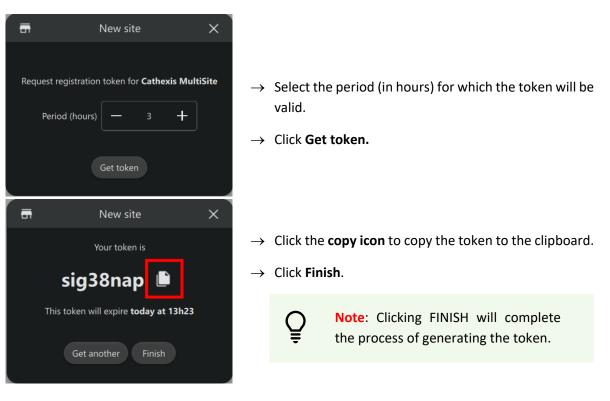



3.3.2.3 Connect CathexisVision Site to MultiSite

	Login Cogin Cogin Name Password OK Cancel Can		og in to the Cathex nterface.
Site Tools Settings Help			
Open tab Image: Close site's tabs Image: Change password Image: Change login	 Cameras Databases Map Setup 		lavigate to General ath: Site / Open tal
			Click the Enterprise menu on the left.
Enterprise/MultiSite			rom the Enterprise, lew under the Mult
This site is not registered with an enterprise MultiSite This site is not registered with any MultiSite			Note: Each s to a MultiSite name. If a site same name a site, an error
MultiSite address			administrator will ess . (This is the IP r.)
Go			nter the MultiSite a
		\rightarrow C	nter the token num lick Go . The option ccess for selected u
CathexisVision Finatic Multible access for selected users only admin U user1 U user2 U user3	? X	Ç	Enable MultiSi users only: If t the selected CathexisVision to the Cathexis Carbon (MultiS
Abort Beck	Next	\rightarrow If	choosing to enab


xisVision client or server

- al setup by following the b / Setup.
- e/MultiSite icon on the
- /MultiSite panel, click tiSite heading.

site that is connected e must have a unique e being added has the as a previously-added message will appear.

enter or provide the address of the MultiSite

- address.
- nber.
- to Enable MultiSite users will appear.

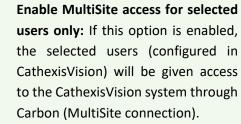

- ble MultiSite access for selected users only, check the box.
- \rightarrow Check the boxes to select users.
- \rightarrow Click **Next**. A window will open.





→ To confirm the site registration, click
 Confirm. A window will pop up, confirming registration.



The Enterprise/MultiSite management area will now show that the site has been registered and a connection has been established.

cathexis at addres	s 192.168.35.30 limited to admin	Deregister	Change address	Edit users	Connected
MultiSite re	gistration status: buttons				
Deregister	To deregister the site from the Multis	Site serve	r, click De	register.	
Change address	Click to change the address.				
Edit users	To edit users, click Edit users .				
Connected	The end of the row indicates the con	nection st	tatus.		

3.3.2.4 View Added Site in Carbon

Return to the Configuration tab of Carbon.



 \rightarrow Click the **refresh icon** at the top-right of the domain panel.

The newly-added site will appear in the folder tree.

3.3.2.5 Complete Configuration of Site Connection to MultiSite in Carbon



Note: Complete the configuration of the site's connection to a MultiSite in the Configuration tab of Carbon. See <u>8. Configuration Tab</u> for more information on using this tab.



→ Click Configuration to open a new tab from the home screen.

 \rightarrow Select the site in the Domains panel on the left.



Settings	→ Click the Settings tab in the configuration panel on the right. Under Settings, the user may edit the site's connection policy.
Connection policy Connect to 15 4	→ Click anywhere in the field. The options for editing will appear.
Connection policy Manual -	 → Connection policy: Choose between Manual and Auto. See table below for information on different connection types. Auto Manual
Address 154.117.154.82	→ Address (if Manual connection policy is selected): Enter the IP address.
Vert forward using default port -	→ Port forward using: Choose between default port and custom port.
8	\rightarrow Click the save icon to save changes.

Connection	Description – cases when connection type is used
Auto ^{Auto}	The MultiSite can determine the IP for the site by looking at the source address of the connection. Site \rightarrow provides IP to \rightarrow MultiSite (Carbon can get this IP)
Manual (port forwarding <i>– default port</i>) Manual	If the site sits behind a firewall, the details may be different. If the firewall has a single port opened and forwarded through to 30011 on the site, the operator can <i>enable port forwarding and use the</i> <i>default port</i> . Site \rightarrow Firewall \rightarrow different IP to site \rightarrow Manual port forwarding with default <i>port if configured on firewall</i> (30011 to 30011 on site)
Manual (port forwarding – custom port) Manual	If the site sits behind a firewall, the details may be different. If the firewall has a single port opened and forwarded through to 30011 on the site, the operator can <i>enable port forwarding and specify</i> <i>the port in the firewall which is being forwarded</i> . Site \rightarrow Firewall \rightarrow different IP and incoming port for site \rightarrow <i>Manual port</i> <i>forwarding with custom port</i> (custom port to 30011 on internal site)



3.4 Add an Enterprise Connection

Follow the steps below to make the first connection to an Enterprise and to add CathexisVision sites.



 \rightarrow After opening Carbon for the first time, choose **Enterprise / MultiSite**.

This will open a configuration dialogue.

3.4.1 Configure Enterprise Connection



- \rightarrow Enter an ID for the Enterprise connection.
- \rightarrow Enter the **IP address** of the Enterprise server.
- \rightarrow Click **SAVE**.

3.4.1.1 Enterprise Login

Start by logging in.

CathexisVision® © Carbon	→ Enter the credentials for login and password supplied by the administrator.		
 Durban Demo Site admin 		Ş	Note: The default login for Enterprise is Username: admin Password: 123456
Password	→ Click SIGN IN.		



3.4.2 Add a Site to Enterprise

Organise domains (groups) in Enterprise before adding or connecting a CathexisVision site to the Enterprise. This will provide the option to arrange sites in domains on the folder tree.


3.4.2.1 Add Domain



- → Click **Configuration** to open a new tab from the Carbon home screen.
- \rightarrow Right-click the **root folder** in the folder tree.
- \rightarrow Click **New Domain** to extend the tree structure.

3.4.2.2 Get Token


To add a site, a user must first initiate a token from Carbon.

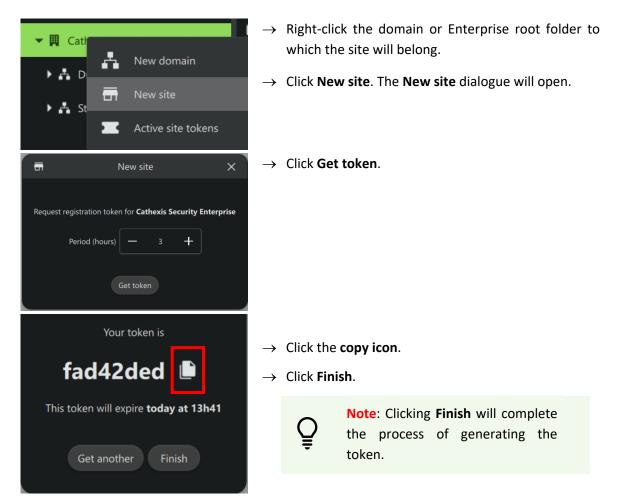



3.4.2.3 Connect a CathexisVision Site to Enterprise

The token must then be entered on CathexisVision client or server software.

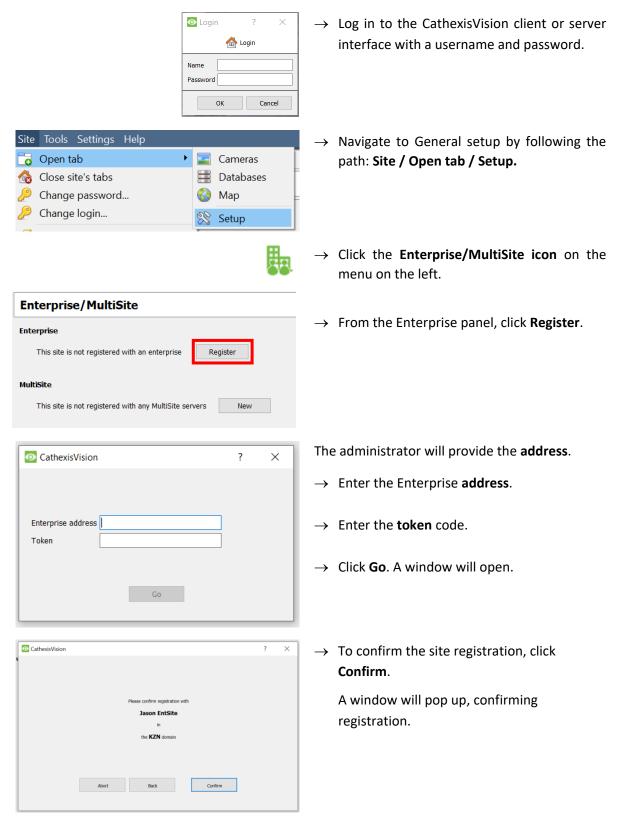



The Enterprise/MultiSite management area will now show that the site has been registered and a connection has been established.



	Enterprise/MultiSite		
2	Enterprise		
	This site is registered with Jason EntSite in the KZN domain at 192.168.33.187 Deregister Change address		
Ente	Enterprise registration status: buttons		
Deregister To deregister the site from the Enterprise server, click Deregister .			
Chang	Click to change the address.		

3.4.2.4 View Added Site in Carbon

Return to the Resources folder tree in the Configuration tab of Carbon. Once refreshed, the site will appear on the folder tree.




 \rightarrow Click the refresh icon at the top-right of the domain panel.

The newly-added site will appear in the folder tree.

3.4.2.5 Complete Configuration of Site Connection to Enterprise in Carbon


Note: The configuration of the site's connection to Enterprise will need to be completed in the Configuration tab of Carbon. See <u>8. Configuration Tab</u> for more information on using this tab.

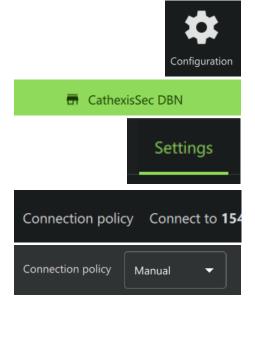

- → Click Configuration to open a new tab from the home screen.
- \rightarrow Select the **site** in the Domains panel on the left.
- → Click the Settings tab in the panel on the right. Under Settings, the user may edit the site's connection policy.
- $\rightarrow\,$ Click anywhere in the field. The options for editing will appear.
- → Connection policy: Choose between Manual and Auto. See table below for information on different connection types.





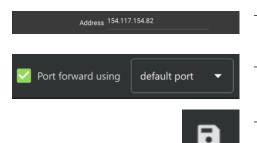

- → Address (if Manual connection policy is selected): Enter the IP address.
- → Port forward using: Choose between default port and custom port.
- \rightarrow Click the **save icon** to save changes.

Connection	Description – cases when connection type is used
Auto ^{Auto}	The Enterprise can determine the IP for the site by looking at the source address of the connection. Site \rightarrow provides IP to \rightarrow Enterprise (Carbon can get this IP)
Manual (port forwarding <i>– default port</i>) Manual	If the site sits behind a firewall, the details may be different. If the firewall has a single port opened and forwarded through to 30011 on the site, the operator can enable port forwarding and use the default port. Site \rightarrow Firewall \rightarrow different IP to site \rightarrow Manual port forwarding with default port if configured on firewall (30011 to 30011 on site)
Manual (port forwarding – custom port) Manual	If the site sits behind a firewall, the details may be different. If the firewall has a single port opened and forwarded through to 30011 on the site, the operator can enable port forwarding and specify the port in the firewall which is being forwarded. Site \rightarrow Firewall \rightarrow different IP and incoming port for site \rightarrow Manual port forwarding with custom port (custom port to 30011 on internal site)




4. General Interface



Double-click the icon to open CathexisVision Carbon.


4.1 Start Screen

Once Carbon has been opened, the start screen will display:

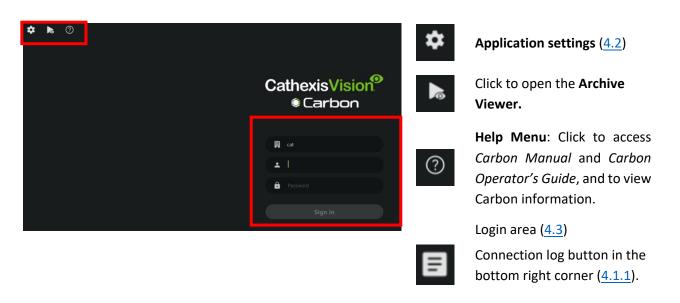


4.1.1 Connection Logs

→ Click the Connection log button to display information about the recent connections that have been made through Carbon.

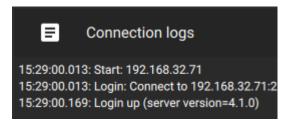

4.1.2 Updates (Enterprise Only)

Note: Updates are only available on Enterprise.

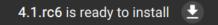

If updates are enabled, the link to download available updates will be shown at the top of the start screen.



4.2 Application Settings

D

Õ

•

Sites

Updates

Controllers

Advanced

Help

Enterprise/MultiSite

Note: It is not necessary to set up Carbon prior to logging in, but the operator may wish to configure updates or other settings.

 $\rightarrow\,$ Click the **gear icon** in the top-left corner. The window will switch to the following menu.

ightarrow To retur	n to the login screer	n, click the user icon.
--------------------	-----------------------	-------------------------

 $\rightarrow\,$ Click a menu item to open it. Each option is discussed in the sections below.


4.2.1 Enterprise/MultiSite (Edit Connection Properties)




- \rightarrow Click **Enterprise / MultiSite** in the application settings menu.
 - → Click the ID field to edit the name of the Enterprise connection.
 - \rightarrow Click the **save** icon.
 - → Click the Address field and edit the IP address.
 - \rightarrow Click the **save** icon.

4.2.2 Sites (Edit Connection Properties)

→ Click **Sites** in the application settings menu. Available site names and addresses will appear in the main panel in the right of the window.

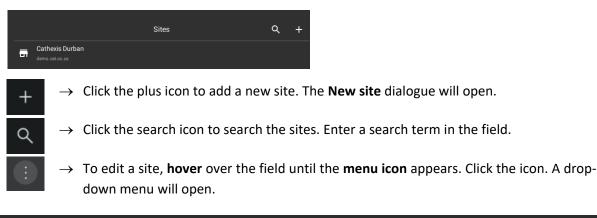



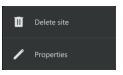

- \rightarrow Click **Delete site** to remove a site.
- → Select **Properties** to edit. A dialogue will open.


4.2.2.1 Properties



- → Change the Name and Address by re-entering details in the fields.
- \rightarrow Click **OK** to save changes.

4.2.3 Updates

→ Click **Updates** in the application settings menu. Options will appear in the main panel in the right of the window.

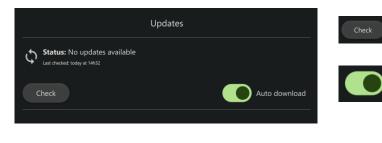

Click **Check** to see whether a new update is available.

Toggle the **Auto download** button to set up automatic downloads of updates, or to manage updates manually.

Note: When automatic downloads are selected, each update will need to be added to the Enterprise server manually by an administrator.

4.2.4 Controllers

→ Click **Controllers** in the application settings menu. Options will appear in the main panel in the right of the window.

Controllers	
Hardware controller None -	Apply
Enable control API	

- → Click the drop-down menu. Further options will open.
- \rightarrow Click **Cathexis KBD3000**.

None
Cathexis KBD3000



COM port	· 1 +
Backlight	
Key beep	
Show advanced	d settings
Pan gain	- 1.0 +
Tilt gain	- 1.0 +
Pan sensitivity	Medium 🔻
Tilt sensitivity	Medium 🔻
Pan dead zone	<u> </u>
Tilt dead zone	- 10 +
Zoom dead zone	- 10 +

- → Use the **add** and **subtract** buttons to set the COM port (communication port used to transmit data between the machine and the KBD3000).
- → Toggle the buttons to select whether the keyboard will be backlit, and whether key strokes will beep.
- → Check **Show advanced settings** to configure settings for the Cathexis KBD3000 keyboard joystick.

Pan gain	Pan gain is the multiplier applied to the pan input on the joystick.
Tilt gain	Tilt gain is the multiplier applied to the tilt input on the joystick.
Pan sensitivity	Pan sensitivity is the threshold over which the system responds to changes in a pan input on the joystick.
Tilt sensitivity	Tilt sensitivity is the threshold over which the system responds to changes in a tilt input on the joystick.
Pan dead zone	This is the minimum level of joystick movement from centred/rest before the system responds to a pan input.
Tilt dead zone	This is the minimum level of joystick movement from centred/rest before the system responds to a tilt input.
Zoom dead zone	This is the minimum level of joystick movement from centred/rest before the system responds to a zoom input.

Apply

 \rightarrow Click **Apply** to save changes.

4.2.4.1 Enable Control API

Enable control API

Carbon has an HTTP-based API that gives a third party some basic control over the user interface. For more information, consult the *CathexisVision Carbon API Implementation Guide* (only to be released under NDA).




4.2.5 Advanced

→ Click **Advanced** in the application settings menu. Advanced settings options will appear in the main panel in the right of the window.

Change Language	Click the drop-down menu to select a Language . Changes will save upon exit.
Change Window Count (Window count refers to the number of windows open on the desktop.)	 → To edit Window count, hover over the field until the edit icon appears, and click it. The field will become active. + → Use the plus and minus signs to increase or decrease the window count. → Then, click the save icon to keep changes.
Change Global Scale Factor (Global scale factor increases the size and appearance of the everything in the user interface. Increase by 1.25 will show the display at 125% of the standard size.)	 → To edit Global Scale factor, hover over the field until the edit icon appears, and click. The field will become active. + → Use the plus and minus signs to change the scale factor. → Then, click the save icon to keep changes. To increase the size of the timeline only, see <u>Global Settings.</u>
Administrator Access Settings	 → Toggle the switch on the Administrator access to enable this feature. This will allow only operating system administrators to be change settings. A dialogue will pop up asking permission for the app to make changes to device. → Click Yes to enable the administrator-only feature.
Prompt when quitting	Toggle the button to select whether a prompt should appear when quitting.

4.2.6 Help

→ Click **Help** in the application settings menu. Options will appear in the main panel in the right of the window.

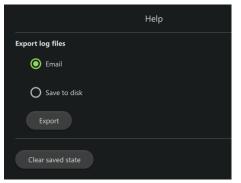

Select from options to

- Email log files or
- Save to disk.
- \rightarrow Click **Export**.

Use the **Clear saved state** button to reset the saved tabs from the previous session.



4.3 Log In

To log in:



- → If the additional field is displayed in the top row, click the field to open the Select connection dialogue. Then select the connection type.
- \rightarrow Enter the username
- \rightarrow Enter the password.
- \rightarrow Click **Sign in**.


â ·····
SIGN IN
Name lookup failed: Host not found

Note: If the **Name lookup failed** error message is received, there may be a problem with the internet or network **connection**.

Contact the system administrator to check the connection.

4.4 User Settings

After logging in, some user settings can be changed from the home screen. These settings modify how the interface is used.

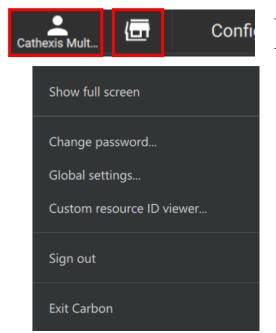

- \rightarrow Click the **user icon** to configure further settings.
- \rightarrow Click the **server icon** to check server details.

The further settings menu options are discussed in the sections below.




4.4.1 Further Settings: Change Password



- → Click Change password in the further settings menu. The Change password dialogue will open.
- \rightarrow Enter the new password settings.
- \rightarrow Click **OK**.

4.4.2 Further Settings: Global Settings

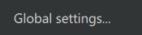

→ Click Global settings in the further settings menu to make global changes to the interface. The Global settings dialogue will open.

4.4.2.1 General Tab

Glo	bal settings		×
General Video			
Exclusive audio output mod	e		
Timeline snapshots			◉
Timeline size		Small	•
Monitor tab timeline mode	Always off		¥
Maximum tabs per window			10 🔹
Show motion in resource tre	e		
Intercom call notification		Video previe	w 👻

- → Click the cancel icon at any time to exit. This will save changes.
- → Toggle the switches to enable or disable features.
- → Click the drop-down menus to see more options. Then click to select.
- → Click the arrows to increase or decrease quantities.

Global Settings	Details
Exclusive audio output mode	This allows audio to play for only one camera at a time.
Timeline snapshots	This shows a thumbnail on the timeline of the footage when the mouse hovers over a point in time.
Timeline size	Change the size of the timeline when viewing or reviewing footage. Choose from: Small, Medium or Large.



Monitoring tab timeline mode	Choose to see the timeline in the Monitoring tab at certain times only, or at all times: Always on, Review only, Always off, Review on, or live auto.
Maximum tabs per window	This will change the total tabs that can be opened from the home screen, where 10 is the maximum.
Show motion in resource tree	An icon will indicate when there is motion on cameras listed in the resource tree.
Intercom call notification	If intercoms have been set up, select the intercom call notification: None, Ring, Popup, or Video preview.

4.4.2.2 Video Tab

G	ilobal settings		×
General Video			
Video smooth scaling			D
Video scaling mode		Area (best)	•
Video panel fill mode		Stretch to fit	•
Live auto stream mode		Dynamic	•
Dynamic stream scale			100%

Click the **cancel icon** at any time to **exit**. This will **save changes**.

Toggle the switches to enable or disable features.

Click the **drop-down menus** to see more options. Then click to select.

Drag the node to adjust the percentage.

Global Settings	Details
Video smooth scaling	This fits cameras into displays using a higher performance mode. It offers better picture quality and takes more processing power.
Video scaling mode	Choose between options for better video image quality or faster performance: Area (best) or Bilinear (fastest).
Video panel fill mode	Choose how the video feed fills the display panels: Normal, Crop to fit or Stretch to fit.
Live auto stream mode	Choose Dynamic, Highest resolution or Lowest resolution.
Dynamic stream scale	This percentage refers to the calculation used by the video subsystem to pick a stream that is appropriate for the display panel's resolution. For example, if a panel has a resolution of 600x400 pixels and the dynamic stream scale is set to 100%, the server will try to match the resolution of 600x400 as closely as possible. If this scale is set to 50%, the server will try to match a resolution of 300x200 pixels.

Note: For settings regarding resources, roles and permissions, see instructions in <u>8. Configuration Tab</u>.



4.4.3 Custom Resource ID Viewer

The **Custom Resource ID Viewer** shows the custom resource IDs that have been assigned to resources.

Note: Currently, custom resource IDs are only used for control of the Cathexis KBD3000 keyboard.

Custom resource ID viewer...

 \rightarrow Click **Custom resource ID viewer** in the further settings menu. The **Custom ID Viewer** will open.

Oustom ID Viewer			_		×
Select domain/site		G		Combine	e types
Select domain/site	\rightarrow Click the field. A dialogue will open.				
	\rightarrow Select a domain or site and click OK .				

The dialogue will show all resources that have been assigned a custom ID, used in the operation of the Cathexis KBD3000 keyboard.

4.4.3.1 Set Custom ID

Custom IDs must be set in the Configuration tab of Carbon. Refer to <u>Set Custom ID</u> for instructions.

4.4.4 Signing Out: Return to Menu

In order to sign in to another account, log out and return to the main menu. To do that:





- $\rightarrow\,$ Click the **user icon** at the top of the screen. A menu will open.
- → Click **Sign out.** The user will be logged out and returned to the **Sign in** screen.



4.5 Home Menu Tab



Navigate Carbon by opening tabs from the home menu. Tabs remain open during a session and will be saved automatically for the next session.

→ Click a menu item and it will open as a new tab. All open tabs can be viewed along the top of the screen.

4.5.1 Using Tabs

Add a new tab	 → Right-click on a tab. A menu will appear. → Click New tab. The Home Menu will open.
Rename tab	 → Alternatively, click the plus icon at the top of the screen. → Right-click on a tab. A menu will appear. → Select Rename tab to rename the selected tab.
Remove tab	 → Right-click on a tab. A menu will appear. → Select Remove tab to remove the selected tab.
Return to Home Menu tab	 → Right-click on a tab. A menu will appear. → Select Home to return to the Home Menu in the selected tab. → Alternatively, click the plus icon at the top of the screen. This will open a new home menu tab.
Close tab	\rightarrow Hover the mouse over the tab label until the cancel icon appears. Click the cancel icon to close the tab.

4.6 Fullscreen

To switch to a fullscreen view, press the F11 key. To switch out of fullscreen, press the F11 key.



4.7 Intercoms

It is possible to add an intercom to the CathexisVision NVR (2024 onward) using cameras that have audio inputs and outputs. Intercoms can then be monitored from the Carbon client interface.

When adding an intercom to the NVR, select the following NVR resources:

- A camera with an audio I/O
- A **button/input** for the call button
- A relay output resource (for example, a switch to control a gate)

Selecting the above resources together will create an intercom.

4.7.1 Add Intercom in CathexisVision

Open CathexisVision and follow the path: Site / Open tab / Setup / Configure servers / Intercoms

New \rightarrow Click New. The New intercom window will open.		
New intercom	\rightarrow Enter a name for the new intercom.	
	\rightarrow Select a camera.	
Name Camera Axis intercom	\rightarrow Click Add to select an input.	
Inputs Remove Add	 Note: Consult the relevant camera manufacturer's documentation to check if further configuration is required to connect an input or output to the camera. → Click Add to select an output. 	
OK Cancel Oc Team Test Axis intercom Axis intercom button Intercom output	→ Click OK to save changes. The intercom will be displayed in the list of intercoms in CathexisVision. It will be also be available to select in the Carbon UI.	

Before adding an intercom to a user in Carbon, that user must first be granted permission to interact with the intercom. This must be done in the Configuration tab of Carbon.

Note: Administrator users for sites will have access to intercom resources automatically.

Configuration tab / Users / Right-click user name / Properties / Permissions / Intercom channels / Add channel




4.7.2 Add Intercom in Carbon

Return to Carbon and log in to the NVR installation where the intercom has been added.

For a Carbon user to use an intercom, it is necessary to add the intercom in Carbon for that user.



- \rightarrow Click the intercom icon in the top-right corner of the interface. The Active intercoms popup will open.
- \rightarrow Click the plus icon. The **Add intercom** dialogue will open.

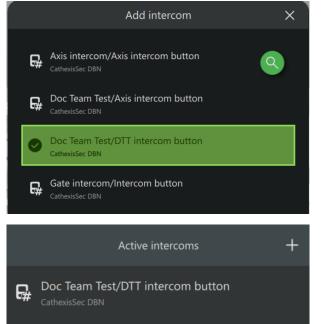


- \rightarrow Select an intercom.
- \rightarrow Click **OK** to save changes.

The intercom will appear in the list of active intercoms connected to the Carbon user.

4.7.3 Open Intercom/Make a Call in Carbon

To call the intercom:

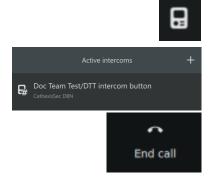

 \rightarrow Click the intercom icon in the top-right corner of the interface. The Active intercoms pop-up will open.

 \rightarrow Double-click the intercom name. The intercom window will open and the intercom will be called.

 \rightarrow Click **End call** to end the call.



4.7.4 Receive a Call in Carbon

Once a Carbon user has been connected to an intercom, the user will receive notifications from that intercom through the Carbon UI (when a call is received).



- \rightarrow To accept the call, click **Accept**.
- \rightarrow To reject the call, click **Reject**.

Note: Intercom previews will be displayed on incoming calls if this type of intercom notification has been set up in Carbon's Global settings.

(Log in to Carbon / Click User / Global settings / General tab / Intercom call notification)

→ Click the intercom output button to toggle the relay output.

> (For example, a relay output could be toggled to open a gate, once the operator has spoken to the individual who called the intercom.)



5. Monitoring Tab

The Monitoring tab is where cameras and resources and can be viewed, reviewed, searched, and archived.



From the home menu, click the Monitoring icon to create a new Monitoring tab.

5.1 Monitoring Tab at a Glance



	Description
1	Click the arrows on the left and right to move between Resources , Bookmarks , Layouts , and Cameras with Activity . Alternatively, click on the name to display a drop-down menu.
2	Click to view saved layouts and resources.
3	Click the user icon to configure Global settings, Show full screen, Sign out, or Exit Carbon.
4	Click the site/installation icon to view server details.
5	The selected tab will be highlighted in green.
6	Click to select a template , open the template editor, or remove a template.
7	Click to switch all feeds to live, review all live feeds, pause/resume all feeds, or clear panels.
8	Click to open the Archive builder .
9	Click to open Bookmarks.
10	Click to add a layout .
11	Click to send/cast a layout to a monitor.
12	Click to open Event black screen monitor.
13	Click to open Alarm black screen monitor.
14	Click to make the monitor panels full screen.
15	Intercom button
16	Monitoring Tab Settings Menu
17	Camera Panel Display



5.2 The Resource Folder Tree

Navigate the folder tree on the left sidebar to access resources.

5.2.1 Using the Folder Tree

Resources	\rightarrow Click Resources to expand the drawer.
Cathexis Security Enterprise	→ To expand the folders in the resource tree, click the arrows next to the folder names.
	Resource icons indicate the type of resources.
	Cameras
	PTZ cameras
	Maps
	Event groups
Standard view	→ Click the search icon to search resources. The type a term in the search bar that opens.
Standard view	ightarrow Click the arrow to select Standard or Server view.
	Standard view lists resources by resource type.




This icon appearing at the end of a camera name indicates that motion is detected in that camera's view.

Server view lists resources according to NVR.

A red camera or icon indicate the resource is offline.

5.2.2 Resource View Editor


The **Resource view editor** allows the operator to customise the resource folder tree. There are two ways to open the Resource View Editor:

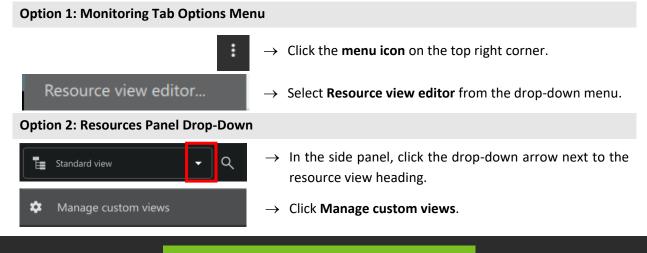



5.2.2.1 Create a Custom Resource View

The options presented in the **Resource view editor** depend on whether a custom resource view has been created already.

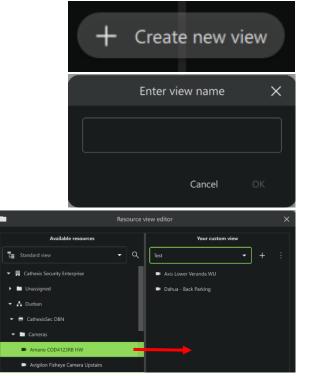


Add a folder to a custom view

- → Either click Create new view or click the plus icon (+) in the right panel of the Resource view editor.
- \rightarrow Enter a name for the custom resource view.
- \rightarrow Click **OK**.
- → Click+drag resources from the folder tree on the left into the custom view panel on the right.
- \rightarrow Shift+click to select multiple resources.

Changes will save on exit.

 \rightarrow Right-click in the right panel in the Add new folder Resource view editor. \rightarrow Click Add new folder. Add resources \rightarrow Enter a name for the folder. Enter folder name \times \rightarrow Click **OK**. Cancel \rightarrow Click+drag resources from the folder tree on the left into the folder on the right. \rightarrow Shift+click to select multiple resources. \rightarrow Alternatively, hover the mouse over the Test2402 Ш folder. Click the add resource icon. The Add resources dialogue will open. \rightarrow Select resources from the list. \rightarrow Click OK.



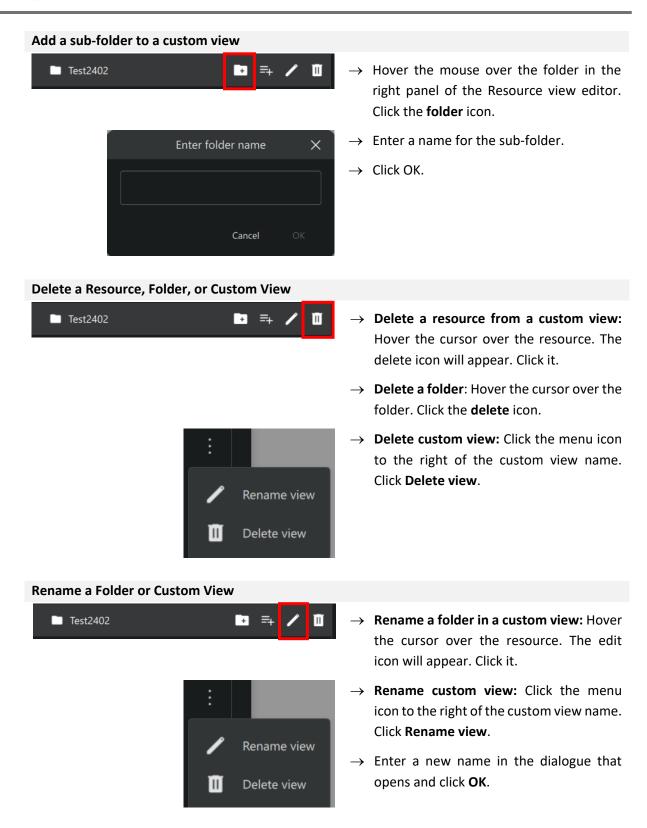

5.2.2.2 View Custom Resource View

To change from standard view to a customised view of the folder tree, return to the side panel of the Monitoring tab main screen.


Standard view	•	۹

- \rightarrow In the left side panel, click the drop-down arrow next to the resource view heading.
- \rightarrow Click the custom view to select it.



5.3 Monitoring Tab Settings Menu


Settings in the Monitoring Tab can be changed to allow operators to view stream information, statistics, and adjacent cameras as overlays. Timeline mode and side panels can also be adjusted. Live streaming statistics are available.

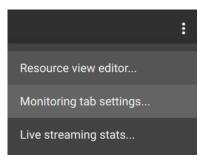

- → Click the **menu icon** (kebab) in the top-right corner. The drop-down menu will open.
- \rightarrow Click Resource view editor, Monitoring tab settings or Live streaming stats.

Note: See <u>Resource View Editor</u>.

5.3.1 Monitoring Tab Settings

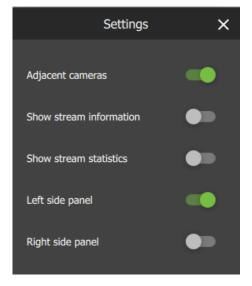

A new dialogue box will appear.

- \rightarrow **Toggle** the switches to enable or disable settings.
- Disabling Adjacent cameras will mean that clickable overlays/arrows to indicate nearby cameras will not display on videos.
- For examples of stream information and stream statistics, see below.
- **Side panels** are identical and show Resources, Layouts, Bookmarks, and Cameras with Activity.

Tip: A second side panel is useful for using the Cameras with Activity feature while monitoring (see <u>Monitoring Using the</u> <u>Side Panel</u>).

5.3.2 Live Streaming Statistics

Select **Live streaming statistics** as shown above. In the dialogue that opens, the Cameras tab will show statistics about the cameras currently displayed in the Monitoring tab.



In the dialogue that opens, the **Cameras** tab will show statistics about the cameras currently displayed in the Monitoring tab.

In the dialogue that opens, the **Decoder Threads** tab will show statistics about the cameras currently displayed in the Monitoring tab.

Õ

The decoder threads section shows statistics for the parallel video decoder processing threads. These threads allow multiple video decodes to take place simultaneously, yielding improved performance at the cost of extra load on the CPU.



5.4 Templates


Select from various templates, or customise a display by modifying the shape, size, and number of panels. Once a template has been saved, multiple resources can be added to it, and saved, to create a **layout**.

5.4.1 Choose a Template




- \rightarrow To choose a **standard display**, click **Templates** at the top of the screen.
- \rightarrow Then click a template to select it.

5.4.2 Template Editor: Create a Template

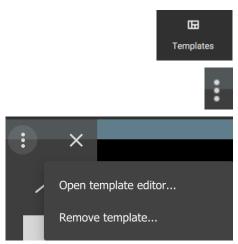


- $\rightarrow~$ Click the Templates icon at the top of the screen.
- \rightarrow Click the **menu icon** on the top left of the drop-down display.
- → Click **Open template editor**. The Template Editor will open.

Templat	te Editor	-	×
	Add panel		

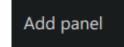


12x12

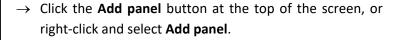

- → Use the **resize tool** to increase or decrease the dimensions of the panels.
- $\rightarrow~$ Click and drag panels to arrange.



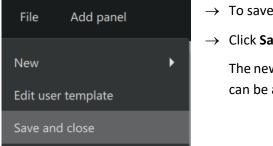


- \rightarrow To save the template, click the **File** button.
- \rightarrow Click Save and close.

The new template will be listed in the saved templates and can be access by clicking the **Templates** button.

5.4.3 Remove Template

To remove or delete a template:

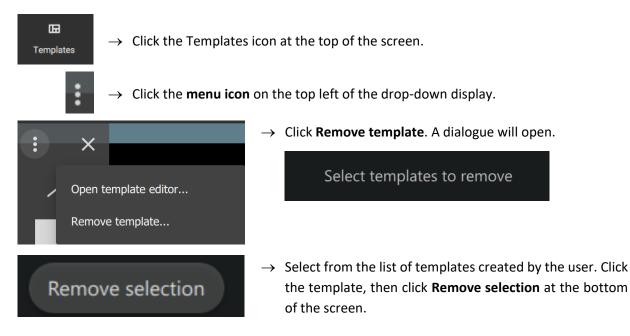

5.4.5 Change Template While Viewing Cameras

It is possible to change the format of a display during viewing, if more or fewer cameras are required.



- $\rightarrow\,$ Click the Templates icon at the top of the screen. The saved templates will drop down.
- \rightarrow Click a new template to select it.


The feeds will rearrange within the new template automatically.




5.5 Layouts


Resources can be added to a template and saved to create a layout.

5.5.1 Create Layout

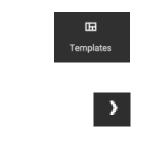

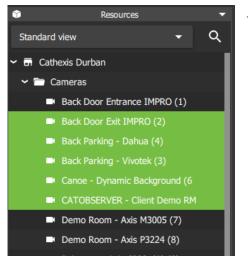

Add layout

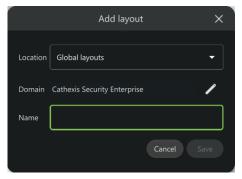

- → To choose a **standard display**, click **Templates** at the top of the screen.
- $\rightarrow~$ Then click a template to select it.
- → Then, in the Resources panel on the left, click the arrows next to the resource folders to view lists of individual resources.
- → Drag and drop from the Cameras list onto the display panel.

Note: Match the camera view to the appropriate display panel. (The size and shape of the display may be different depending on the type of camera.)

A user may **select and drag** multiple items at once. To select multiple resources:

- **Ctrl + Click** Hold down Control, and click non-consecutive (separate) items to include.
- Shift + Click Hold down Shift, and click the first and last item in a list of consecutive items (next to each other). This will include all resources between the first and last clicked item.
- → Click the Add layout button at the top of the screen. The Add layout dialogue will open.
- \rightarrow Select the location of the new layout and its domain.


Note: Global layouts are visible to other users using the Carbon GUI or CathexisVision Mobile. They are not compatible with the CathexisVision GUI. **My layouts** will only be available to the user who created them. Any layout created using Carbon or CathexisVision Mobile will be available in both the Carbon desktop and CathexisVision Mobile app.

- \rightarrow Enter a name for the new layout.
- \rightarrow Click **Save**.



5.5.2 Locate Saved Layout

There are two ways of locating a saved layout.

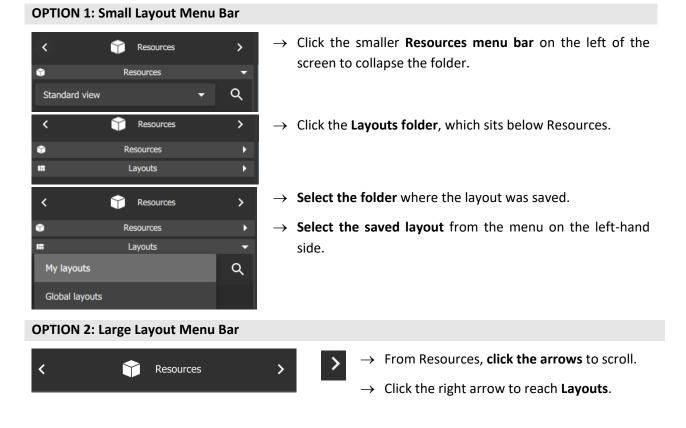

5.5.3 Overwrite Layout

It is possible to change the resources at any time and save over the existing file. To save changes:

panel.

Overwrite	ightarrow Go to the Layouts menu on the left-hand panel	
	\rightarrow Right-click the file/layout name.	
	\rightarrow Select Overwrite from the drop-down menu.	

 \rightarrow Click OK.

5.5.4 Rename or Delete Layout

Rename Delete	 → To rename a layout, right-click the layout name. → Click Rename. 		
Overwrite	Rename layout × Test Interior Cameras In the dialogue that opens, enter the new name for the layout. CANCEL OK		
Delete	 → To delete a layout, right-click the layout name. → Click Delete. 		

5.6 Auto Layout and Auto Add Selection

The **Auto layout** and **Auto add selection** tools adapt the display to fit the number of cameras that are added.

Auto layout	Auto layout will replace an existing display with a layout of the selected cameras. Panels containing video will be replaced.
Auto add selection	Auto add selection will add the selected cameras into available panels.


5.6.1 Auto Layout: Add Cameras

Begin with any template or display.

Back Door Entrance IMPRO (1) Back Door Exit IMPRO (2) Back Parking - Dahua (4)	 → Select cameras from the resource panel on the left. To select multiple cameras: Ctrl + Click Hold down Control, and click non-consecutive (separate) items to include. 	
Back Parking - Vivotek (3) Canoe - Dynamic Background (6		
	Shift + Click	Hold down Shift, and click the first and last item in a list of consecutive items. This will include all resources between the first and last clicked item.
Auto layout selection	\rightarrow Right-click on	e of the selected cameras.
	→ Click Auto lay on the right.	yout selection. The cameras will open in the display

5.6.2 Auto Layout: Add Camera Group

For existing camera groups, the auto layout feature places the cameras in display panels in a suitable format. There are two ways of adding a camera group to the display using auto layout.

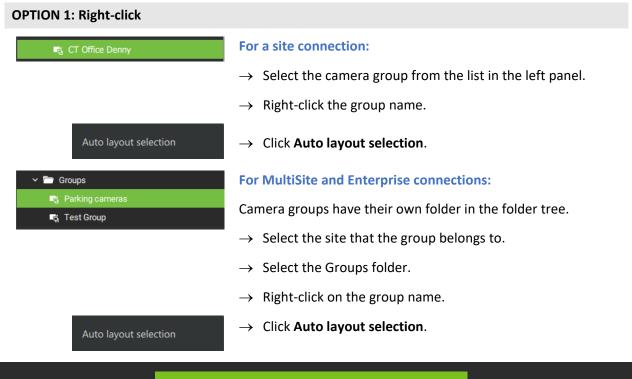



OPTION 2: Drag and Drop	
न्द्र CT Office Denny	For a site connection:
	\rightarrow Select the camera group from the list in the folder tree on the left.
	ightarrow Drag the item from the list into any display panel on the right side.
🗸 🛅 Groups	For MultiSite and Enterprise connections:
	→ Follow the same process for an Enterprise connection. However, first locate the Groups folder in the folder tree, then select the group.

Note: Camera groups can be created in the Configuration tab.

5.6.3 Auto Add Selection

Auto add selection

- \rightarrow After selecting multiple cameras, right-click.
- → Click Auto add selection. The selected cameras will be added into available panels.


5.7 Event Black Screen Monitoring (BSM)

When Black screen monitoring (BSM) is used, only cameras which generate alarm signals will activate footage in monitors. BSM allows video to be sent to a monitoring panel only when events are detected.

Ĝ

Note: Details of events may be viewed from the Database tab in Carbon, but configuration and setup must be managed from the CathexisVision client interface.

5.7.1 Add Cameras to BSM

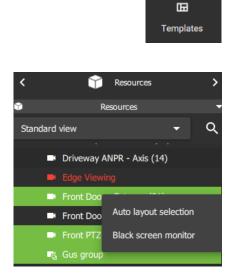

- \rightarrow Choose a suitable template or use a single display.
- \rightarrow Select a destination display panel by clicking anywhere within the panel.

To select multiple resources:

Ctrl + Click	Hold down Control, and click non-consecutive		
	(separate) items to include.		
Shift + Click	Hold down Shift, and click the first and last		

item in a list of consecutive items.


- \rightarrow Right-click one of the selected cameras.
- → Click **Black screen monitor**. All selected cameras will display in the selected display panel, when there is an event.

5.7.1.1 Open BSM Cameras (Live Mode) in Other Display Panels

After BMS cameras have been added to a display panel, it is then possible to open one of those cameras in live mode in another panel. Left-click a camera, and drag and drop into the empty display.

CATHEXIS

5.7.2 Add VMS Events and Event Groups to BSM

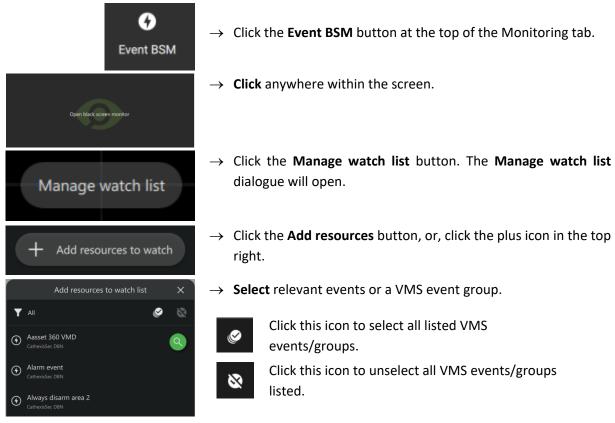

 \rightarrow Click **OK** to add resources to the watch list.

Note: If a recently created event group does not appear in the list, check Resource group permissions in the **Configuration tab** to see access details.

5.7.2 BSM Settings



Click this icon to expand the black screen monitoring panel.

Click this icon to restore the black screen monitoring panel to its previous size.



Click the **cancel icon** to ignore the camera. This will hide the camera.



Click the lock icon to lock the cameras on screen, so that video footage will show in the black screen monitor panel without being triggered by an event.



Click the closed lock icon to **unlock** the camera, and return to default. The camera will only appear when triggered by an event.



The clock face is a visual depiction of the remaining time the footage will display after the event, indicating the amount of time left since the alarm was triggered. Adjust expiry time and minimum display time to change the length of time.



5.7.2.1 Right-click BSM Menu Options

Settings	\rightarrow Right-click a BSM display panel. A drop-down menu will open.	
Manage watch list	- Settings,	
Reset ignored cameras	- Manage watch list,	
Manage ignored cameras	- Reset ignored cameras (if applicable),	
	- Manage ignored cameras (if applicable), and	
Send to monitor	- Send to monitor.	

Settings

Click Settings to configure black screen monitor settings.


Black screen monitor :	Black screen monitor settings			
Panel size	Medium	•		
Expiry time (seconds)		+		
Minimum display time (seconds)		+		
		Close		

- \rightarrow Adjust **Panel size** using the drop-down menu.
- \rightarrow Adjust Expiry Time.

Expiry time is the length of time the camera remains displayed in the monitor after no further activity.

 \rightarrow Adjust **minimum display time** (seconds) using plus and minus buttons.

Minimum display time is a minimum length of time for all clips to be displayed.

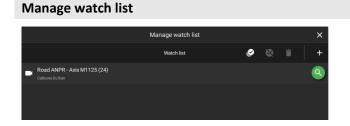

Click **Manage watch list** to add resources to or delete resources from a watch list.



Send to monitor



- → Click Send to monitor to send the layout being viewed to an available site monitor. Any appropriate monitors will be shown.
- → Click the desired site monitor to which to send the layout/display.

Note: Only cameras on the same local site as the site monitor may be displayed on the site monitor.

For more on the site monitor, see <u>Controlling the Site</u> Monitor from the Monitoring Tab.

 \rightarrow Click **Close** to finish.



5.8 Viewing and Reviewing Cameras

Users may view live camera feeds and review recorded footage at the same time using display panels.


- Live mode allows the user to view a camera in *real time*.
- Review mode allows recorded video to be searched, tagged, bookmarked, and archived.

5.8.1 Camera Panel Display

Cameras will display according to the chosen saved layout, or template as selected. Cameras can be added and removed at any time. Live and review modes can be viewed simultaneously as illustrated below.




This icon indicates that there is packet loss on the camera.

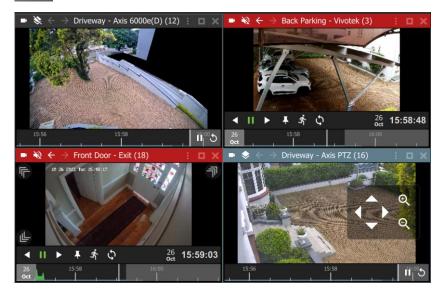

Top Bar

The top bar indicates mode by colour, and can be used to access menu items, overlays, sound settings, or to enlarge a display panel. See the diagram below for details.

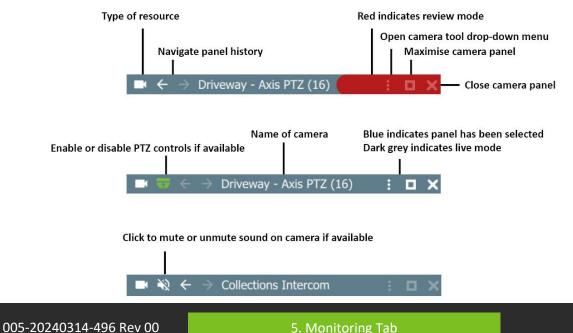



Top Bar Colours

■ ← → 4 - Parking View Site B	: 🗆 X	Review mode	Not selected
$lacksquare$ \leftrightarrow $$ 1 - Undercover Parking Site B	: o x	Live mode	Not selected
🖿 🗲 \Rightarrow 4 - Parking View Site B	: 🗆 X	Review mode	Selected
$igsquire$ \leftrightarrow $ ightarrow$ 1 - Undercover Parking Site B	: - x	Live mode	Selected
Note: For an Enterprise or MultiSite		$ullet$ \leftrightarrow $ o$ Back Parking - Viv	otek (3 Cathexis Durban 🕴 🗆 🗙
connection, the top bar will also indicate which site the camera is from:		$ullet \leftarrow o$ Board Roon Cath	exis Africa Centurion 🤅 🗖 🗙

Top Bar Icons

- \rightarrow Click to view further options. See <u>Review Tools</u> for details on the review panel review tools.
- $\rightarrow~$ Click to minimise/maximise the panel.
- \rightarrow Click to close the camera.
- \rightarrow Click to toggle **Activity trails**.


Timeline

The timeline bar underneath the camera feed represents chronological time, and is interactive for searching in review mode.



Live mode

In live mode, the timelines in the view screens will move in real time.

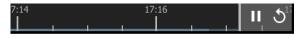




Click Pause live icon to hold an image in place.

Click the Skip icon to skip back five seconds.

Review Mode

In review mode, the timeline can be used to search footage by scrolling left and right. The timeline indicates the ongoing live recording, by showing future time in grey as depicted below.

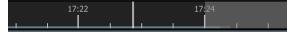



Timeline Key


	The thin blue line at the bottom of the bar indicates that there are recordings available (non-event recording).
	No blue line indicates no recordings. No blue line may indicate that a connection is down. Use the dashboard tab to view status.
	The grey area at the end of the timeline represents future time.
	The vertical bar indicates the end of the timeline in live mode, and corresponds with present time.
12:03:00	A red line indicates event recording.
	The green graph indicates motion. More motion is depicted by a higher crest.

Rearranging Cameras in Display Panels

To move a camera from one display panel to another:

- → Click the bar on top of the display panel; hold down; drag into an empty display panel. A thin white square around the frame will indicate the placement.
- \rightarrow Then release the mouse to drop the camera into the panel.
- \rightarrow To move cameras between displays (swap them), click the menu bar at the top of a thumbnail.
- ightarrow Then, hold down the mouse to drag and drop onto any other display panel.

5.8.1.1 Actions

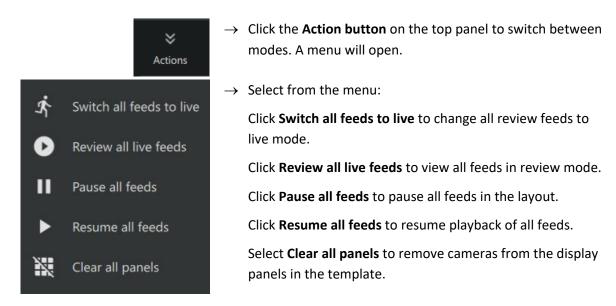

Alternatively, to switch a selected camera from live to review mode, double-click the timeline. The review controls will appear.



Click the live icon in the review controls to return to live mode.




5.8.1.2 Zoom in or Out on Timeline to Adjust Time Frame

- The time frame, represented by the timeline bar, can be adjusted ranging from days to seconds.
- The zoom in/zoom out function is available on a mouse with a scroll tool.

First, click on the timeline to select.


Note: If the display panel is selected, rather than the timeline, using the scroll tool on the mouse will enlarge or reduce the scale of the image in the display.

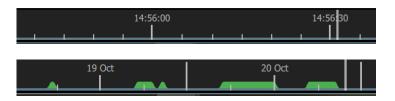

Narrow the time frame (zoom in) by **scrolling up** with the wheel.

Widen the time frame (zoom out) by scrolling down with wheel.

5.8.1.3 Date and Time Pop-up on Timeline

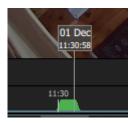

Hover over a point in the timeline to see the date and exact time. A pop-up will appear.

Click to **skip** to the date and time indicated by the pop-up.

5.8.2 Zoom and PTZ

5.8.2.1 Digital Zoom on any Camera

It is possible to zoom in on any camera using digital zoom. Alternatively, to zoom in by controlling a PTZ camera, see the instructions in the next section: <u>PTZ Control Using PTZ Overlay</u>.



To zoom in digitally, click on an area in the display e.g. the top right corner.

Then, use the scroll tool on the mouse to zoom in on the selected area. An *orange dot* will indicate the centre of the zoom area.

The relative position within the video will be indicated in green in the bottom left of the frame.



Click the cancel icon the return the monitor to its original view. Alternatively, scroll back on the mouse.



5.8.2.2 PTZ Control Using PTZ Overlay

If a Pan-Tilt-Zoom camera is added to the display, it may be possible to control the camera remotely (depending on user permissions). This subsection shows how to use the PTZ controls that appear in the main display. For information about how to use the PTZ menu bar that appears on the left-hand side, see <u>PTZ Menu</u>.

Note: PTZ overlays only function in live mode, and only on PTZ cameras.

To enable PTZ control:

OPTION 1: Overlay Icon



→ Click the **overlay icon** on the top menu bar in the display panel. The icon will turn green when overlays are enabled and the PTZ control overlay will appear in the main display.


OPTION 2: Right-click

- → Right-click a display panel to see the drop-down (context) menu. Note: For a full breakdown of all options in this menu, see Camera Tools Menu.
- \rightarrow Click the **PTZ** checkbox.



Note: This function will only be available if the camera on the selected display has pan-tilt-zoom capability.

Using PTZ Controls

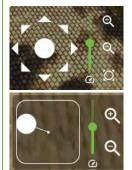

To change the direction of the camera, **single click** the arrows, or, use a **long hold** on the arrows.

Pull the central control like a joystick to move the direction of the camera.



To zoom in or zoom out, single click or use a long hold.

On smaller displays, a limited control tool is available, as shown in the image on the left.

5.8.2.3 Area Zoom an Axis or Dahua PTZ Camera

The area zoom tool is a quick way to control the camera so that the user can zoom in on a specific area.

- Instead of using the controls, and manually adjusting the camera, it is possible to draw a frame around the area on the display on Axis PTZ cameras.
- Note: This feature is only available on Axis and Dahua PTZ cameras.
- This feature will only be available if the user/role has PTZ permissions.





PTZ overlay must be **enabled**.

The display must be in **live mode**.

- → While holding down Shift, draw a frame around the zoom area.
- → Release, and wait a few moments for the camera to zoom in on the selected area.

Once zoomed in, this process can be repeated to zoom in closer until the camera has reached its maximum zoom range.

Note: The scroll tool may also be used for *digital* zoom.

5.8.3 Adjacent Camera Mapping

The adjacent cameras feature allows operators to navigate quickly between cameras.

- This feature can be used to follow a person in **real-time** using linked cameras.
- Adjacent cameras can also be used in review mode to track an incident, for example, an intruder or object moving around a property.



Adjacent cameras appear over the camera image as **a double arrow** with a label in the direction of the camera, as configured in CathexisVision by the site administrator.



An orange adjacent camera arrow indicates motion has been detected in the adjacent camera's field.




Hover the mouse over the display to show arrows and labels. **Click the arrows** to view the nearby camera in the direction an object is moving.

Tip: Use adjacent tracking in combination with tagging and archiving features to save a sequence. For step-by-step instructions see <u>Archiving</u>.

5.8.3.1 Open Adjacent Cameras in a New Display Panel Using a Middle-Click

To open adjacent cameras in a new display panel, first choose a template or layout with space for additional display panels.

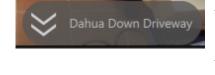

- Place Dahua Down Driveway
- → Hover over the adjacent camera arrow. The name of the camera will appear.
- → Middle-click on the arrows. Use a middle button on the mouse or click with the scroll tool. The panels will become greyed out, and the Place instruction will appear, along with the name of the adjacent camera.
- → Left-click a display panel. This will place the selected adjacent camera in the *new display panel*. (Note: Simply clicking on the adjacent camera icon would cause it to replace the stream shown in the original display panel.)



5.8.4 Camera Tools Menu

There are two ways to access the drop-down camera tools menu.

OPTION 1: MENU ICON



From the camera panel, select the inset menu icon on the right-hand side.

OPTION 2: RIGHT-CLICK (CONTEXT MENU)

 $\rightarrow~$ Right-click within a display panel. The drop-down (context) menu will appear.

Option	Description		
Copy link	Create a link. Once this has been selected, the link can be pasted into another display panel. Note: Once the link has been copied, the option to paste the link remains in the menu.		
Send to monitor	Send the can	nera stream being viewed/displayed to a site monitor.	
Switch to review	This allows s	witching back and forth between live and review footage.	
Start sync review	This allows s adding anoth	simultaneous (synchronized) review, by selecting one display then ner.	
Pause/ Unpause	This stops or with limited	starts streaming both live and review feeds. Use this for connections data.	
Export snapshot	Open a window to print snapshot, save to folder, copy to system clipboard, or copy to clipboard.		
Archive	Save and export a video segment.		
Add bookmark	Add a bookmark to preserve camera layout at a point in time; cameras which were live at the time of bookmarking will switch to review.		
Bookmarks	Bookmarks can be viewed and managed in the bookmarks section.		
	This groups the intelligent search features on this system: Snap search, Motion quick search and Motion search, and Feature Search.		
	-	Use a grid of images to search for an object or incident by narrowing the search range until the it appears in the frame.	
Smart search	Motion Search (quick)Draw a frame (or mask) within the display and search for motion within that area only.		
	Motion SearchDraw multiple frames (masks) within the display and search for motion within those areas.		
		Send an image from the Monitoring tab to the Feature search tool in order to find similar/matching images.	
Advanced	In live mode, the user may view connection logs.		
Activity trails	Activity trails are time-stamped overlays that depict the trail of motion in a scene.		
Overlays	Configure camera overlays. Note : Use a PTZ overlay where applicable to control the camera.		




Dewarping	Enable or disable dewarping settings on a fisheye camera. Dewarping transforms the view from the full fisheye view (a circle) to a flat view.
Video stream	Live mode: The user may select camera video stream format. Review mode: The user may select the camera video stream resolution they wish to view.
Video quality	The user may select the camera video stream resolution they wish to view, in review mode.
Close	Close the camera stream.

5.8.5 Review Tools

5.8.5.1 Review Menu

In review mode, a review menu will become available on the left-hand side of display.

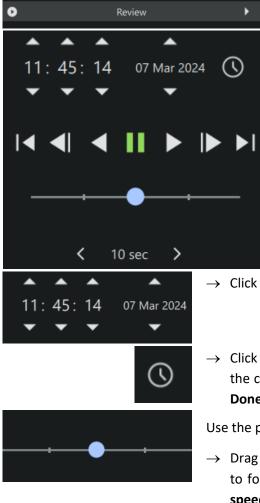

 \rightarrow Click the bar to open the menu.

When reviewing footage, the user may use this menu as an alternative to the toolbar in the main display.

- $\rightarrow~$ Click the arrows to adjust the time and date of playback.
- → Click the clock icon to bring up the date and time menu using the calendar. The calendar will open in a new dialogue. Click **Done** to save changes.

Use the playback speed tool to change how footage is reviewed.


- → Drag the slider to the left, (past the vertical lines) or click (up to four times) on the play backwards arrow to increase the speed while playing backwards.
- → Drag the slider to the **right**, (past the vertical lines) or click (up to four times) on the play arrow to **increase the speed** while playing **forward**.

Four dots indicate the maximum speed.




5.8.5.2 Review Controls

In review mode, more comprehensive controls are available on larger displays than smaller displays. To see even more features on the controls, Motion Quick Search can be used.

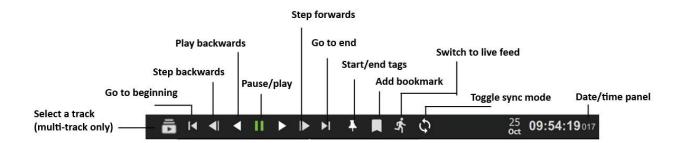

When camera feeds are being viewed in a layout with many display panels or on a smaller screen, the review mode shows a simplified tool bar.

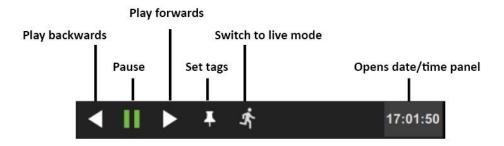

To view more comprehensive review tools from a smaller display, double-click a camera to enlarge the view, or click the maximise icon in the top right of the panel. The main display will change from the saved layout or template to a single display.

Do the same on the enlarged display to return to the smaller display.

5.8.5.3 Adjust Playback Speed

Use the review controls to adjust the playback speed.



Click the play button once to play forward at normal speed. Additional short clicks will **increase playback speed**. An increase in speed is indicated by a dot.

Four dots indicate the maximum playback speed.

Speed can also be increased when playing backwards.



5.8.5.4 Select Tracks on a Multi-Track Camera

If multiple tracks are available on a camera, the **Select track icon** will appear on the controls.




 \rightarrow **Click the icon** to select a track.

A list will show on the display.

 \rightarrow **Click an option** to select a track.

5.8.5.5 Date and Time Panel

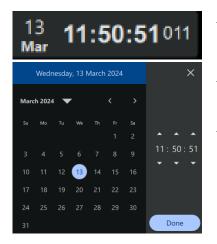

- \rightarrow Click the date/time panel in the bottom right corner to skip to a known point in time. A calendar will open.
- → Click the date on the calendar, and adjust the time using the arrows.
- \rightarrow Click **Done**. The footage for this date and time will appear in the main display.

5.8.5.6 Using Tags

The tags feature is used to demarcate a segment of recorded video of interest. Once a segment is demarcated, it can be bookmarked or archived, and exported.

Locate the beginning of the sequence of interest and display it in the panel.

→ Click the tag icon on the review control panel. This will bring up the start and end tag option.
 → Click Set start tag.
 → Click Set start tag.
 → Locate the end of the segment. Click Set end tag.

Beginning and end points can be adjusted by dragging the tags on the timeline.

Note: Tags will not save after the session or in a bookmark.



5.8.5.7 Archiving a Tagged Segment



- \rightarrow Set start and end tags.
- \rightarrow **Right-click** on the display.
- \rightarrow Select **Archive.** This will send the tagged segment to the Archive Builder.

Note: For more information about archiving, see <u>Archiving</u>.

5.8.5.8 Synchronised Review

Layouts allow the independent or synchronised review of single or multiple cameras. Cameras must be in review mode.

Start sync review	→ To initiate synchronised review, click a camera in a display panel to select.
	\rightarrow Right-click the panel to see the drop-down menu.
	\rightarrow Select Start sync review .
Join sync review	\rightarrow Choose another camera to sync.
,	\rightarrow Click the display panel to select.
	\rightarrow Right-click to see the drop-down menu.
	→ Select Join sync review .
	→ The two cameras will now be synchronised for recorded footage.

Toggle Sync Mode



To quickly add a camera to synchronised review, click the Toggle Sync Mode button in the timeline panel.

The icon will change to orange when the camera has been added to sync mode.

For cameras in synchronised review, the top display panel will turn orange.

🖿 🗧 🔶 Back Parking - Dahua (4) Cathexis Durban	÷	
\blacksquare 🂫 \leftarrow \rightarrow Back Door Entrance IMPRO (1) Cathexis Durban	:	

CATHEXIS

5.8.6 Archiving

Archiving allows a selection of camera footage to be saved and exported.


5.8.6.1 Start Archiving

There are three ways to initiate archiving. In the review mode, scroll to the recorded video footage to be archived.

OPTION 1: Right-click footage

Archive...

- \rightarrow **Right-click** within the **display**.
- → Select Archive... from the options. The Archive Builder will open in a new tab. One or more cameras will be shown in a list in the central panel.

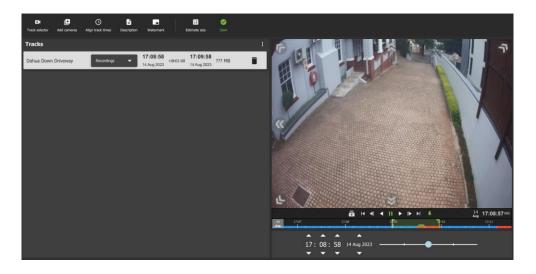

OPTION 2: Select the Archive Icon

To archive footage using the Archive icon, first click a **point** on the **timeline** beneath a display.


Then navigate to the **menu** along the top of the display.



→ Click to select the Archive icon. The Archive Builder will open in a new tab as above.

OPTION 3: Copying a Link into the Archive Builder


A link can be added into the Archive builder once it is open. Add a segment to the archive by copying a link from a review screen.

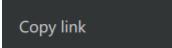

Right-click a display in review and click **Copy link.** There are two ways to add a link to the Archive builder.





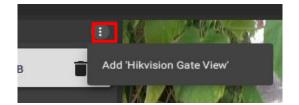

In the Archive builder:

Option 1:

- → **Right-click** underneath the list. The link will appear.
- \rightarrow Select the option to Add the link.

Option 2:

- → Click the menu icon at the top-right side of the Archive builder.
- \rightarrow Select the link when the pop-up appears.

Multiple links from different cameras can be added to the same Archive builder. They will be added in chronological review order, regardless of the order in which they were added to the Archive builder.

5.8.6.2 Adding Cameras in the Archive Builder

+(\rightarrow To archive only one additional camera, click the **Track selector icon**. Track selector Ŀ \rightarrow To archive multiple additional cameras at the same time, click the **add multiple** cameras icon. Add cameras A new dialogue will open. × Add cameras to the archive Q \rightarrow Select the camera/s from the folder tree on Standard view the left. G Cathexis Durban Imported \rightarrow Select multiple items using **Shift+click**/ Cathexis Dbn Office Ctrl+click. Back Door Entrance IMPRO (1) Back Door Exit IMPRO (2) \rightarrow Click Add. 10:38:10 +0h02:00 10:40:10 Back Door Exit IMPRO (2) DOORS CONTIN 22 Mar 2023 22 Mar 2022 The cameras that have been added using the add 10:38:10 +0h02:00 10:40:10 Back Parking - Dahua (4) CONTINUOUS R camera icon or Add multiple cameras icon will show 10:38:10 +0h02:00 10:40:10 Back Parking - Vivotek (3) CONTINUOUS R in a list in in the Archive Builder. CATOBSERVER - Client Demo 10:38:10 10:40:10 CONTINUOUS R +0h02:00 22 Mar 2022 22 Mar 2022 10:43:47 10:44:47 erta - Kitchen Door (Live) DOORS CONTIN +0h01:00 22 Mar 2023

Use the icons to add additional cameras to the archive builder.



5.8.6.3 Playback in Archive Builder

Hikvision Gate View Recordings
11:07:39 14 Mar 2024
< 10 sec >

- \rightarrow Click the drop-down arrow.
- \rightarrow Select the camera storage option.
- $\rightarrow~$ Use the playback speed tool to change how footage is reviewed.


- \rightarrow Drag the slider to the **right** (past the vertical lines) to **increase the speed** while playing **forward**.
- → Drag the slider to the **left** (past the vertical lines) to **increase the speed** while playing **backwards**.
- \rightarrow Maximum speed is indicated by four dots.
- \rightarrow Click **Export** to bring up the archive window.

5.8.6.4 Application: Add Segments in Archive Using Adjacent Cameras

The adjacent camera mapping tool works in the Archive builder and can be used to add additional cameras to archive. (An alternative method is to use *tags* together with adjacent cameras to send linked segments to the archive builder from the *main display*.)

→ Follow an incident using adjacent camera mapping from within the Archive builder, and add each camera relevant to the incident to the archive so that the incident can be exported.

The view below shows a man walking into a room. Nearby cameras will be shown as two small arrows.

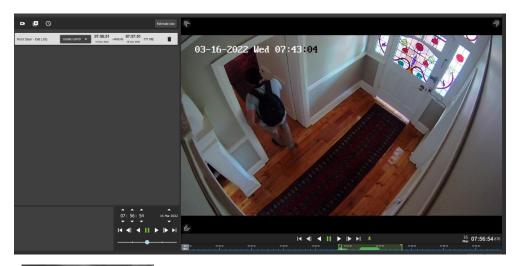




Choose the arrows that are pointing in the direction that the person or object is moving.

- → Using the mouse, hover over the arrows to see the name of the nearby camera.
- \rightarrow Click the arrows to change the camera view.



The adjacent camera will then show in the viewer.

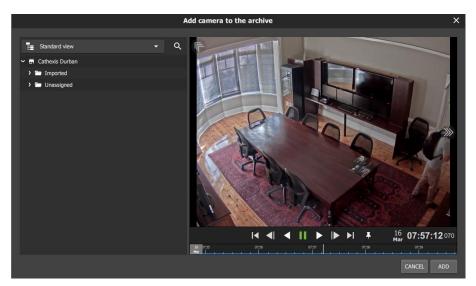



ADD

CANCEL

Front Door - Exit (18)

Play forwards or backwards to watch the video segment.

Pause before the moving person exits the camera view.


Click **ADD** to add this camera view to the archive. The view will return to the main archive builder with a camera view of the end of the last segment.

Repeat the steps to **continue tracking** the moving person: click the **next adjacent camera** in the direction the person is moving to add an additional camera to the archive.

Click **ADD** to complete the step.


Note: When exporting, note that only archive/CAR files support multiple tracks.

5.8.6.5 Saving and Exporting

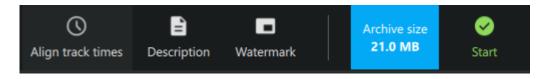

- \rightarrow Use the **Align tool** to make all recordings in the list start and end at the same time.
- \rightarrow Click the **Description** icon to add additional information to the file before saving.
- \rightarrow Click the **Watermark** icon to add a watermark to the files.
- → Click **Estimate size** before exporting to see how much space the recordings will require. The **Estimate size** button will change to a blue button indicating the size of the recordings.
- \rightarrow Click **Start** to Export the file/s. A new window will open with configuration settings.



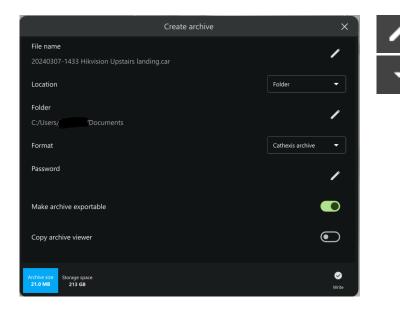

Click the edit icons or drop-down menu arrows to adjust the settings.

Item	Setting
File name	Give the sequence a descriptive name.
Location	Choose between Folder or Optical disk.
Folder	Browse the computer or network and choose a destination folder to save the file.
Format	Choose between a Cathexis archive (CAR) file or a Media file.
Password	Add a password for the file if necessary.
Make archive exportable	Toggle the switch to make the file exportable.
Copy archive viewer	Toggle the switch to copy the archive viewer.

	\rightarrow Click Write to	complete tl	ne archivi	ng process.
Write				
Hikvision Upstairs landing	100%	Finished	×	Click the reach 10
Overall progress	100%	Archive complete		Teach 10

Click the **close icon** when the progress bars reach 100%.

5.8.6.6 View Archived Files in the Archive Player

- \rightarrow To view **archived files**, open a new tab in Carbon and select **Archive Player**.
- \rightarrow **Browse** for the **folder** the file was saved in.
- → Select the folder. The recently saved file (and any viewable archived files saved in the same location) will be displayed in the Camera Viewing Panel of the Archive Player.

See <u>10. Archive Player</u> for more details on using the Archive Player.



5.8.7 Bookmarks


Bookmarking is a feature which preserves a point in time on a camera feed for future reference. The bookmark is stored on the local database as private data for the specific user and will also be available on the mobile application for that user. The bookmark can be *retrieved* from the bookmarks section (library), or alternatively, by right-clicking the display panel of that camera.

Note:

- When a bookmark is recalled, any cameras that were **live** will switch to **review** at the time the bookmark was created.
- Bookmarks will only contain resources to which the user has access.
- Bookmarking will **not** save:
 - a. PTZ position,
 - b. Current digital zoom parameters,
 - c. Live camera sequence running in a display panel.
- Bookmarks do not prevent data from being overwritten on the server. If the user requires bookmarked video to be retained, then the user should create an archive.

5.8.7.1 Create New Bookmark

Lay out the camera/s as desired.

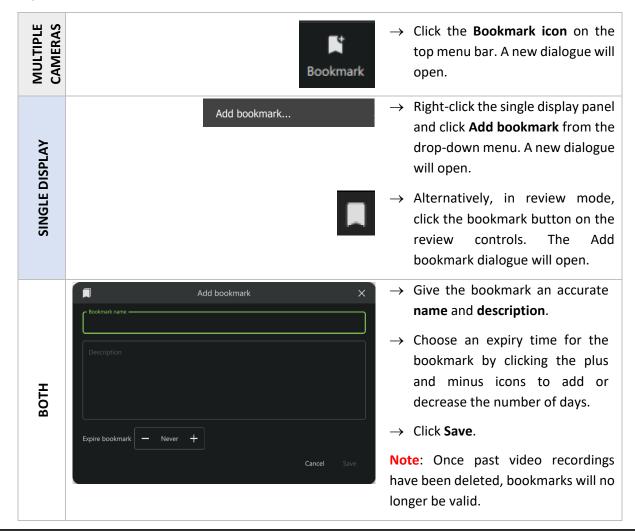

5. Monitoring Tab




5.8.7.2 View Bookmarks / Open Saved Bookmarks

Once bookmarks are created, they can be viewed and managed in the bookmarks section.

Option 1: View Bookmark by Camera o	or Layout
Bookmarks	→ Right-click a camera in the display panel. Alternatively, click the menu icon in the top-right corner to open the Camera Tools menu.
	→ Click Bookmarks . The Select bookmark dialogue will open.
Select bookmark X	\rightarrow Select a bookmark and double-click it to open.
Option 2: View All Bookmarks from Me	enu
< <p>✓</p>	➤ From Resources, click the side arrows to scroll. Click the right arrow once. Bookmarks should appear next.
Test 2024-03-07 14:37	→ Double-click a bookmark to open.
Contents Name Test	Selecting a bookmark will cause the Contents bar at the bottom of the screen to open. This will display details of the selected bookmarked recording.
Create time 2024-03-07 14:37:50	Click the Archive icon to open the Archive
Description But they were, all of them, deceived, for another ring w	builder and archive the selected bookmark. See <u>Archive Bookmark</u> for details on this.
Bookmarked recordings	
CathexisSec DBN 2024-03-07 Hikvision Upstairs landing 14:33:46	
5.8.7.3 Search Results	

5.8.7.3 Search Results

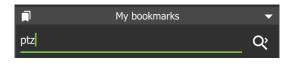

- \rightarrow To search bookmarks, click **the search icon**. This will activate the search field.
- \rightarrow Enter a search term. This can be a camera name, or an excerpt from the description.


5.8.7.4 Sort Results

	My bookmarks		•
Alphabetical		•	Q

- \rightarrow Click the **drop-down menu** to choose how to sort items.
- \rightarrow Click an item to select. Sort according to Newest first to see the most recent bookmark that was created, or Oldest first to see older entries.




5.8.7.5 Delete Bookmark

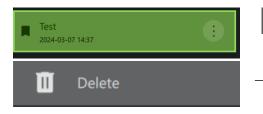

- → To delete an item, **hover** over an item on the list until the menu icon appears. Click to select.
- \rightarrow Click **Delete** to remove the bookmark.

5.8.7.6 Archive Bookmark


Archiving allows a selection of camera footage to be *saved and exported*. Use the Bookmarks section on the sidebar to locate and open the bookmark.

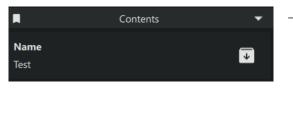

- → Once the bookmark has been selected, click the Contents bar at the bottom of the screen to open the contents section.
 - → To archive the bookmark, select the archive icon next to the bookmark title.

The Archive Builder will open in a new window. One or more cameras will be listed in the left panel.

Ł

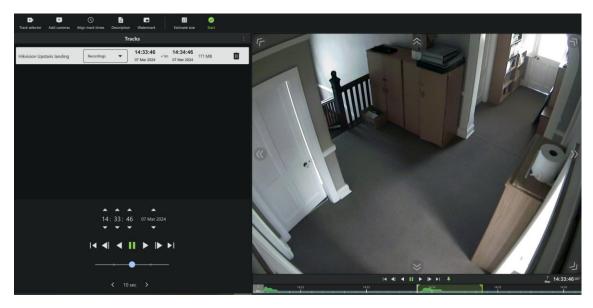





- \rightarrow From the drop-down menu, select the storage option.
- \rightarrow Use the **playback speed tool** to change how footage is reviewed in the panel on the right.
- → Drag the slider to the right, (past the vertical lines) to increase the speed while playing forward.
- \rightarrow Maximum speed (4x) is indicated by four dots.
- \rightarrow Drag the slider to the **left**, (past the vertical lines) to **increase** the speed while playing **backwards**.
- \rightarrow See <u>Archiving</u> for more information about archiving.



5.8.8 Snap Search

The supported Smart Search features are <u>Snap Search</u>, <u>Motion Search</u> (<u>Quick</u>), <u>Motion Search</u>, and <u>Feature</u> <u>Search</u>. <u>Note</u>: Snap Search works in *review mode*.

Smart search	Snap Search
Advanced •	Motion Search (quick)
	Motion Search
Activity trails	Feature Search

- \rightarrow Switch to **review mode**.
- → Right-click the display panel. A menu will open.
- \rightarrow Hover over Smart search.
- → Click **Snap Search**. Snap Search will open in a new window.

The search will be displayed in the central **Frame Area**. Stills spaced at equal time intervals will be displayed in the panels.

5.8.8.1 Snap Search Window: Basics

 ← Back ♥ images ▼ ▼ Today, 	08:48	to 08:53 🖌 🔍 Q 🔇 🔨 > Decrease period Increase period Video time selector Step back Step forward
9 images 🗸		Frame display. Change the number of still images displayed in the frame area by selecting from the drop-down menu.
	\rightarrow	Click to select the number of frames/images to be viewed at one time.
/	\rightarrow	Click the edit icon to change the date and time range manually.
Q Q Decrease period Increase period	\rightarrow	Use the zoom in/zoom out icons to narrow or widen the time range.
Video time selector	\rightarrow	Click the video time selector to open a new window showing previews of the start and end time.
< > Step back Step forward	\rightarrow	Use these buttons to step a "time page". E.g. If the current range shows 10:55-13:00, Step forward to show 13:00-15:05.
	\rightarrow	Timeline. Use the timeline to navigate between relevant frames.

Note: If timeline or other features are not displaying, maximise window to full screen.



5.8.8.2 Change Start and End Times

The frame that was initially right-clicked from the Monitoring tab will be the end frame and mark the end time in the Snap Search window. To change start and end times, there are two options.

Option 1: Select the Video Time Selector



- \rightarrow Left-click the video time selector icon. A new dialogue will open, showing start and end frames.
- \rightarrow Change the times of the start and end frames using the arrows.
- \rightarrow Click **Apply**.

Option 2: Select the Date and Time Bar



- → Click the edit icon next to the day and time bar at the top left of the of the window. A pop-up will open.
- \rightarrow Click the **up and down arrows** in the **From** and **To** fields. This will determine the first and last frame in the sequence on the display.
- \rightarrow Click the **tick icon** to save changes and exit the pop-up.

5.8.8.3 Controls Within the Frame Area

Controls are available within the frame area. These are:



- → **Double-Click a Frame:** Double-click a frame/thumbnail to start playback in a new window that opens review tools. The Snap Search window will remain open.
- → Click the X to close the new window.
- → Right-Click a Frame: Right-click a frame for the option to copy the review link.

5.8.8.4 Search Between Frames

To limit the search range between frames:

- 1. Left-click an image, and hold down.
- 2. Drag to another frame. A purple line will represent this, and the time between the two frames will be displayed.
 - A negative / positive sign indicates whether the time difference is ahead or behind the
 - selected frame. +

3. **Repeat** the process until the desired frame has been located. Search between any frames, in any direction.



The search time frame selected by the mouse will reflect in the timeline at the bottom of the screen.


5.8.8.5 Snap Search Window Timeline

The "Snap search" timeline functions similarly to the main Carbon UI timeline. Click anywhere on the timeline to go to that time point.

FEATURE	DESCRIPTION
	A grey strip on the timeline indicates the time frame of the selected area when searching between frames.
	The white square corresponds to the frame where the mouse is active. When the mouse hovers over the frame at 16:46, the square at 16:46 changes to white and the frame border changes to blue.
	Blue squares on the timeline represent the frames on the display. Click a blue square to move all search results in the direction of the selected time point.

5.8.8.6 Snap Search: Find an Event in a Tagged Time Period

Snap Search can be applied to a time period, using tags on the footage in the main display.

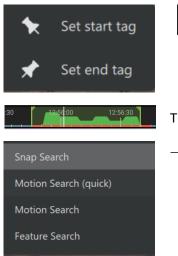

From the main display, click the tag icon to **set tags**. This will demarcate the segment to send to the Snap search window. For more about tags, see <u>Using Tags</u>.


The tags will display as vertical green lines.

→ Right-click the display. Hover over Smart search, and then click Snap Search. Snap Search will open in a new tab.

The tags will define the beginning and end of the search period. The search results will be evenly distributed in terms of time.

5.8.8.7 Importing a Review Time from Snap Search into Monitoring Tab

Once a time/incident has been identified in **Snap search**, it is possible to copy and paste into the Monitoring tab.

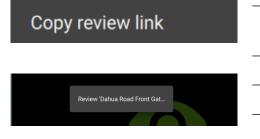

- → First, from the Snap search window, **right-click** on the display in which the time/incident has been identified.
- \rightarrow Click **Copy review link** to select.
- \rightarrow Return to the Monitoring tab.
- \rightarrow **Right-click** an empty display panel in the Monitoring tab.
- \rightarrow Then click "**Review** [camera name]" to select.

5.8.9 Motion Search (Quick)

The **Motion Search (quick)** function allows the user to search from the main monitor display for recent motion in a selected area (mask area) of the camera view.

Note:

- Camera must be in *review mode* for Motion Search (quick) to work.
- Motion quick search uses metadata from the motion analytics database. To perform a motion quick search, cameras must have Motion Search analytics configured on the CathexisVision client.
- Configuration can be done from CathexisVision: Setup Tab / Configure Servers / Video Analytics / Motion Database.
- Motion data is gathered in real time. This means that there will not be any data available for periods when Motion Search was not configured.

There are two ways to locate this tool.

OPTION 1: Options Menu



→ From the camera panel, select the inset options menu in the top-right corner. A drop-down menu will open.

lacksquare lacksquare

- \rightarrow Hover over **Smart search**.
- \rightarrow Click Motion Search (quick).

OPTION 2: Right-Click


Smart search	Snap Search
Advanced	Motion Search (quick)
	Motion Search
Activity trails	Feature Search

- → Right-click within the display panel.
- → From the drop-down menu, hover over Smart search.
- → Select Motion Search (quick). The Motion quick search controls will appear and the feed will switch to review if the view was live.



5.8.9.1 Motion Search (Quick) Controls

In addition to standard review controls, the Motion Search (quick) controls provide quick access to the mask tool, and a tool to skip forwards or backwards to the next sequence in which motion appears.

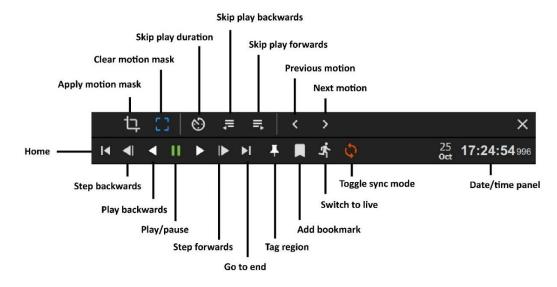

Note: Motion quick search is not available on all cameras. Although the motion quick search controls will open in the camera review panel for all cameras, when searching for next or previous motion, an **error message** will appear when this feature is not available.

5.8.9.2 Search in Motion Search (Quick)

The **Motion Search (Quick)** functions are similar to the **Motion Search** functions, but are accessible from the main monitor display panels and are simplified. Search for motion using the steps below.



- \rightarrow Select the mask tool.
- → Draw a frame around the area to be searched. This is called the motion mask.

To search for time points at which motion is detected in the frame:

- 1. Click left or right to scroll backwards or forwards on the timeline.
- 2. Click a blue/motion area on the timeline to view motion with the mask.



Motion is indicated with blue. Greater motion is depicted as a higher crest.



5.8.10 Motion Search

In *review mode*, the **Motion Search** function allows the selection of certain areas of the camera image to search for recent motion in one or more selected areas.

There are two ways to locate the Motion Search feature.

OPTION 1: Menu Icon				
•	From the camera panel, select the inset menu icon in blue.			
■ 💥 ←	ightarrow Back Parking - Vivotek (3) Cathexis Durban	: • ×		

OPTION 2: Right-Click

Alternatively, locate the Motion search feature by right-clicking within the display panel.

Smart search	Snap Search
Advanced	Motion Search (quick)
	Motion Search
Activity trails	Feature Search

- → From the drop-down menu, hover over Smart search.
- → Select Motion Search. A new window will open, displaying the Motion Search tools.

5.8.10.1 Motion Search Window

The Motion Search window displays tools in five separate panels: **Configure**, **Mask**, **Snapshots control**, **Snapshots**, and **Review**, as shown below. The table beneath the image describes the functions in each of these panels.






Panel	Function	Instructions
Configure	The user can change which camera is being viewed.	Click the camera name. Search for a camera in the folder tree. Click the tick icon to apply.
Masks	The user can create a search frame within the display.	+ Add maskSelect Add mask.Draw a shape/s over the search area.Click Apply.
Snapshots Control	Use the controls to search snapshots.	Use the Snapshots control buttons to search previous and next snapshot, or search for date/time. Select the View icon to change the layout and number of snapshots displayed in the panel.
Snapshots	Search results appear as thumbnails in this panel.	Double-click a snapshot to view in the main panel.
Review	The user can review or search footage manually in the large display.	Use the review controls or the timeline to search footage. Use tags, bookmarking and archive features from this panel.

5.8.10.2 Motion Search Review Controls


The main display panel allows the user to see a larger image, and shows the motion search timeline underneath the image. Use the timeline or the controls from the main panel to search or play.

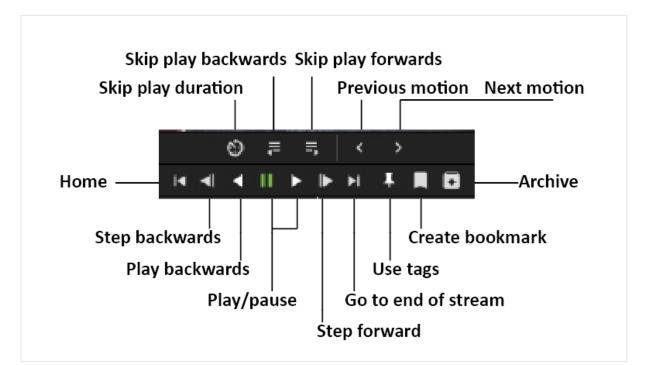



5.8.10.3 Search in Motion Search

The motion search **Mask panel** allows the user to select more than one **activity zone** within the frame in which to search for motion. Add masks and then apply, as illustrated below.

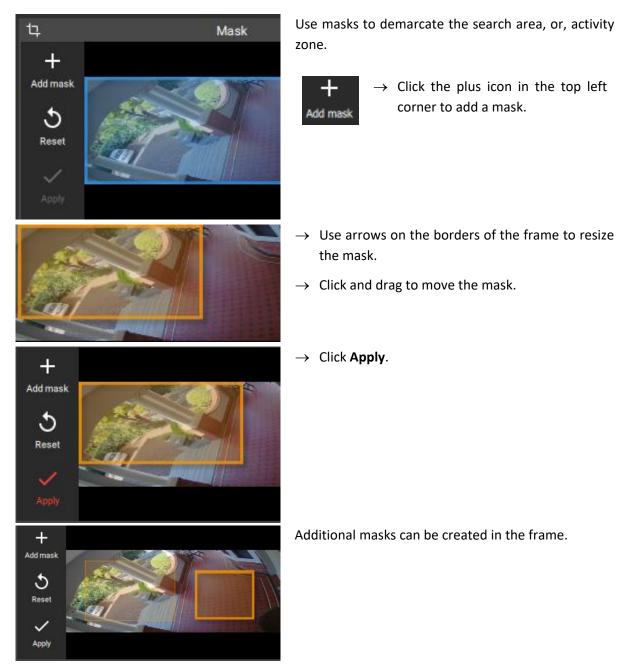


After applying the mask/s, the horizontal strip at the bottom of the screen will turn up snapshot images (thumbnails) where motion appears within the mask area.

Note:

- Camera must be in review mode.
- Motion Search uses metadata from the Motion Search analytics database. To perform a motion search, cameras must have Motion Search analytics configured on the **CathexisVision client**.
- Configuration can be done from CathexisVision: Setup Tab / Configure Servers / Video Analytics / Motion Database.
- Motion data is gathered in real time. This means that there will not be any data available for periods when Motion Search was not configured.




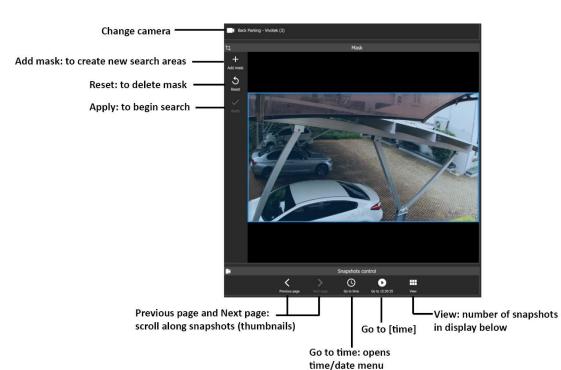

5.8.10.4 Summary of Mask Tools and Snapshots Control Tools

5.8.11 Feature Search

Feature Search is a tool with a dedicated tab. Use the Monitoring tab to send an image to the Feature search tool. Feature search will match the image with similar results.

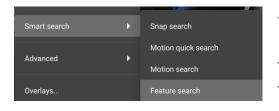


- \rightarrow Find the frame using the review tools in the Monitoring tab.
- \rightarrow **Right-click** on the panel. A menu will open.
- \rightarrow Click **Feature search**. The image will be used as the reference/search image in the Feature search tab.

See <u>9. Feature Search</u> for information about how to use the Feature search tab.

5.8.12 Integration Overlays

Overlay options vary according to camera and camera setup. Available overlays vary between cameras and integrations. Right-click a display panel to see what options are available for the camera.

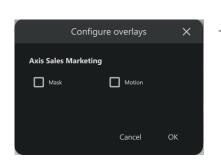


- \rightarrow To control overlays, right-click a display.
- → Select **Overlays** from the drop-down menu. The **Configure overlays** dialogue will open.
- \rightarrow **Check boxes** to select options and click **OK**.



5.8.13 Advanced: Connection Logs

An advanced tool is available to view connection logs of footage in live mode.

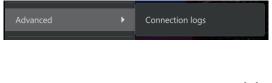

- \rightarrow **Right-click** the display in live mode.
- → Hover over Advanced and select Connection logs. The connection logs will open in a new window.
- $\times \rightarrow$ Click the **cancel icon** to exit.

5.8.14 Dewarping


Use the dewarping tool to transform a fisheye camera into a flat view. For example, the **quad** option breaks the fisheye feed into four flat sections. Any of these four sections can be clicked and controlled.



- → Right-click a display. A drop-down menu will open.
- \rightarrow Hover over **Dewarping**. Another menu will open.
- $\rightarrow\,$ Check the boxes to adjust the dewarping settings on the camera. Choose from:
 - **Disable** (On a fisheye camera, disable will remove dewarping, and show the full fisheye view. Selecting disable on a regular camera will also send the camera view to the monitor without making changes to the feed.)
 - Single (1/4)
 - Quad (breaks the view into 4 flat sections)
 - Panorama single (top left and right quarters)
 - Panorama double
 - Overview (drag the blue section around to change the fisheye view).

5.8.15 Video Settings

5.8.15.1 Change Video Stream Format in Live Mode

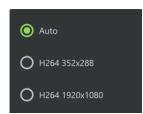

- \rightarrow **Right-click** to open the drop-down menu.
- \rightarrow Click Video stream. The video format default is set to Auto.
- → Choose from available options to change the video format, and click to select.

5.8.15.2 Change Video Quality in Review Mode

Native (best)	\rightarrow Right-click to open the drop-down menu.
O 480p	\rightarrow Click Video quality. The video quality default is set to best.
	ightarrow Choose an option to change the video quality, and click.
O 720p	

15 March 2024



5.8.16 PTZ Menu

The PTZ menu enables the user to control PTZ movement in real-time as well as save PTZ presets for the camera. For information about how to use the PTZ overlay in the main display, see <u>PTZ Control</u>.

When a display panel with a PTZ camera is selected, in *live mode*, a PTZ drawer will appear on the Resources panel on the left.




 \rightarrow **Click** the **PTZ drawer** to open it.

→ Use the navigation and zoom functions to control the camera's movement manually. Features will depend on the capabilities of the individual PTZ camera.

- \rightarrow Choose an unused slot or row.
- \rightarrow Click the save icon to save the preset.
- \rightarrow Click **Yes** to save the new preset.

PTZ Menu: Advanced

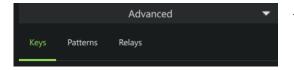

Keys vary depending on the specifications of the PTZ camera. These buttons or "keys" allow the user to access PTZ functions.

A pattern is a pre-recorded path for the camera to follow. The patterns are numbered.

Relays are switches on the camera.

- → Click the Advanced drawer to view Advanced options. These are Keys, Patterns, and Relays. Click each tab to configure those settings.
- → Click a "key" e.g WIPE to activate an oncamera function.
- → Select a pattern using the drop-down menu and click **Run**.
- → Select a relay using the drop-down menu and click Set.

Note: Patterns and relays must first be configured before features can be used. These will need to be set up in CathexisVision.




5.8.17 Monitoring Using the Side Panel

The side panel displays camera with activity (triggered cameras) as *text items in a list*, not as video. This feature remains active even while the central display panels are being used for other cameras.


Section <u>5.8 Event Black Screen Monitoring</u> describes the setup for black screen monitoring, which only displays *video footage* of triggered cameras.

In the example below, the list of cameras with activity that are displayed on the right side panel are different to the cameras displayed in the central panels.

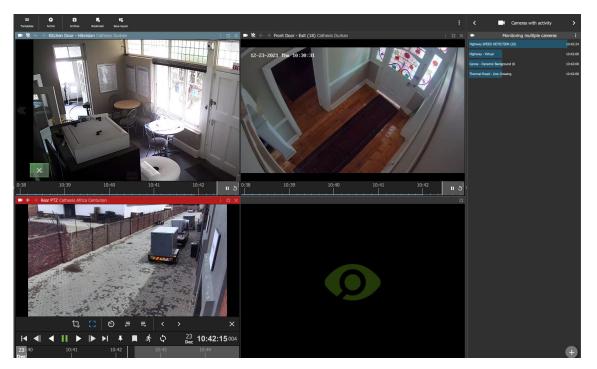


To use the side panel for monitoring, it is recommended first to enable the right side panel from the menu settings.



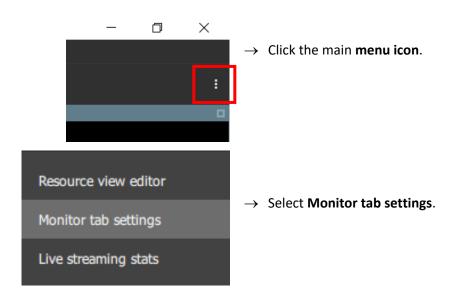



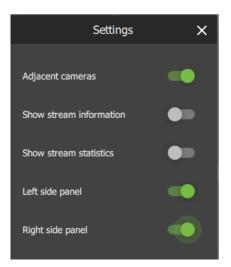

 \rightarrow In the dialogue box that opens, toggle the bottom switch to enable **Right side panel.**

5.8.17.2 Monitoring Using Groups or Manually Adding Cameras

>

<	-	Cameras with activity	>
-		Ready to monitor	:
<		Cameras with activity	>
	Monitoring	CT Office Denny (Cathexis	: -
Hinhway -	Virtual		18-41-25
Highway -	Virtual		18:41:25
Highway -	Virtual		18:41:25
Highway -	Virtual		18:41:25
Highway -	Virtual		18:41:25
Highway -	Virtual		18:41:25
Highway -	Virtual		18:41:25
Highway -	Virtual		18:41:25
Highway -	Virtual		18:41:25
Highway -	Virtual	Cameras with activity	18:41:25
			>
		Cameras with activity Ready to monitor	
			>

→ Once the side panel has been enabled, use the arrows on the menu bar to scroll through menu items to find Cameras with activity.

→ Select the **plus icon** in the bottom right corner to add additional monitoring panels.

 $\ \, \stackrel{\bullet}{\to} \ \, \text{Click a camera group in the Resources}$ section, on the left, to select.

→ Drag and drop the camera group into the Cameras with activity panel on the right.

- → Alternatively, add cameras manually using Shift+click or Ctrl+click and drag them across. The menu text will change from Ready to monitor to Monitoring [group name], and cameras will begin to appear underneath.
- → A group can also be added by clicking the menu icon on the **Ready to Monitor** bar and selecting **Watch group**.

5.8.17.3 View a Monitored Camera


- $\rightarrow~$ Click a camera in the list.
- → **Drag and drop** into a video display panel to see footage.



5.9 Using Maps from the Monitoring Tab


Maps can be viewed and used in the Monitoring tab as well as the Map tab. The sections below describe how to use maps in the Monitoring tab.

To use the map from the Monitoring tab, the map must first be added to a template or open display panel. **Note**: It is recommended to choose a template with at least one other display panel.

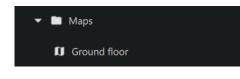

- → From the folder tree, select the folder or group where the map is saved. (Note: For a MultiSite or Enterprise connection, all available maps from all sites will be displayed in the folder tree.)
- → **Drag and drop** the map into a display panel.

5.9.1 Monitoring Tab Map Tools

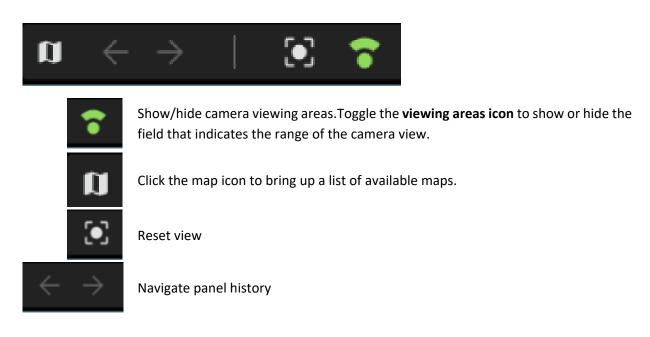

5.9.2 View the Map's Resources in Another Panel

The camera icons and map icons on maps represent resources that can be viewed in other display panels.

s AL		\rightarrow Choose a template with at least one available display panel in order to see camera
RA.	$\mathbf{\cdot}$	views.
		\rightarrow Select the camera icon on a map.
INDIVIDUAL CAMERAS		ightarrow Drag and drop the icon into another panel. The panel will change to display the
=		camera's footage.
5 ч	F	\rightarrow Left-click the camera group icon on a map.
CAMERA GROUP		ightarrow Drag and drop the icon into another panel. The template will change, and the saved camera group will fill the display panels. The display panels will show the
		footage and the map will no longer be displayed.



5.9.3 Inputs and Outputs

Note: Inputs and outputs must be configured in CathexisVision in order for them to be available in Carbon.

5.9.3.1 View Output State

To view the *state* of an Output, it is necessary to know the settings for the icon that were created using the map editor tool (see <u>Edit Map Appearance</u>).

Colours can be used to represent the state:

Unknown


Flash Green LED

OnOff.



The *state* of the output will be indicated on the map by showing the *designated colour*.

5.9.3.2 Control Output

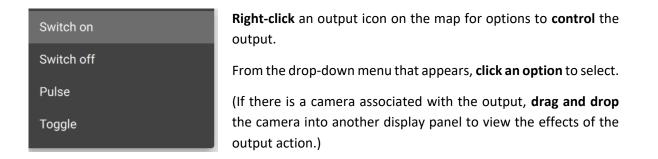

5.9.3.3 View Input State

To view the *state* of an input, it is necessary to know the settings for the icon that were created using the map editor tool (see <u>Edit Map Appearance</u>).

$\overline{\boldsymbol{\mathbf{b}}}$	• Unknown
Flash Green LED	HighLow.
Flash Green LED	Flash Green LED

Colours can be used to represent the state:

The *state* of the input will be indicated on the map by showing the *designated colour*. In the example on the left, the *output* icon (left) has been used to "switch on", which results in a state change displaying on the *input* icon (right).




5.9.4 Placing Layouts

Layouts can be added as map objects.

Note: This feature can be used in tandem with configuring the window count in Carbon's advanced settings. This will enable the user to drag and drop a layout from a map in the Monitoring tab of one window, into a Monitoring tab in another window.



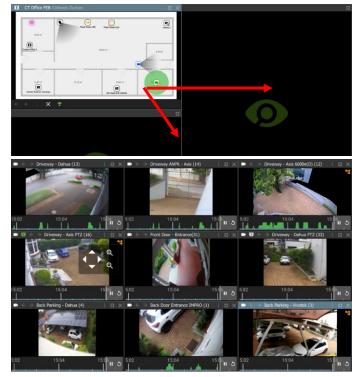

- **Left-click** the layout icon on the map.
- → Drag and drop the Layout icon into another display panel.

The display will change, and the saved layout will fill the display panels.


If the map is not saved on the new layout, it will no longer be displayed.

(When creating a layout, it is possible to *add a map* and save as a new layout. Include a map in a saved layout to see the map when using Layout icons.)



5.10 Cast a Camera or Layout to a Monitor

A camera or layout can be cast directly to a monitor from the Monitoring tab.

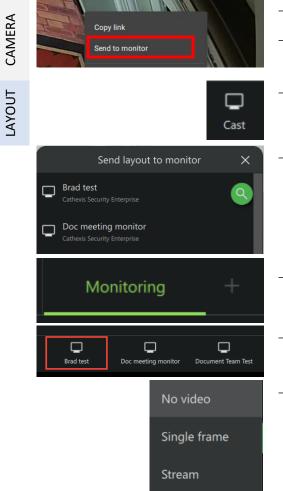


- \rightarrow Right-click the camera feed in the display panel.
- \rightarrow Click Send to monitor.
- → Open a layout and click the Cast icon at the top of the Monitoring tab panel.
- \rightarrow Click a monitor to select it. Depending on the connection, the options shown here will vary.

Note: The camera or layout cast to the selected monitor will replace the monitor's current contents with a single, full window video feed.

- → Open a new Video Walls tab by clicking the plus sign at the top of the screen and selecting Video walls.
- → In the Video walls tab, select the name of the monitor at the top of the panel.
- → Click the **mimic video mode** drop-down menu to display video options.

5.11 Alarm Black Screen Monitoring (BSM)

When Black screen monitoring (BSM) is used, only cameras which generate alarm signals activate footage in monitors. BSM allows video to be sent to a monitoring panel only when alarms are detected. Alarm BSM operates similarly to <u>Event BSM</u>.

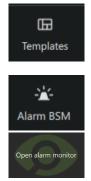

- \rightarrow Choose a suitable template or use a single display.
- → Select a destination display panel by clicking anywhere within the panel. This display panel will become active after selecting cameras.
- \rightarrow Click the **Alarm BSM** button. The text "Open alarm monitor" will appear in the centre of the selected panel.
- \rightarrow Click the text that says "Open alarm monitor". The selected panel will be populated with alarm feeds as they come in.

After Alarm BSM has been added to a display panel, it is possible to open one of those cameras in live mode in another monitor panel.

→ To display individual cameras, left-click a camera, and drag and drop into the empty display.

5.11.1 Icons and Tools

	٥
	1
Contraction of the local division of the loc	6
	T

 \rightarrow Click this icon to maximise the black screen monitoring panel.

 \rightarrow Click this icon to restore the black screen monitoring panel to its previous size.

The **clock face** is a visual depiction of the remaining time the footage will display after the event, indicating the amount of time left since the alarm was triggered. Adjust expiry time and minimum display time to change the length of time.

 \rightarrow Click the filter icon to select filters for the incoming alarms.

م	
Å	Any domain
**	Any alarm
\$	Priority
•	Tag category

- \rightarrow Enter text in the field to filter by text.
- \rightarrow Click **Any domain** to filter by a specified domain.
- → Click **Any alarm** to filter by a specified alarm.
- \rightarrow Select the priority.


5.11.2 Preview Alarm

→ Double-click an alarm feed to open the **Preview Alarm** dialogue. Preview footage will display on the left, and the live stream from that camera will display on the right. The domain and alarm trigger are listed at the top.





Tag and close

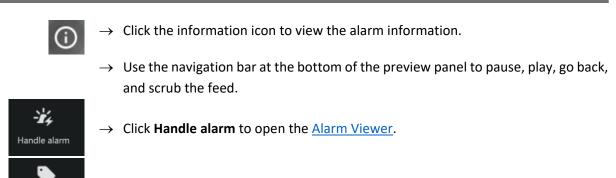

 $\rightarrow~$ Click Tag and close to select a tag for the alarm and then close it.

5.11.2.1 Alarm Preview Right-Click Options

→ Right-click the alarm feed in the **Preview Alarm** dialogue to view further options. Click an option to select it.

Enable audio	
Copy link	
Export snapshot	
Overlays	
Video quality	Þ

Enable audio: Enable audio (if this option is available on that camera).

Copy link: Copy a link to the stream, which can be pasted in the Archive builder.


Export snapshot: Export a snapshot of the alarm.

Overlays: Configure overlays.

Dewarping: Select a dewarping option (if applicable).

Video quality: Select video quality.

Export snapshot

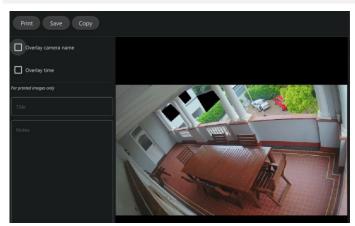

- → Selecting **Export snapshot** will open this window.
- → Select whether the snapshot will display the camera name in an overlay.
- \rightarrow Select whether the snapshot will display the time in an overlay.
- → For printed images, it is possible to add a title and notes.
- \rightarrow Click **Print**, **Save** or **Copy** (a link to the snapshot).



6. Databases Tab

The databases section combines access to metadatabase and video database recordings in one interface.




From the home menu, click the Databases icon to open a new Databases tab. The **Open database** dialogue will open.

6.1 Select and View a Database




A **metadatabase**, indicated with the 'A' icon, contains extensive detail using text data. Use links to access associated video footage.

A video database, indicated with the camera icon, is where video is stored.

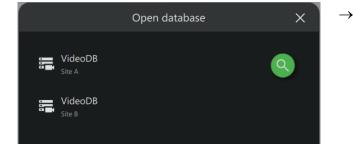

 \rightarrow Click a database to select and open it.

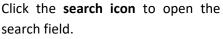

Type the name of the database to search for a database name.

The interfaces for the metadatabase and the video database differ, as explained in the sections below.

6.2 Metadatabase Interface

Note: Some integration databases have multiple View options, which can be adjusted.





1. Open Database	Click the name of the database to open the Open database dialogue.			
2. Custom View	Click this icon to see custom views . Users may change the way the database is presented, by adjusting the Sort by (3) options.			
	Saving the sorted list creates a custom view .			
3. Sort by	Events can be sorted by certain parameters. These are specific to each database.			
	The way event footage is reviewed in the display on the right can be changed.			
	Normal After the event plays, the video stream will continue playing forward until paused.			
4. Play mode	Skip After an event plays, the next item in the database list will begin playback.			
	Loop An event will play until the end of the segment, then begin again on repeat.			
5. Max rows	Choose from a list of options the number of rows displayed in the main page,			
	between 10 and 10 000 , or choose the Auto function to fit rows to the screen size.			
	Controls relate to the pages created by using the Max Rows tools. Use a control tool to jump to other pages.			
	Click the First icon to jump to the first page of results.			
6. Controls	Click the Previous icon to jump to the previous page of results.			
	> Click the Next icon to navigate forward in time to more recent pages.			
	Click the Last page icon to show the most recent entries (i.e. jump back back to these results).			
7. Go to	Enter and search for an event using the time and date panel. The time and date panel will open in a new dialogue from the Go to icon.			
8. Refresh	Click the Refresh icon to reload the page.			
9. Filter	Click the Filter icon tool to search <i>all</i> data in the integration database. Multiple filters can be added from this window. The filter options will change for each database. See below, <u>Configure Filters</u> , for instructions on adding search filters.			
10. Filter this page	Use the Filter this page tool to narrow down results from <i>only</i> those currently displayed on the page. Filter by any term or part of items that appear in the main page. Only the results from the current page will display.			




6.2.1 Configure Filters

Use the filter tool to search and filter *all* entries, including those currently not displayed on the page.

Click the **filter icon**. The **Configure filters** dialogue will open.




Click the **plus icon**. A drop-down menu will open.

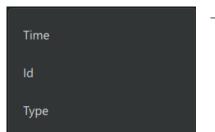

 \rightarrow Click a filter to select it. (Note: The filter options will vary according to the database.)

Additional fields will appear which allow the user to configure the filter. Depending on which filter is chosen, the filter will be further specified by typing in a field, choosing an option from a drop-down, or following prompts in a new dialogue.

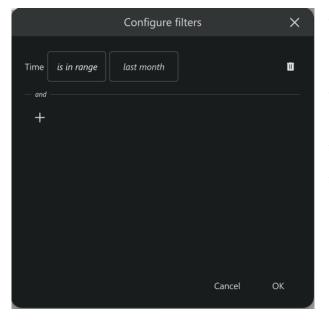

- \rightarrow Click the fields to specify the parameters of the filter. In the example alongside, the Time filter is shown.
- \rightarrow Click the **plus icon** to add more filters. A drop-down menu will open.
- \rightarrow Click the **delete icon** to delete a filter.
- \rightarrow Click **OK** to finish.

6.2.1.3 Explanation of Filter Search Terms

Term	Explanation	
is equal to	This will search for the entire/exact item specified in the field alongside.	
is not equal to	This will exclude the whole term.	
is one of	The filter will provide a list of multiple options that can be added. This is a way to <i>include multiple items</i> of one type in a filter.	
is not one of This will provide a list of multiple options that can be excluded. This is a we exclude multiple items of one type in a filter.		
contains	This will conduct a search using part of the word or phrase. The search returns results using any part of the term that is entered in the field.	

Filter search terms will vary according to the filter and the database.



does not contain	This will conduct a search using part of the word or phrase. The search returns results excluding any part of the term that is entered in the field.			
is greater than	This will yield results that are greater than the value specified.			
is greater than or equal to	This will yield results that are greater than, or equal to, the value specified.			
is less than	This will yield results that are lower than the value specified.			
is less than or equal to	This will yield results that are less than, or equal to, the value specified.			
is in range	This will allow the user to specify a range to apply to the search.			

6.3 Video Database Interface



1. Open Database	Click the name of the database to open the Open database dialogue.		
	The way e	vent footage is reviewed in the display on the right can be changed.	
	Normal	After the event plays, the video stream will continue playing forward until paused.	
2. Play mode	Skip	After an event plays, the next item in the database list will begin playback.	
	Loop	An event will play until the end of the segment, then begin again on repeat.	
3. Max rows	Choose the number of rows displayed in the main page, between 10 and 10 000 , or choose the Auto function to fit rows to the screen size.		
		elate to the pages created by using the Max Rows tool. Use a control tool other pages.	
	1<	Click the First icon to jump to the first page of results.	
4. Controls	<	Click the Previous icon to jump to the previous page of results.	
	>	Click the Next icon to navigate forward in time to more recent pages.	
		Click the Last page icon to show the most recent entries (i.e. jump back to these results).	






5. Go to	Enter and search for an event using the time and date panel. The time and date panel will open in a new dialogue from the Go to icon. Click the field in the pop-up. This will provide a calendar view. Choose the date and time and select Done .	
6. Refresh	Click the Refresh icon to reload the page.	
7. Filter this page	Use the Filter this page tool to narrow down results from <i>only</i> those currently displayed on the page. Filter by any term or part of items that appear in the main page. Only the results from the current page will display.	

6.3.1 View Video Footage Associated with an Event


Click an item in the list on the left to play video footage associated with the event in the panel on the right.

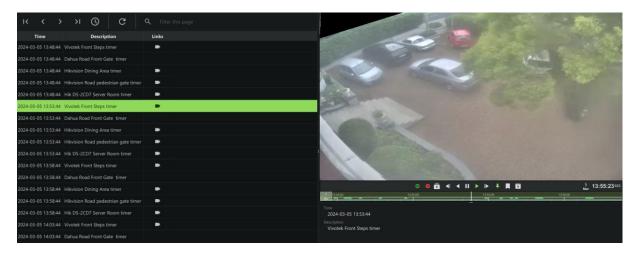



A motion graph is shown below the review controls. The white vertical line indicates the current frame.

6.3.1.1 Database Review Controls

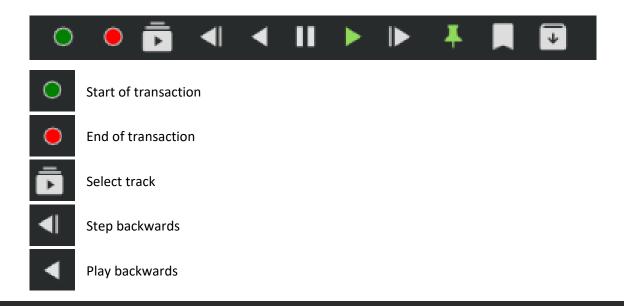



	Pause	
	Play forwards	
►	Step forwards	
Ŧ	Set tags	
	Add bookmark	
¥	Archive	

6.3.1.2 Database Review Panel Right-Click Options

Enable audio	ightarrow Right-click the display panel. A drop-down menu will appear.
	\rightarrow Click an item to select it.
Copy link	
Export snapshot	
Archive	
Add bookmark	
Bookmarks	
Overlays	
Video quality	

Term	Description	
Enable audio	Listen to the audio track where one is available.	
Copy link	Create a link and select it. The link can be pasted into another display panel.	
Export snapshot	Open a window to print snapshot, save to folder, copy to system clipboard, or copy to clipboard. The user may choose to include the camera name and time of snapshot in the overlays.	
Archive	Save and export a video segment.	
Bookmarks	Bookmarks can be viewed and managed in the bookmarks section.	
Overlays	Use a PTZ overlay where applicable to control the camera.	
Dewarping	Enable or disable dewarping settings.	
Video quality	The user may select the camera video stream resolution they wish to view.	



6.4 Database Menu


In both the video database and metadatabase views, the menu icon in the top-right corner opens further options.

\vdots \rightarrow	Click the m	enu icon. Further options will open.
→	Click one o	f the options to select it.
	Export	Generate metadatabase reports in PDF or CSV format.
Manage reports	Manage reports	Add a new report, and modify settings, including filters.
Settings	Settings	Change the playback settings for events. Adjust the number of seconds of lead-in and lead-out time.

The subsections below explain how to use the menu functions.

6.4.1 Export

To export search results and save, first, filter search results using the tools in the top panel.

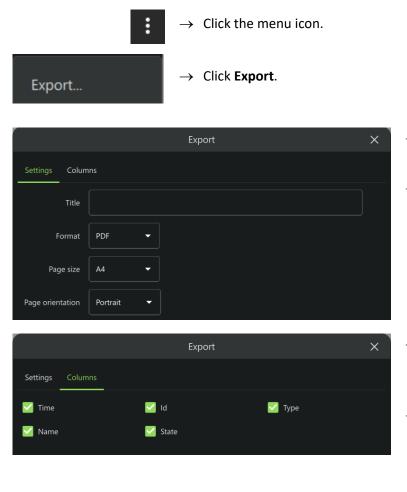


- → In the Settings tab, enter a title for the document.
- → Use the drop-down menus to choose between:
 - PDF and CSV format.
 - A3 and A4 page size.
 - Portrait and landscape orientation.
- → In the Columns tab, choose which columns will show in the document.
- → Uncheck boxes to deselect columns.

The options that appear in this tab will vary according to the integration or database.

 \rightarrow Click **Save as** to export the file.



6.4.2 Manage Reports (Metadatabase Only)

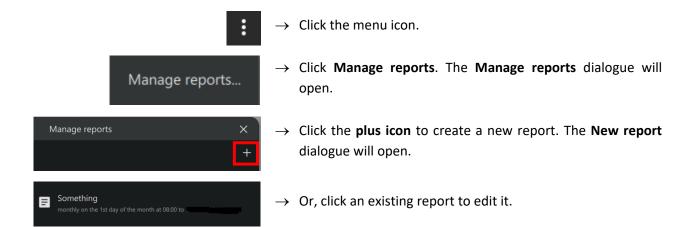

\rightarrow Choose a saved template, or **Blank** Template TEMPLATE report to create a new report. Blank report \rightarrow Click **Next**. \rightarrow Enter a **descriptive name** in the text Settings field. Name \rightarrow Click the **drop-down menu** to choose a view. Note: Options vary depending on View Events the metadatabase. \rightarrow Click the **drop-down menu** to choose a Sorted by Time sorting option. Note: These vary SETTINGS depending on the metadatabase. Title \rightarrow Enter a **title** in the text field. \rightarrow Click the **drop-down menu** to choose PDF Format between PDF and CSV format. Orientation Portrait \rightarrow Click the **drop-down menu** to choose between **Portrait** and **Landscape** page orientation. \rightarrow Click **Next**. When sending a report, a recommended Filter filter is suggested at the top of the new dialogue. Note: The options depend on the FILTER Time is in range last month integration. and \rightarrow Configure the filters as explained in +**Configure Filters.**

6.4.2.1 New Report



	Email	\rightarrow Check the box to select Email report .		
	Email report	Note: Email will only fur if the SMTP configuration been done in CathexisVi Consult the <i>CathexisVisi</i> <i>Setup Manual</i> for more information.	n has sion.	
EMAIL	Send Monthly O 1st - day of the month at 8hr - O min -	→ Click the field to choose the frequencies of reports.	uency	
E	C 1st Sunday of the month at 8 hr 💌 0 min 💌	\rightarrow Choose between date or day of month	of the	
	Email recipients +	→ Use the arrows to set the day/dat time to send reports	e and	
		ightarrow Enter the email subject in the field	d.	
		→ Click the plus icon to add recipients.	email	
		\rightarrow Click OK to complete the setup.		

6..4.2.2 Edit Report

Click an item in the **Manage report** dialogue to edit a report. Here, the information captured in the setup process (above) can be found under the three tabs: Settings, Filter, and Email.

Set	tings I	Filter Email	\rightarrow Click a tab to select it.
	Settings	Filter Email	→ Click any of the fields and edit them as required.
	Name Te	est	\rightarrow Click OK to save changes.
	View		•
SETTINGS	Sorted by		•
SE	Title	test	
	Format	PDF -	
	Orientatior	n Portrait 🔻	



	Settings Filter Email	→ Click any of the fields and edit them as required.
~	Time <i>is in range last month</i>	\rightarrow Click OK to save changes.
FILTER	and Time is in range last month	
	- and	
_	Settings Filter Email	→ Click any of the fields and edit them as required.
EMAIL		\rightarrow Click OK to save changes.
	🗹 Email report	

6.4.3 Settings

The database settings change the timing on the video playback. Lead-in and lead-out time is extra time that plays before and after an event is detected.

Se	ettings			×	—	+
Playback lead-in (sec)	_		+			
Playback lead-out (sec)	_	5	+			
		Cancel		ОК	\rightarrow Clic	< ОК .

Click the **plus and minus icons** to add or remove time (in seconds) to the beginning and end of the video footage.




7. Maps Tab

Maps allow the operator to create maps or view resources in map format.



From the home menu, click the Maps icon to open a new Maps tab.


7.1 Create New Map

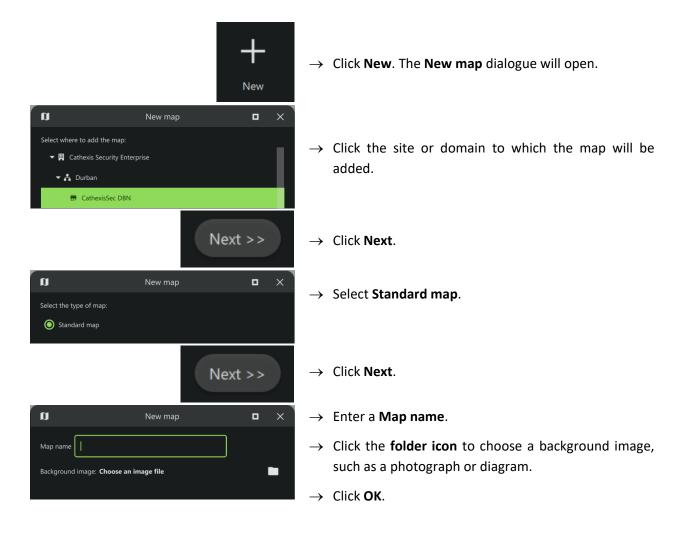



7.1.1 Map Tools: Top Menu Bar

The top panel contains map editing tools that are useful for modifying maps. See <u>Edit Map Appearance</u> for instructions about using the side panel tools to customise individual icons.

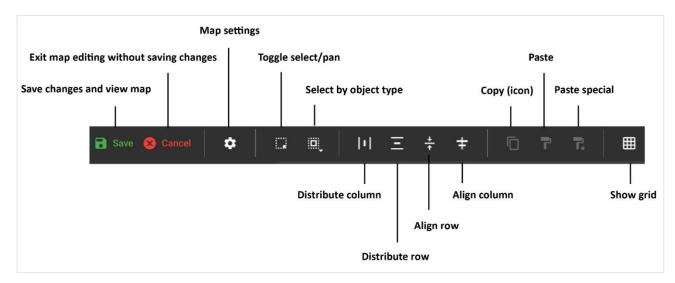

Settings

Click the gear icon to change map name or select a new background image.

Select All by Type



Click this **select all** icon to open a drop-down menu.

Select all
Select all cameras
Select all inputs
Select all layouts
Select all maps
Select all outputs

The menu will adjust depending on map objects.

Click an option to select *all icons* of a particular type.



7.1.2 Add Resources to Map



Once the map has been opened, click the **spanner icon** in the top left to open up editing settings (the map editor).

Note: To view and edit a resource on the map, the user needs *permission*. Permission can be given in the <u>Configuration Tab</u>, by selecting the user, and then the PERMISSIONS tab. Click the drop-down menu on the RESOURCE tab to select the relevant resource, and then use the plus icon to add items. Refer to <u>8.4.4.1 Manage Permissions</u>: Add a Resource to a <u>User</u> for more information.

Additionally, click the GLOBAL tab and check the boxes to edit and delete maps (8.4.4.3 <u>Manage Permissions: Global Tab</u>). Once permissions have been granted, resources will appear in the folder tree on the left side of the map editor in the Maps tab.


7.1.2.1 View Cameras

Axis Lower Veranda WU	→ Open the relevant folder from the list on left-hand side e.g. Cameras.	
	\rightarrow Click a camera in the list.	
	→ Drag and drop the camera to the panel below to view the camera. The selected camera will play in the view screen below.	

 $\rightarrow~$ Zoom in or out with a mouse that has a scrolling tool.

Note: Camera groups cannot be previewed in the Maps tap but can be used in the Monitoring tab.

7.1.2.2 Add Resources to Map

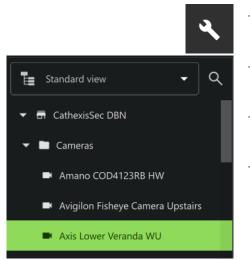

- → Click the **spanner icon** in the top left to open the map editor.
- $\rightarrow\,$ Open the appropriate folder in the folder tree in the left panel.
- \rightarrow Click a resource in the list. Multiple items may be selected.
- → Drag and drop the resource/s from the list onto the background image. The resource will appear as an icon on the map.




7.1.3 Edit Map Appearance



- \rightarrow Click the spanner icon in the top-left corner to open the map editor.
- → Double-click a camera icon on the map to open editing tools for icons. Drawers will appear in the right panel.

7.1.3.1 Layers

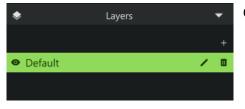

Click the Layers drawer to open it.


- Click the view icon to hide or show cameras.
- Click the edit icon to give the layer a name.
- Click the trash icon to delete the layer, which will remove the cameras from the background image.

7.1.3.2 Basic

*	Basic	-
Opacity	•	100 🔹
Rotation		-24

- \rightarrow Click the **Basic** drawer to open it.
- \rightarrow The default opacity is 100. To modify the transparency of the icon, **slide the switch**, use arrows, or enter digits.
- \rightarrow To **rotate** the camera icon in the direction of the device, **slide the switch**, use arrows, or enter digits.




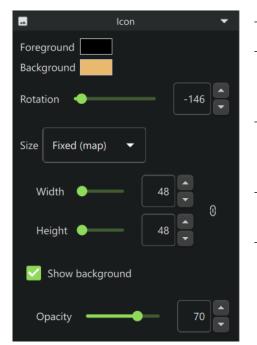


- \rightarrow Click the **Icon** drawer to open it.
- → Select the blocks of colour alongside Foreground and Background to choose new colours for the icons, and surrounding squares.
- → Adjust the size of the icon by selecting options from the drop-down menu, or manually adjusting the width and height using the arrows.
- → Check **Show background** to add a rounded square background around the icon.
- → Adjust the transparency of the square using the Opacity slider.



7.1.3.4 Text

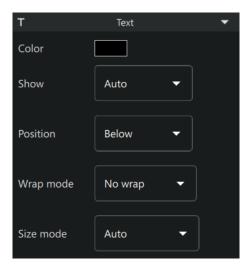

7.1.3.5 Camera (Viewing Area)

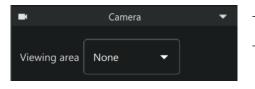

- \rightarrow Click the **Text** drawer to open it.
- $\rightarrow~$ Click the **colour block** to change **text colour**.
- → To edit Display settings, Position, Wrap mode, and Size mode, select from the drop-down menus.

- \rightarrow Click the **Camera** drawer to open it.
- → Click the **Viewing area** drop-down to open further options. This enables a visual representation of the area covered by the camera's vision.
- \rightarrow Select from **None**, **Sector**, **Manual**, or **Fisheye**.

Sector

		_
Viewing area	Sector 🗸	
Color		
Opacity	— •–	63 •
Fill mode	Gradient 🔻	
Angle 🗕		90 ×
Size 🧲	•	200

- \rightarrow Select **Sector** from the drop-down list to depict the camera viewing area.
- → The **opacity**, **fill mode**, **angle**, and **size** of the field can be adjusted.

Manual

Viewing area	Manual 🔻	
Color		
Opacity		63 🗸
Fill mode	Gradient 🔻	

→ Select **Manual** from the drop-down list to adjust the viewing area on the map.

This allows the user to create irregular shapes for the camera view.

 \rightarrow Click a **plus sign** on the map to add a new point. Click and drag a circle to the move the point.



Fisheye




- → Select **Fisheye** from the drop-down list to depict the camera viewing area as shown alongside.
- → The colour, opacity, fill mode, angle, width, and height of the field can be adjusted.

7.1.3.5 Input

7.1.3.6 Outputs



- → Click the Input drawer to open it.
 The default foreground and background colour is black.
- → Click the colour box to change the colour of the icon to indicate **State**. Use colours to represent:
 - State: Unknown
 - State: High
 - State: Low

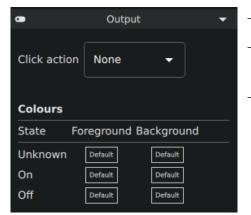

- \rightarrow Click the **Output** drawer to open it.
- \rightarrow Open the drop-down menu to change the click action. The default foreground and background colour is black.
- → Click the colour box to change the colour of the icon to indicate State. Use colours to represent:
 - State: Unknown
 - State: On
 - State: Off


7.1.3.7 Save or Rename Map




- → To save a new map, and to save any changes, click the **save icon** in the top-left of the map editor.
- \rightarrow To change a map's name, click the **settings icon** in the top left of the map editor, edit the name and click **OK**.



7.1.3.8 Choose a New Background Image

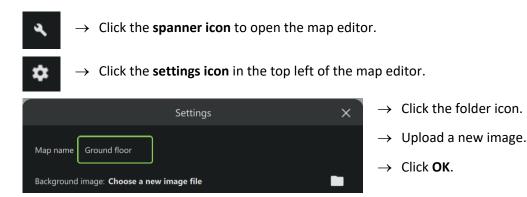

7.1.3.9 Add a New Layer

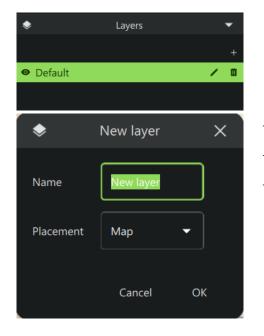

- \rightarrow To add layers to a site, for example, a thirdfloor map, click the **plus sign icon** beneath the Layers menu on the right-hand side of the map editor.
- \rightarrow Enter a **Name** for the new layer.
- \rightarrow Select the **Placement** for the new layer.
- \rightarrow Click **OK**.

+

7.2 Using Maps


7.2.1 **Open Map**




- \rightarrow Click **Open** from the Maps tab home page. The **Open map** dialogue will open.
- \rightarrow Click the file name.
- \rightarrow Click **Open**.



7.2.2 Maps Tab Navigation

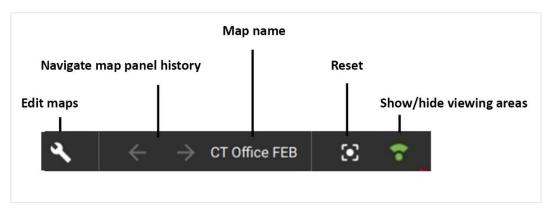

When moving between map views, the map name next to the navigation arrows will change accordingly.

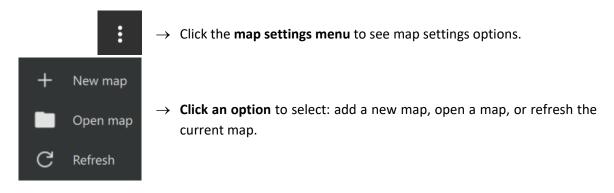

7.2.3 Using Icons

7.2.3.1 Map Icons for Viewing Purposes

Some icons can be placed on the map, but are purely for viewing purposes. The following icons can be placed on the map by dragging and dropping, but do not allow map actions at this time.

ICON	DESCRIPTION
9	VMS event
G	VMS sub-event
(t=	Line crossing sensor
	Metadatabase
Í	Motion sensor
Ť	Presence sensor
	Speed sensor
	Stop in area sensor
	Video databases

7.2.3.2 Map Icon Actions

ICON	DESCRIPTION	ACTION
	Camera	Double-click to view the camera.
	PTZ camera	Double-click to view the PTZ camera.
	Maps/levels	Double-click to redirect to the level or map.
•	Input	Use colours to indicate state on the map.
	Output	Right-click to see properties and to control actions.
	Layout	This icon only performs an action in the Monitoring tab.
	Camera group	This icon only performs an action in the Monitoring tab.

Type of icon	Instructions		
Camera		\rightarrow	Double-click the camera icon. A preview will pop up.
See <u>Camera Tools</u> <u>Menu</u> for information on the features in the right-click (context) menu.	Denser, Adv FIZ (10)	\rightarrow	Use adjacent camera overlays, PTZ control overlays and the timeline as normal. Right-click to see the drop-down (context) menu with view and review features. Scroll along the bar at the bottom of the display panel to move forward or backwards in time/adjust playback.
	⁸ _{oct} 15:19:37	\rightarrow	To adjust time manually, click the date and time and enter the point of playback.
Мар	Durban Office 2	\rightarrow	Double-click map icons to view additional maps/levels. Additional maps/levels will be displayed in the panel.
Input	12.44 m ² Light Switch (I	\rightarrow	Use the map editing tools to set up icon colour changes. View colour changes from the map which represent: State – Unknown State – High State – Low
Output	Flash Green LED	\rightarrow	To control actions on an output, right-click the output icon.
	Switch on Switch off Pulse Toggle	\rightarrow	Choose an action from the drop-down menu and click to select.



8. Configuration Tab



From the home menu, click the Configuration icon to open a new Configuration tab.

The Configuration tab allows users to edit connection settings, organise resources, and to view and edit user roles (access levels) and permissions.

8.1 Navigating the Configuration Tab

There are minor differences in the presentation of the Configuration Tab menu for site, MultiSite, or Enterprise connections.

Q C	fin Home	General Settings Schedules Licenses Installers
▼	Resource management	Number of sites 6 Number of domains 2
🕶 📇 Durban	Resources	
🖬 CathexisSec DBN 1	Resource tree	
First test 23	User management	
MarksTest1	Lusers	
G Second test 543		
Third test	Permission groups	
🕨 📇 StuartTest		
1) Domain panel	2) Menu panel	3) Configuration panel

1	In the domain panel , select the MultiSite or Enterprise installation, a domain, sub-domain, or site to be configured. Note: The domain panel will only be displayed when viewing MultiSite or Enterprise installations.
2	The menu panel comprises the Home Menu, Resource Management, User Management, and Alarms. After choosing an installation, domain or site in the domain panel (1), select the area to be configured (2).
3	In the configuration panel on the right, the operator can configure settings for the options selected in the domain panel and menu panel.




8.1.1 Domain Panel Right-Click Options (MultiSite and Enterprise)

 \rightarrow Right-click the Enterprise, domain or site name in the Domain panel to reveal further options.

▼ III Cathexis Security Enterprise	 New domain New site Active site tokens 	 Enterprise menu: Add a new domain Add a new site View active site tokens
Cathexis MultiSite Organisation	New site Active site tokens	MultiSite menu:Add a new siteView active site tokens
🔻 🕂 Durban	 New domain New site Active site tokens Properties 	 Domain menu: Add a new domain Add a new site View active site tokens Configure properties
CathexisSec DBN 1	123 Set custom ID 123 Clear custom ID 11 Delete site	Site menu: • Set custom ID • Clear custom ID • Delete site

8.1.2 Set Custom ID

Currently, custom resource IDs are only used for control of the Cathexis KBD3000 keyboard. To assign a custom ID to a resource or site:

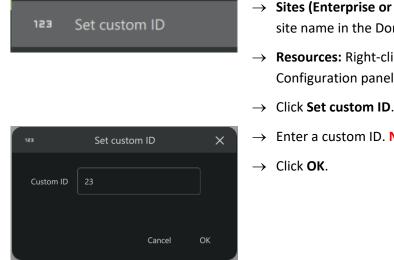


- → Sites (Enterprise or MultiSite connections): Right-click the site name in the Domain panel on the left.
- → Resources: Right-click the resource name in the Configuration panel on the right.
- \rightarrow Click Set custom ID. The Set custom ID dialogue will open.
- \rightarrow Enter a custom ID. **Note**: Custom IDs must be numerical.



8.2 Home Menu

The Home menu options differ between Site, MultiSite and Enterprise connections. The options presented will in the Home menu will differ, depending on which of the following is selected in the Domain panel:

- Enterprise
- A Domain
- A site

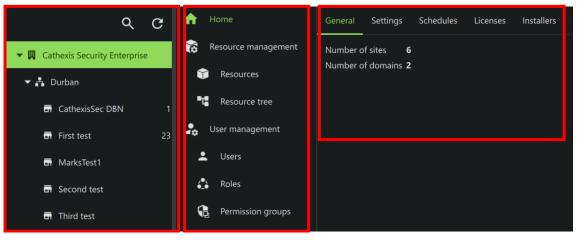

Domain panel

Menu panel


Configuration panel (Tabs)

8.2.1 General



In the configuration panel, select the General tab.

8.2.1.1 Site Selected

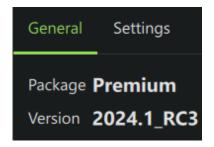

The General tab shows the following information:


- The site's CathexisVision package
- The site's CathexisVision version

8.2.1.2 Domain, Enterprise or MultiSite Selected

General Setting	10	The General tab shows the following information:
	12	• Total number of sites in the domain/Enterprise/MultiSite
Number of sites	6	Total number of domains or sub-domains
Number of domair	ns 2	



8.2.2 Settings

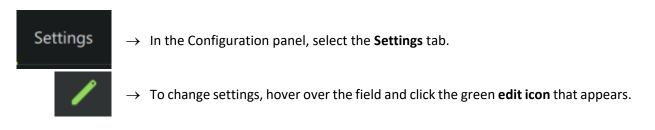

8.2.2.1 LDAP Server (Enterprise Only)

Lightweight Directory Access Protocol (LDAP) makes it possible for applications to query user information rapidly.

LDAP server	Not configured 🧪
	Enable


- \rightarrow Click anywhere in the field (in the right panel) to open the LDAP server settings dialogue.
- \rightarrow Click the checkbox to Enable.

LDAP Server Settings Tab

Settings	Advanced	
Name		
Address		
Login		
Password		
Use SSL		

- → Enter the LDAP server details in the fields: Name, Address, Username and Password.
- \rightarrow Toggle the switch to use SSL.
- \rightarrow Click **Test connection** to test the connection.



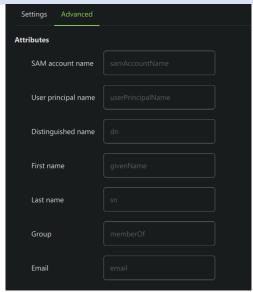

- $\rightarrow~$ Click the Advanced tab to open more settings.
- \rightarrow Enter the text in the fields.
- \rightarrow Click **Test connection** to test the connection.

CATHEXIS

8.2.2.2 Email Server

 \rightarrow Click anywhere in the field (in the right panel) to open the Email server settings window.

Settings Test	
Server name	
Sender email address	
Sender name	
Port	+
Connection Security	SSL/TLS -
Authentication Method	None -
Username	
Password	•••••

Email Server Settings Tab


Note: Identifying information has been redacted from the image alongside.

- → Enter the Email server details in the fields: Server name, Sender email address, and Sender name.
- \rightarrow Use the **plus** or **minus icons** to select the port.
- → Select the connection security: None, SSL/TLS or STARTTLS.
- → Choose an authentication method: None, Normal password, or Encrypted password.
- \rightarrow Enter a username.
- \rightarrow Enter a password.

ОК

Click OK to save changes.

Email Server Test Tab

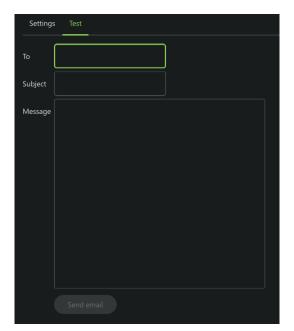

- → Click the Test tab to configure a test email.
- → Enter information in the fields and click Send email.



8.2.2.3 Password Complexity

Set the level of complexity required for the passwords of users in the organisation.

 \rightarrow Select the complexity required for the organisation's passwords.

Very low	Very low. Passwords must contain a minimum of 4 characters.			
Low	Low. Passwords must contain a minimum of 8 characters.			
Medium	Medium. Passwords must contain a minimum of 8 characters, and meet 3 of the following criteria:			
High	- At least 1 upper case			
	- At least 1 lower case			
	- At least 1 number			

- At least 1 symbol

High. Passwords must contain a minimum of 8 characters, and meet *all* of the following criteria:

- At least 1 upper case
- At least 1 lower case
- At least 1 number
- At least 1 symbol




Click to save changes.

8.2.2.4 Default Idle Timeout

The idle timeout is the duration of idle time (user inactivity) after which the session will time out.

Note: The default idle timeout (configured in the Home menu) is a global setting that applies to all users. There is also the option to override this, and change the idle timeout for an individual user. See <u>Default Idle Timeout</u>.

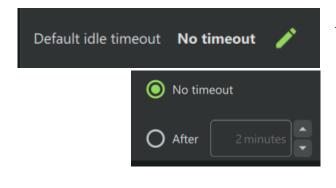

→ Click anywhere in the field to edit the default idle timeout.

 \rightarrow Click the **save icon** to save changes.



8.2.2.5 Push Notifications

Push notifications for CathexisVision Mobile can be sent from a site, MultiSite or Enterprise. The server must be configured first. To enable push notifications, follow the steps below.

Push notifications	Not configured	⋩ →	Click the gear icon.
	Fetch reque	est →	Click Fetch request . Save the file to a location on the machine. Send the request file to Cathexis Support at <u>support@cathexisvideo.com</u> . Support will send back a pack file.
		\rightarrow	Return to the configuration panel in the Configuration tab.
		\rightarrow	Click the gear icon.
		\rightarrow	Click Apply pack . A browser will open displaying the directories.
		\rightarrow	Locate the recently downloaded pack file and select it. Click Open .

 \rightarrow This will enable push notifications.

Consult *CathexisVision Mobile App-note* for instructions on using push notifications in the mobile app.

8.2.2.6 Connection Policy (Sites Connected to MultiSite or Enterprise)

The connection policy for sites connected to MultiSite or Enterprise may be edited.


GathexisSec DBN 1	ightarrow Selec	ct the site in the domains panel.	
n Home	\rightarrow Click	Home in the menu panel.	
Settings	\rightarrow Click	the Settings tab in the configuration panel.	
Connection policy		anywhere in the Connection policy field. The ons for editing will appear.	
Connection policy Manual 🔻	ightarrow Choose between Manual and Auto.		
	Ĝ	For instructions on completing this step of configuring a site's connection to MultiSite or Enterprise, see <u>Complete Configuration of Site Connection in Carbon</u> .	
8	\rightarrow Click	the save icon to save changes.	



8.2.3 Licenses

- \rightarrow Select the site, domain, MultiSite or Enterprise in the domains panel.
- \rightarrow Select **Home** in the menu panel.
- \rightarrow Select the **Licenses tab** in the configuration panel.

8.2.3.1 Site Selected

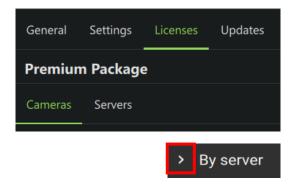


When a site is selected in the domains panel, summaries of licensing information about the site's **cameras** and **servers** are displayed in the configuration panel.

Click the arrow to reveal information about cameras grouped by servers.

8.2.3.2 Domain, Enterprise or MultiSite Selected

GENERAL S		ICENSES							
Site 🔨	Package	Year	MultiSite	Installed cameras	Unlicensed site cameras	Unused site camera licenses	Unlicensed MultiSite cameras	Unused MultiSite camera licenses	Maps
SiteName	Premium	2023	0					Unlimited	9
Webinar Demo	Premium	2023	9	14				Unlimited	9

When a domain, MultiSite installation or Enterprise installation is selected in the Domains panel on the left, the Licenses tab will display information about the licensing on the sites that are registered to that domain, MultiSite installation or Enterprise installation.

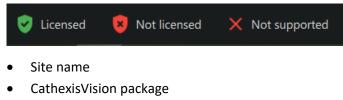


- CathexisVision release year
- MultiSite/Enterprise registration status
- Number of cameras installed
- Number of unlicensed site cameras
- Number of unused site camera licenses
- Number of unlicensed MultiSite/Enterprise cameras
- Number of unused MultiSite/Enterprise camera licenses
- Map support status
- Alarms support status
- Video Wall support status



Right-Click Options	
View site license	 → Right-click a site name. → Click "View site license". A new dialogue will open. The new
Copy cell value	 dialogue has two tabs, which show summaries of licensing information about the cameras and servers. → Click "Copy cell value" to copy the cell text to the clipboard.

8.2.4 Schedules (MultiSite or Enterprise)

- \rightarrow Select the MultiSite or Enterprise in the domains panel.
- \rightarrow Select **Home** in the menu panel.
- \rightarrow Select the **Schedules tab** in the configuration panel.

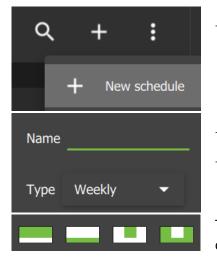

- → To create a new schedule, either click the plus icon in the topright corner or click the kebab icon and select New schedule.
 The New schedule dialogue will open.
- \rightarrow Enter a name for the new schedule.
- \rightarrow Select the type of schedule.

There are several schedule templates to choose from. The schedule can also be edited manually.

→ Click with the left mouse button to set a segment in the schedule. Right-click a segment to clear it. (Green = set, white = cleared.)



Each segment represents 15 minutes.

CANCEL OK

- \rightarrow Click Cancel to cancel the creation of a new schedule.
- \rightarrow Click OK to save the new schedule.



8.2.5 Site Updates (Enterprise Connections Only)

It is possible to upload installers on an Enterprise, and distribute and install the software across many sites.



Note: Administrators can select which users have the access rights for uploading installers to the Enterprise. This permission can be set for a user in the Configuration tab / Users / Right-click user / Properties / Permissions / Global (Refer to Manage Permissions: Global Tab for instructions on how to do this.) The following instructions assume that the user has the necessary permissions to view and edit updates in Enterprise.

- \rightarrow Select the Enterprise in the domains panel.
- \rightarrow Select **Home** in the menu panel.
- \rightarrow Select the **Installers tab** in the configuration panel.

8.2.5.1 Supported Installers

This feature currently supports the following installers:

- Carbon client software (desktop app)
- CathexisVision server software (NVR)
- CathexisVision client software

8.2.5.2 Register for Site Updates

Before using the site updates feature, software must first be registered to a main site, which in turn is connected to an Enterprise. The table below contains instructions on how to register for site updates for each type of software.

Carbon (client software)	Carbon client software must be registered with a site. To do that:
	→ Open the computer's Start menu and navigate to the CathexisVision Carbon Updates app. It can be found in the Cathexis folder.
	Cathexis ^
	O CathexisVision Carbon
	CathexisVision Carbon Archive Player
	CathexisVision Carbon Monitor
	L CathexisVision Carbon Updates
	\rightarrow Open the app. The CathexisVision Carbon Updates window will open.



	\rightarrow Click Yes .
	Register for updates from site? Yes
	→ Enter the server address, username, and password of the site to which the Carbon client software is being registered.
	\rightarrow Click Register .
	 Server Address Login Password Register
CathexisVision	CathexisVision server software will be registered automatically.
(server software)	• The software on the main site server or failover server will be tagged as the "master" (primary) server in the Updates tab (in the Carbon Configuration tab).
	• Slave (secondary) servers will register to the master server automatically, and will appear as a server listed under the main site in the Updates tab (in the Carbon Configuration tab).
CathexisVision	CathexisVision client software must be registered with a site. To do that:
(client software)	→ Open the computer's Start menu and navigate to the CathexisVision Client Updates app.
	ightarrow Open the app. The CathexisVision Client Updates window will open.
	\rightarrow Click Yes.
	Register for updates from site? Yes
	→ Enter the server address, username and password of the site to which the CathexisVision client software is being registered.
	\rightarrow Click Register .
	Server Address Login
	Password
	Register




8.2.5.3 Perform Site Updates

Once the software has been registered for site updates, it can be updated. Follow these steps to perform site updates:

- 1. Upload the installer to the Enterprise.
- 2. Update the target software by sending the installer from the Enterprise to a site.

1. Send Installer to Enterprise

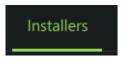

- \rightarrow With the Enterprise selected in the Domain panel, and the Home menu selected in the Menu panel, select the Installers tab.
- → To add an installation file to an Enterprise, click the plus icon. The Send installers to Enterprise dialogue will open.

File name:	~	CathexisVision Installers		
		Open	Cancel	

 \rightarrow Select the installation file and click **Open**.


▲ Active transfers		•
CathexisVision-Server-2024.1_RC2-x6	·	×

Note: Navigating away from the updates view during an upload to the Enterprise will cancel the upload.

2. Send Installer to a Site

After the installer has been uploaded to the Enterprise, the target software can be updated immediately, or at a later point. The method chosen will depend on the site's operational requirements. Either:

- A) Send the installer to the site for later use, OR
- B) Send the installer to the site to update one of the site's connected clients immediately.

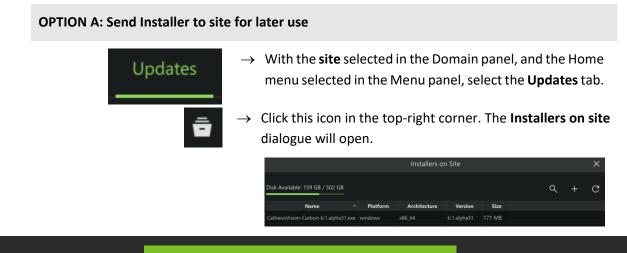





To add an installation file to a site, click the plus icon in the **Installers on Site** dialogue. The **Send installers to Site** dialogue will open, showing the installers that have been uploaded to the Enterprise.

Send Installers to Site								
Disk Available: 159 GB / 502 GB		Q						
Name ^	Platform	Architecture	Version	Size				
CathexisVision-Carbon-6.1.alpha25.exe	windows	x86_64	6.1.alpha25	851 MB				
CathexisVision-Carbon-6.1.alpha31.exe	windows	x86_64	6.1.alpha31	171 MB				
CathexisVision-Carbon-6.1.beta1.exe	windows	x86_64	6.1.beta1	171 MB				
CathexisVision-Carbon-6.1.beta7.exe	windows	x86_64	6.1.beta7	178 MB				
CathexisVision-Carbon-6.1.rc1.exe	windows	x86_64		168 MB				
					Cancel	ОК		


ОК

Select an installer from the list and click OK. The installer will be added to the site for later use. The number of installers that can be added to a site will depend on the site's available storage.

Note: To select multiple items, use *SHIFT+Click*. To select all items, enter *CTRL+A*.



OPTION B: Send installer to site to update software immediately

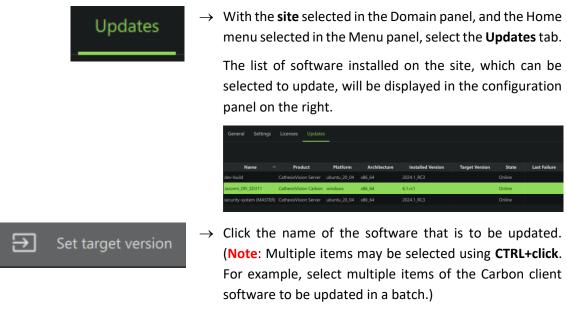


 \rightarrow Right-click and select **Set target version**.



The Send Installer to Client dialogue will open, showing the available installers on site and on the Enterprise.

	Send Installer to Client		×
Installers on Site			
6.1.beta7			
6.1.alpha31			
Installers on Enterprise			
6.1.beta7			
6.1.beta1			
6.1.alpha31			
		Cancel	



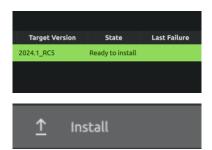

8.2.5.4 Reboot Machine

- Updates Ð Set target version (Reboot Copy cell value Client Reboot Request clients to reboot? No Yes
 - \rightarrow With the **site** selected in the Domain panel, and the Home menu selected in the Menu panel, select the Updates tab.

The software state will change to "Ready to install".

 \rightarrow Right-click the name of the software in the list. Click


- \rightarrow Right-click a machine name from the list.
- → Select **Reboot**. The **Client Reboot** pop-up will open.

\rightarrow Click **Yes** to agree.

Install.




8.2.5.5 Clear Target Version

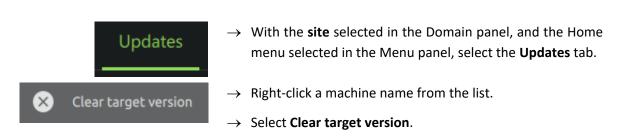

8.2.5.6 Set Carbon Version for Connected Clients

It is possible to set the Carbon version for all Carbon clients that are connected to the Enterprise. These Carbon clients will then be updated whenever updates are available. The versions available are based on the versions of Carbon that have been uploaded to the Enterprise.

To set the Carbon version, follow these steps:

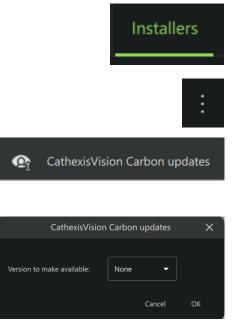

- → With the Enterprise selected in the Domain panel, and the Home menu selected in the Menu panel, select the Installers tab.
- → Click the menu icon in the top-right corner. A dropdown will open.
- → Click CathexisVision Carbon updates.

The **CathexisVision Carbon updates** dialogue will open.

→ Click the arrow to view the options and click to select one.

If **None** is selected, Carbon clients will not be required to update.



8.3 Resource Management

The Resource Management area allows the operator to organise cameras into resource groups.

- Groups will be added to the folder tree.
- Groups can be opened in the Monitoring tab to view cameras easily.

The Resource management menu also allows operators to switch to manual configuration of the folder tree/resources.


8.3.1 Resources



Camera groups can be created and edited here. The list can be searched and filtered according to resource type. Maps can be deleted.

Resource icons

All resources will appear in a list on the main panel. The type of resource is indicated by an **icon** next to the resource name.

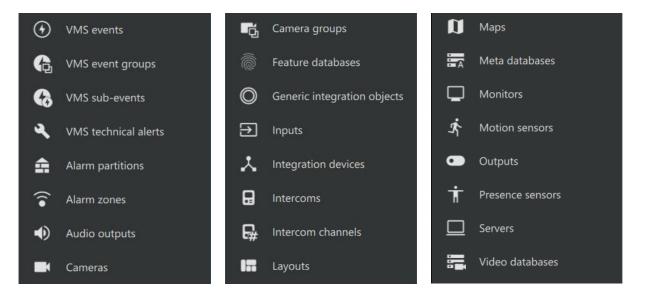

Navigation

٩	Search icon	Search resources.	+	Plus icon	Add New camera group, new VMS event group, new monitor or new video wall.
T	Filter icon	Select Resources to view.	:	Menu icon	Show resources in sub- domains or refresh.




8.3.1.1 Add Camera Group to Resources

	\rightarrow Select Resources in the left panel.
+	→ Click the plus icon at the top-right of the screen.
ြာ New camera group	\rightarrow Select New camera group.
📑 New camera group 🗙	\rightarrow Give the group a descriptive name .
Domain Cathexis Security Enterprise	
Group of Cameras	
Name Doc Team Test Camera Group Cancel OK	→ Click OK . A new dialogue will open.
Name Doc Team Test Camera Group +	→ Click the plus icon to add a camera to the new camera group.
Select cameras to add	Available cameras will show on a list.
Show resources in sub-domains Q Name Domain Aisle 2 - Cosmetics First test Aisle 5 - Meat Second test	Click the search icon to find a camera by name. \rightarrow Click the cameras to select. These will be
Aisle 7 - Tinned food First test Aisle 7 - Tinned food Second test	added to the new camera group.
Aisle 8 - Fruit and veg Second test	<i>Ctrl+click</i> : select multiple cameras independently.
	Shift+click: select multiple cameras sequentially.
	\rightarrow Then click OK .
Name Doc Team Test Camera Group +	The cameras that have been added will display in a list.
Name Domain Server Aisle 7 - Tinned food First test Aisle 8 - Fruit and veg Second test	Click cancel to exit and return to the Resource Management section.
	Changes will save on exit.


8.3.1.2 Edit or Remove Camera Group

→ Select **Resources** in the left panel. All resources, including camera groups, will appear in a list on the main panel.

- → Click a **resource group** from the list in the main panel to select it. Resource groups are indicated by the **groups icon**.
- \rightarrow Double-click the resource group.

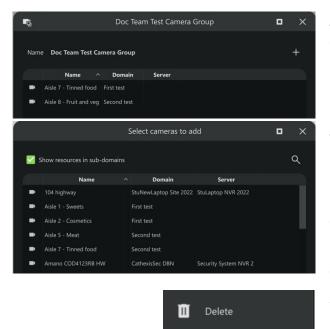

8.3.1.3 Create New VMS Event Group

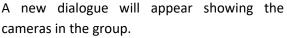

+ Click the **plus icon** from this window to add an item to the group.


Another dialogue will open.

- Click the **search icon** to find a camera by **name**.
- → Click a camera to select, or use Shift+click / Ctrl+click to select multiple cameras.
- \rightarrow Click **OK**.
- → To delete a camera group, right-click an item and click Delete.



- \rightarrow Click the **plus icon** at the top-right of the screen.
- → Select **New VMS camera group**.
- \rightarrow Give the group a descriptive **name**.

- \rightarrow Click **OK**. A new dialogue will open.
- → Click the plus icon to add a VMS event to the group.

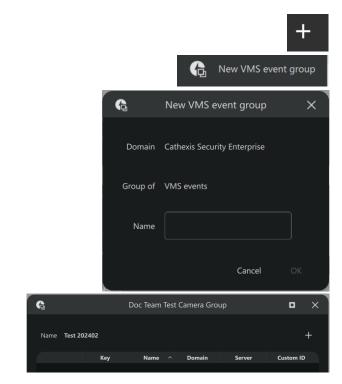

ť



	Select VMS events to add							
	Show resources in sub-domains							
		Name		Domain	Server			
		Aasset 360 VMD		CathexisSec DBN	Security System NVR 2			
C) ,	Alarm event		CathexisSec DBN	Security System NVR 1			
٠		Always disarm area 2		CathexisSec DBN	Security System NVR 1			
•)	Axis Demo Room		CathexisSec DBN	Security System NVR 1			

→ Use *Ctrl+click* or *Shift+click* to **select items** from the list.

Use the search tool to narrow down results if necessary.


 \rightarrow Click OK.

The newly-added events will reflect in the panel.

8.3.1.4 New Monitor or New Video Wall

For more information on configuring monitors and video walls, see Video Walls Tab.

8.3.1.5 Search and Filter Resource Groups

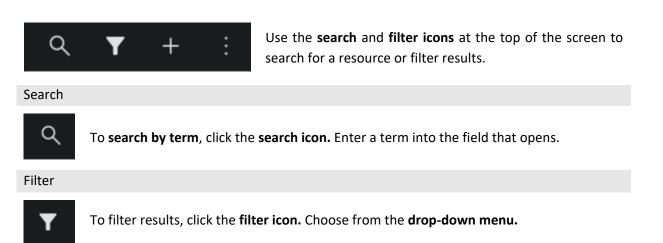

8.3.1.6 Delete a Resource

	\rightarrow	Click Resources.
II Delete	\rightarrow	Right-click the resource item on the list. This will bring up the option to Delete.
	\rightarrow	Click Delete.

8.3.1.7 Show Resources in Sub-Domains (MultiSite and Enterprise)




The resources of sub-domains will now be shown in the panel on the right.



8.3.2 Resource Tree: Auto or Manual Configuration (Sites and Enterprise)

Users can change the resource tree settings to manual configuration of the folder layout.

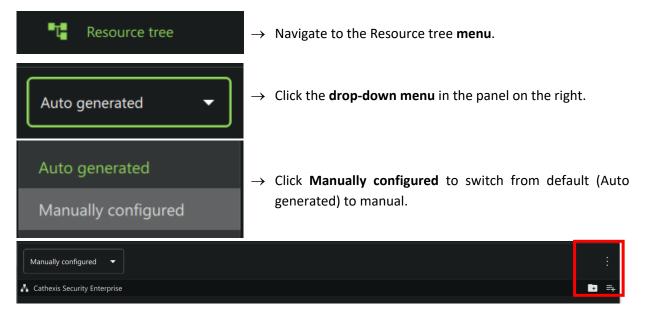

More configuration options will appear.



Advanced settings (8.3.2.1)



Add folder (8.3.2.2)



Add resource (8.3.2.3)

8.3.2.1 Manual Configuration: Advanced Resource Tree Settings


Use the Advanced settings to change default locations of the folder.

 \rightarrow Select **Advanced**. A dialogue will open. → Hover over the **Unassigned resources** or Imported resource view field to activate. Default locations Unassigned resources Default \rightarrow Click the edit icon to select. → Click **Default** to open the **drop-down** Unassigned resources Default menu. \rightarrow Select an option from the drop-down menu. \rightarrow Click the save icon when finished. Ð × \rightarrow Or, click the cancel icon to exit without changes.

 \rightarrow Click the menu icon.



8.3.2.2 Manual Configuration: Add Folders

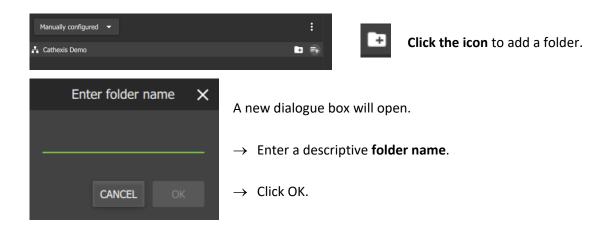


8.3.2.3 Manual Configuration: Add Resources



The Add resources dialogue will appear.

Ì	Add resources					×	
					۹	Ŧ	:
	Name		Domain				
	A) Road Office Driveway		Webinar Demo				
	B) Front Parking Lot(axis)		Webinar Demo				
-	C) Front Door Entrance		Webinar Demo				
	D) Lower Veranda		Webinar Demo				

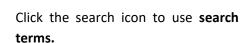

Click to filter icon to sort results:

- All
- Cameras
- Layouts
- Resource groups
- Maps.
- Click the menu icon for the option to enable or disable the **Hide resources** checkbox.

8.4 User Management (Users)

luser management					
÷	Users				
.	Roles				
G	Permission groups				

Access rights can be added or changed for users in several ways in the User Management section. **Note**:


- The presentation of these options may differ among Site connections, MultiSite and Enterprise.
- Options presented will also depend on the user's access rights.
- Users may only be added to or removed from the top-level domain in MultiSite.

Users	The Users section allows resources to be added to individual users. It also allows permissions for individual users to be managed.
Roles	Alternatively, access can be managed by allocating Roles to users.
Permission groups	Permission groups are groups of like resources which can be added to a User or Role. This means that permissions for multiple similar resources can be edited at once. Permissions for the permission group must be edited in the Users or Roles sections.



Note: New users for Site connections must be added in CathexisVision. To do so, navigate to **Site/Open tab/Setup** and select the Users icon. Consult the **CathexisVision Setup Manual** for more information.

1. Navigate to Users

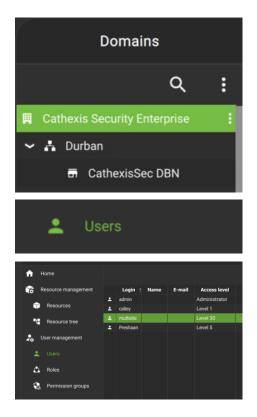

In the Domains panel: Select the installation, domain or site.

In the Menu panel: Click Users.

In the Configuration panel: The list of users will be displayed in the panel on the right.



2. Then, open User properties to manage the following:

Site roles

connections.

Settings Change User Details (8.4.2)

Edit Site Roles (8.4.3)

Note: The Site Roles option will only appear in MultiSite

Permissions Manage User Permissions (8.4.4) Inherited roles Manage Inherited Roles (8.4.5)


See instructions below.

8.4.1 Add, Delete or Disable a User (MultiSite and Enterprise Only)

It is possible to:


- Add a new user to a domain, a sub-domain, a MultiSite, or an Enterprise.
- <u>Disable or delete a user</u> from a MultiSite or Enterprise.

8.4.1.1 Add a New User

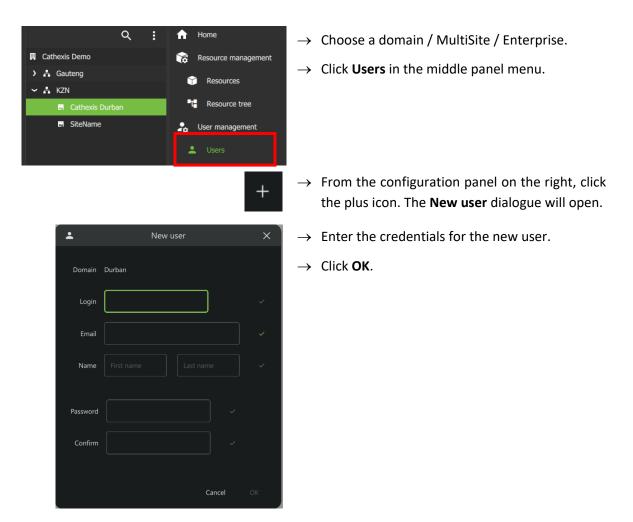



8.4.1.2 Disable or Delete a User

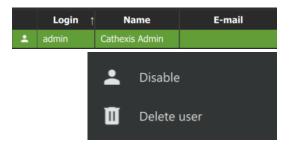


 \rightarrow Right-click the user name.

Disable: Click to disable the selected user.

Delete user: Click to delete the selected user.

8.4.2 Change User Details: Settings Tab

The name and surname of an existing user can be changed. To do that:

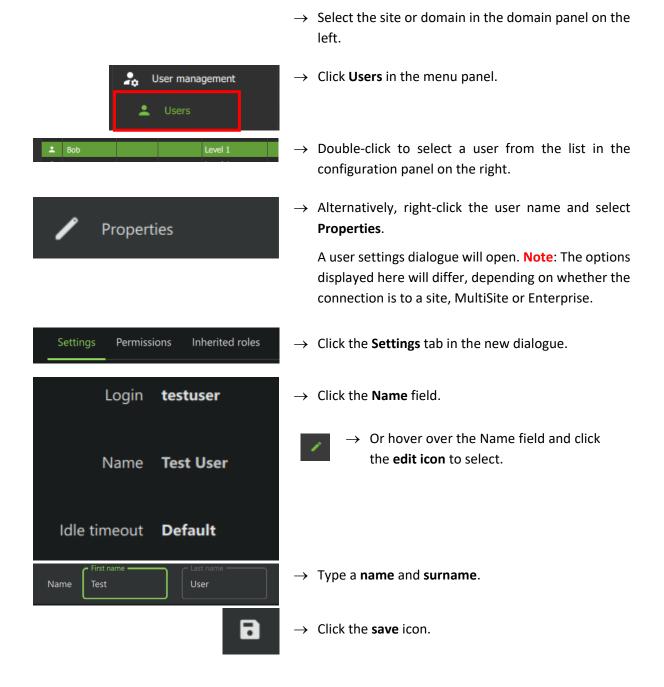




8.4.2.1 Default Idle Timeout

In addition to configuring a default (global) idle timeout, it is possible to configure a default idle timeout period for individual users.

Default idle timeou	ut No timeout 🧪
🔘 No time	out
O After	2 minutes

- \rightarrow Click anywhere in the field to edit the default idle timeout for the individual user.
- $\rightarrow~$ Select the desired delay.

8.4.3 Site Roles (MultiSite Only)

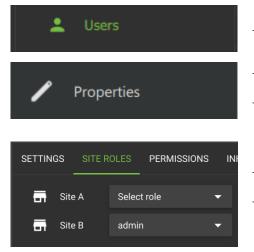

The Site Roles for MultiSite users can be edited.

- \rightarrow Click on Users in the Menu panel.
- \rightarrow Double-click to select a user from the list.
- → Alternatively, right-click the user name and select Properties. The user settings dialogue box will open.
- \rightarrow Click on Site roles.
- $\rightarrow\,$ Edit the roles assigned to the user according to each site registered with the MultiSite.




8.4.4 Manage User Permissions

For a user to access resources (such as cameras, maps, inputs, outputs and databases), resources can be added to a user profile. Thereafter, permissions should be managed using the checkboxes.


Note: Alternatively, a user may gain access as a result of inheriting a Role, which grants access to a suite of functions associated with the role.

8.4.4.1 Manage Permissions: Add a Resource to a User

1. First, select the **resource type** to be added to a user.

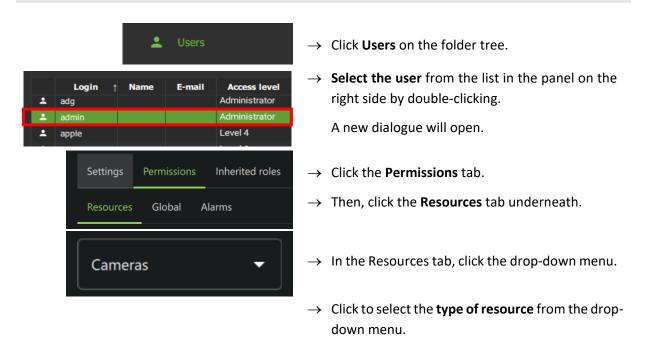

2. Then, add the resource.

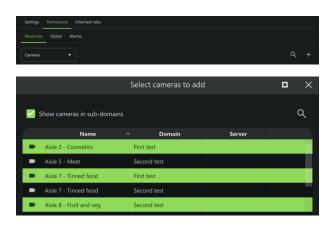

- \rightarrow From the PERMISSIONS tab, click the **plus icon** to add a resource to the user.
- → Click the items (e.g. cameras) to select and add.

Multiple resources may be selected using Shift+click /Ctrl+click.

A permission group consisting of multiple items can also be added here if it has been created.

 \rightarrow Click **OK**.

Once resources have been added, manage permissions/ access from the **PERMISSIONS** tab by using the **checkboxes.**



8.4.4.2 Manage Permissions: Modify Permissions for a User

Permissions for various functions can be given to or removed from individual users. Permissions for resources already added to a user's profile can be managed by using checkboxes. Permission options differ for each resource. The following functions can be managed from the **PERMISSIONS** tab:

Function	Description - The user has permission to:
View	View the selected resource. If it is a camera, permission is given to view the camera
VIEW	in live mode.
Review	Review and search recorded footage from the camera.
Export	Export segments of video footage to another location, either from the archive
Export	builder or from the video database.
PTZ	Operate the PTZ control using the overlay in the display or the PTZ menu.
Presets	Create or modify a preset on a PTZ camera.
Control	Control an output on a map.
Edit	Edit maps.
Manage views	Change and customise views in a metadatabase.
Manage reports	Create metadatabase reports.





- → Check or uncheck the boxes to add or remove permissions.
- \rightarrow Click the tick or cross buttons along the top to check or uncheck **all items** in a column.
- → Right-click an item/resource for options to add or remove all permissions, or to delete the resource.
 Note: Multiple users can be selected.

8.4.4.3 Manage Permissions: Global Tab

Global settings define user permissions for actions unrelated to individual resources, such as configuration.

	Settings	Permissions	Inherited roles	\rightarrow	Click	the	GLOBAL	tah	to
	Resources	Global	Alarms	_			obal settir		10
Configuration Administrator Create site tokens Dashboard Developer Maps Add maps Delete maps Updates Manage installers Manage sites				\rightarrow		odify (ncheck th global sett		



8.4.4.4 View Permissions for a User

For some users in direct site connections, a summary of permissions/access can be viewed.



- \rightarrow Double-click the user name to open the properties.
- → In the SETTINGS tab, double-click the field next to Access level e.g. Level 1. A view-only screen will open, showing the user's access permissions.

To edit permissions, use the **Permissions** tab and follow the steps in <u>8.4.4.2 Modify Permissions for a User.</u>

8.4.4.5 Manage Permissions: Alarm Tab (MultiSite and Enterprise)

Settings Perm	issions Inherited roles	→ Click the Alarms tab to set the alarm permissions for the selected user.
Resources Glo	obal Alarms	
	View Administrator Domain ✓ × Administrator ✓ × View ✓ ×	Q + Handle all alarms ✓ × ☑ ✓ ×
	Select an alarm module above to configure	e alarm permissions
	+	\rightarrow Click the plus icon to add an alarm manager.
	Grant all	→ Right-click an alarm module to view further options:
	Revoke all	- Grant all (permissions)
	Remove	Revoke all (permissions)Remove alarm module
↑ Name -∠ Default alarm mod	Domain ule Cathexis Security Enterprise	→ Click an alarm module to select it. The alarms for the selected module will display below.
	Alarms for 'Default alarm module'	\rightarrow Check or uncheck permissions as desired.
Name Domain ☆ Motion Cathexis Security En ☆ Paradox Cathexis Security En ☆ Technical alarms Cathexis Security En ☆ Recording failure Cathexis Security En	terprise Z V X terprise Z V X	 Click the plus icon to add an alarm. Click the search icon to search alarms.

Note: On MultiSite, the alarm module is created automatically. On Enterprise (Linux) the alarm module is created by running a script.



8.4.5 Manage Inherited Roles

Select Inherited Roles to add a role to a user or remove a role from a user.



- \rightarrow Click **Users** to view users in a list.
- → Select the user from the list in the configuration panel by double-clicking. A new dialogue will open.
- \rightarrow Select the **INHERITED ROLES** tab.

8.4.5.1 Add a Role to a User

			+
	Selec	t roles to add	×
	Show roles in sub-domains		م
	Name	↑ Domain	Global
۵	All public cameras	Cathexis Demo	~


Click the plus icon to add a role. A dialogue will open, showing available roles.

Select a role to add to a user. (Multiple items may be selected using Shift/Ctrl+click.)

 \rightarrow Click **OK**.

The added roles will reflect in the Inherited roles tab.

8.4.5.2 Remove a Role from a User

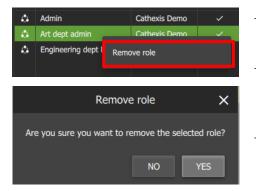

- → In the **Inherited roles** tab, right-click a role. **Note**: Multiple roles may be selected.
- \rightarrow Select **Remove role**.
- \rightarrow From the new dialogue, click YES to confirm.



8.5 Roles

This section details how to create or model a role. **Note**: For instructions about how to *assign a role* to a user, see <u>Add a Role to a User</u>.

Use the instructions below to *create or modify the role itself*. For example, create roles for managers, day staff, and night staff, by allocating different access levels to each role. The role can then be assigned to one user or many users. Users' access permissions for Carbon will then be determined according to roles.

8.5.1 Create a New Role

	🔒 Roles	 In the Menu panel, navigate to User management. → Click Roles. + → From the Roles section, click the plu the right-hand side to add a new Role 	s ico	n on
4	New role X	\rightarrow Enter a Name for the role.		
Domain	Cathexis Security Enterprise	\rightarrow Click OK .		
Name		A new window will open.		
	Cancel OK			
4		Test2403		×
Settings	Permissions Inherited roles			
Name	Test2403			


- \rightarrow Use the **Permissions tab** to add resources to the Role, such as access to view cameras and outputs.
- \rightarrow Use the **Global tab** to give access to other functions not related to resources, for instance, configuration.

See <u>Modify a Role: Permissions</u>, below, for instructions on how to add resources or change access to global functions.



8.5.2 Modify a Role


Roles can be associated with users. Users' access permissions will then be configured according to roles.

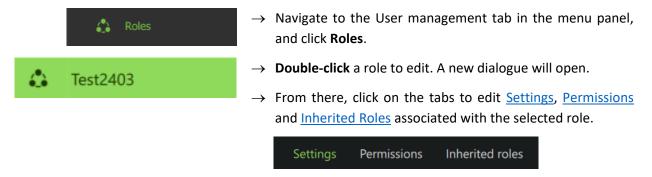

8.5.2.1 Modify a Role: Settings



8.5.2.2 Modify a Role: Permissions

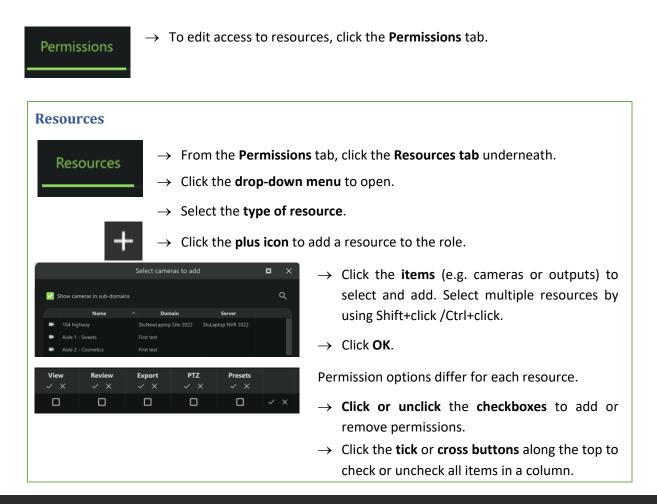



Global Permissions

Global

 \rightarrow Click the **Global tab** to manage global settings.

Global settings define user permissions for actions unrelated to individual resources, such as configuration. Global permissions apply to a domain and its sub-domains, and are not tied to specific resources. The permissions are multi-level, because this allows finer-grained permissions to be added, if required.

→ **Check** or **uncheck** the boxes to modify global permissions.

Global Permission	Description (the user has permission to do the following)
Configuration	Access to the Configuration Tab. Within the Configuration Tab, the user has access to different functions based on the 'Administrator' and 'Create site tokens' permissions.
Administrator	Access to all of the configuration.
Create site tokens	Permission to create site tokens for adding new sites. (Application example: Grant a 'lower-level' user permission to create site tokens so that sites can be added to an Enterprise, without granting that user access to all the other configuration.)
Dashboard	Access to the Dashboard and Hardware tabs.
Developer	Access to developer diagnostics.
Add maps	Permission for a user (without configuration access) to create maps.
Delete maps	Permission for a user (without configuration access) to delete maps
Updates	Permission to perform site updates.
Manage installers	Permission to manage installers added to the Enterprise.
Manage sites	Permission to add or remove sites.

8.5.2.3 Modify a Role: Inherited Roles (Add a Role to Another Role)

	Inherited roles				
			+		
	Select roles to add		×		
✓ Show roles in sub-don	nains		م		
Name ^	Domain	Global			
🗘 Admin	Cathexis Security Enterprise				
Alarm administrator	Cathexis Security Enterprise				
Remo	ve role				


Use the **Inherited roles** tab to add or modify inherited roles. Here, it is possible to *add* a role to *another role*.

- \rightarrow To add one role to another role, click the plus icon. The Select roles to add dialogue will open.
- \rightarrow Select a role from the list.
- \rightarrow Click OK.
- \rightarrow To remove an inherited role, right-click it.
- \rightarrow Click **Remove role**.



8.6 Permission Groups (Sites and Enterprise)

Permission groups can be viewed, added or edited from the configuration menu.

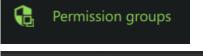

- $\rightarrow~$ Select the site or Enterprise in the folder tree in the Domains panel.
- $\rightarrow~$ Click **Permission groups** in the Menu panel.

 ↑ Home
 Name
 Global

 Image: Resource management
 All Durban cameras
 ✓


 Image: Resource tree
 All Durban cameras
 ✓

 Just resource tree
 Just resource tree
 ✓

 Image: Resource tree
 ✓
 ✓

 Image:

Existing groups will be listed in the main panel.

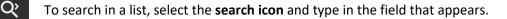

Click the **plus icon** to add a new permission group.

Click the **menu icon** to add a new group, to change view to display group's sub-domains, or refresh.

8.6.1 Create a New Permission Group

Permission groups are groups of like resources that can be added to roles or users.

- For example, create an outputs permission group with a selection of chosen outputs.
- Then add this group to a role or to an individual user.
- This user/role with then have the configured permissions (view/control) these outputs.




:

Select the **plus icon** to add a new group;



Or, select the menu icon on the top right panel and choose **New permission group** from the **drop-down** menu.

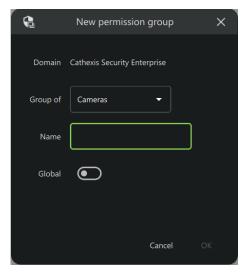

- \rightarrow Give the group a **descriptive name**.
- \rightarrow Toggle the switch to enable or disable global settings.
- \rightarrow Click the arrow/"Cameras" to select the type of resources to be added to the group.
- \rightarrow Choose a resource from the drop-down menu.
- \rightarrow Click OK to finish.



8.6.1.1 Create a New Permission Group: Settings

Settings	Resources
Group of	Cameras
Name	Test 240301
This group is	only available to roles in this domain Make global

 \rightarrow From the **Settings tab**, select the fields to edit the type of resource or group name.


Click **Make global** to make the group available to roles in higher domains.

8.6.1.2 Create a New Permission Group: Resources Tab

Settin	gs Resources					
						Q +
	Key	Nam	ie ^ C	omain	Server	Custom ID
Select cameras to add						• ×
Show resources in sub-domains						م
	Name ^	Domain	Server			
-	Aisle 1 - Sweets	First test				
	Aisle 2 - Cosmetics	First test				
	Aisle 7 - Tinned food	First test				

 \rightarrow Click the **Resources** tab.

Make global

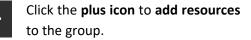

A list of available resources will open, according to the type selected.

→ Click items to select from the list. (Select multiple items using Ctrl+click or Shift+click).



Click the **search icon** and enter a **search term** to filter results.

→ Left-click a resource and select OK to add the resource to the group.

This group can now be added to a user or role. This enables all items in the group to be modified *at one time* when adding or editing permissions (e.g. control PTZ).

8.6.2 Edit a Permission Group

→ **Double-click** a group on the list in the main panel to edit settings and resources. A dialogue will open.

Settings	Resources	\rightarrow Clic	ck the Settings tab.
		1	Hover over the group name until the edit icon appears.
		ightarrow Edi	t the name by entering text in the field.
			Click the save icon to save changes.
Settings	Resources	ightarrow Clic	ck the Resources tab. The resources in the group will be listed.
		+	Click the plus icon. A dialogue will open with a list of resources, according to the type selected in the Settings tab.
		Q	Click the search icon and enter a term to filter results.

 $\rightarrow~$ Click a resource and click \mathbf{OK} to add the resource to the group.



8.7 Alarms (MultiSite and Enterprise)

Alarms can be viewed, added or edited from the configuration menu.



- $\rightarrow~$ Select the site or Enterprise in the folder tree in the Domains panel.
- \rightarrow Click **Alarms** in the Menu panel.

Existing alarms will be listed in the Alarm tab of the configuration area.

8.7.1 Alarms

Alarn	ns Tags Proce	edures	
			Q + :
	Name ^	Domain	
*	Blue alarms	Cathexis Security Enterprise	
*	Doc Team Test	Cathexis Security Enterprise	
*	Motion	Cathexis Security Enterprise	
*	Paradox	Cathexis Security Enterprise	
*	Recording failure	Cathexis Security Enterprise	
*	Technical alarms	Cathexis Security Enterprise	
: נ ו	_	e cell value e alarm	→ To delete an alarm, right-click it and click Delete alarm .
		م	To search the alarms, select the search icon and type in the field that appears.
		+	Select the plus icon to add a new alarm.
		÷	Select the menu icon to add a new alarm, or to refresh the alarm list.



8.7.2.1 New Alarm

* -		New alarm	•	×	
Domain Cathex	is Security Enterprise				
Name					
Priority Critical	· ▼				
Colour Default	•				
Procedure No pro	ocedure 🗸				
Schedule	•				
Triggers			Q +	۵	
inggers	Key Name ^	Domain Server (Custom ID		
			Cancel	ок	
	\rightarrow Click the a	nrow to view furth	er options f	or each	n category
•	,				
Domain	ightarrow Click the c	lomain field. The S e	elect domai	n dialc	ogue will open.
	ightarrow Select the	domain or site.			
	\rightarrow Click OK .				
Name	ightarrow Enter a na	me for the alarm.			
Priority	\rightarrow Select a p	riority.			
	Critical				
	High				
	Medium				
	Low				
Colour	\rightarrow Choose a	colour for the icon	assigned to	the ala	arm.
_					
Procedure		rocedure to the ala	arm.		
Schedule	\rightarrow Choose as	schedule.			



Triggers	+	\rightarrow	Click the plus icon to add a trigger to the alarm. This will open the Add triggers dialogue.
		\rightarrow	Click a trigger to select it. To select multiple triggers, Ctrl+click or shift+click.
		\rightarrow	Click OK to save changes.
	Ū	\rightarrow	To delete a trigger, select it, then click the delete icon.

8.7.2.2 Edit Alarm

Name ^	Domain
Doc Team Test	Cathexis Security Enterprise

 \rightarrow To edit an alarm, double-click it. This will open the **Edit** alarm window.

8.7.2 Tags

It is possible to create tags, which can be added to alarms when they are handled in the Alarms tab.



8.7.2.1 Edit Tag

 \rightarrow Double-click the name of a tag. This will open the editing options.


÷		Pets	\checkmark
Tag name	Pets		
Category	False alarms 💌		
lcon	*		

- \rightarrow Edit the tag name in the field.
- \rightarrow Click the tick icon to save changes.
- \rightarrow Click the arrow icon to go back to the Tags tab.

 \rightarrow Click the folder icon to choose another icon.



8.7.2.2 Create Tag

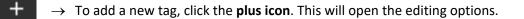


- \rightarrow Enter a name in the **tag name** field.
- </l
- \rightarrow Click the tick icon to save changes.

 \rightarrow Click the folder icon to choose an icon.

 \rightarrow Click the arrow icon to go back to the Tags tab.

8.7.3 Procedures

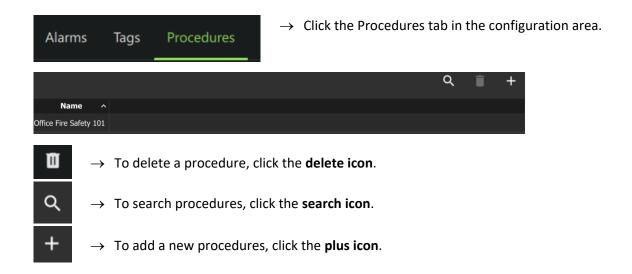

8.7.3 Create Procedure

 \rightarrow To add a new procedure, click the **plus icon**. This will open the **New Procedure** window.

÷					New Pr	rocedu	re							\checkmark
Name														
Procedure														
в	I	Ū	÷	6	<u>A</u>		E	∃	≞			Ţ	₹	
Custom Pro														
Name				\rightarrow	Enter	r a na	ame	for th	e pro	cedur	e in t	the te	ext fie	eld.



Custom Procedure	→ Click the custom procedure area and add the text of the procedure.
B <i>I</i> <u>∪</u> ∓	→ To edit text formatting within the procedure, select the text and click one of these options: Bold, Italics, Underlined, or Strikethrough.
6 A	\rightarrow Choose text size and colour.
E∃∃≣	→ Choose whether the procedure text is left aligned, right aligned, centred, or justified.
1	\rightarrow Click this icon to export the procedure.
L.	\rightarrow Click this icon to import the procedure.
	\rightarrow Click the tick icon to save changes.
÷	\rightarrow Click the arrow icon to go back to the Tags tab.

For instructions on using the Alarms tab, see <u>15. Alarms Tab</u>.



9. Feature Search


Feature Search allows the user to select an image of a person or vehicle and search camera feeds for similar images.

ĝ

Note: To use Feature Search in Carbon, the features database must first be enabled in CathexisVision. The features database can only run on a master server. Feature Search is available with CathexisVision Advanced Analytics (License III).

After enabling the features database (see below), open Feature Search in Carbon.

- 1. Log in to CathexisVision.
- 2. Follow this path: Site / Open tab / Setup Tab / Configure Servers / Video Analytics / New / Analytics type / Basic object classifier
- 3. In the basic object classifier settings, select Features database.

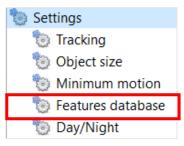

- 4. Click to enable the features database.
- 5. Choose from one of the following options: Vehicle, Person, or Person and Vehicle.

Vehicle
Disabled
Vehicle
Person
Person and Vehicle

6. Complete analytics configuration and consult the *CathexisVision Setup Manual* for more information.




9.1 Open Feature Search in Carbon



From the home menu, click the Feature search icon to open a new Feature search tab.

The Query parameters, Feature area, Review area and Search results window will be displayed:

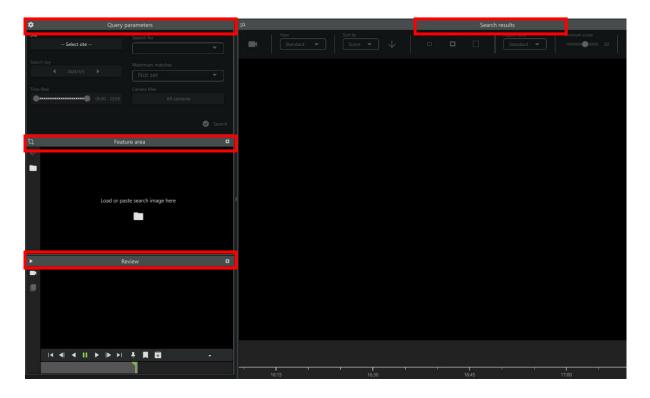

To use Feature Search:

- \rightarrow Select image (<u>9.2</u>).
- \rightarrow Choose a feature area (<u>9.3</u>).
- \rightarrow Set query parameters (<u>9.4</u>).
- \rightarrow Search results (<u>9.5</u>).


9.2 Select Image

There are three ways to select an image for Feature Search:

- Upload an image of a person or vehicle directly (<u>9.2.1</u>).
- Select a thumbnail image from a review area (9.2.2).
- 'Send' an image from the Monitoring Tab using the context (right-click) menu (9.2.3).



9.2.1 Upload Image

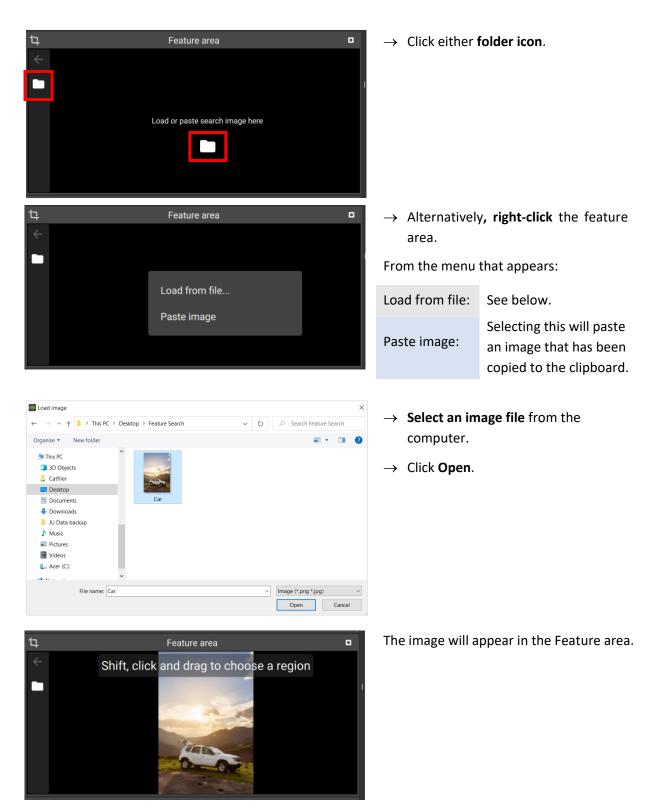


Once the image is selected, the user can select a sub-region of the image. See Feature Area.



9.2.2 Find Image Using Thumbnail


Use the **Review** panel to search for a reference image.

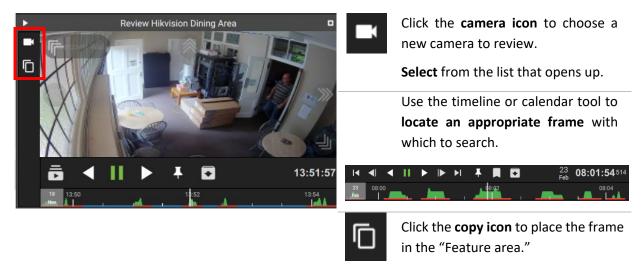

- To expand the Review area, click the white square in the right corner of the frame.
 - To reduce the expanded frame, click the white square in the right corner.

Once the image is selected, the user can select a sub-region of the image. See <u>9.3 Feature Area</u>.

9.2.3 Use Image from Monitoring Tab

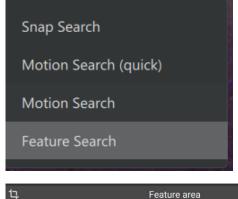

- \rightarrow In the Monitoring Tab, right-click on a camera feed.
- → Select Smart search >> Feature search from the context menu.

This will send an image to a Feature Search tab.



The image will appear in the Feature area.

Once the image is selected, the user can select a sub-region of the image. See <u>9.3 Feature Area</u>.



9.3 Feature Area

Use this area to upload a file or to choose a sub-region for the search.



Then complete the search using the Query parameters (9.4).

9.4 Query Parameters

→ To select the specific area on the image,
 Shift + click and drag.


Click the fields to open menus.

	parameters		Click the Site field and choose a
Site Select site	Search for	Site	site from the pop-up that opens.
	Maximum matches	Search for	Select Vehicle or Person.
2024/3/5	Camera filter All cameras	Search day	Use the arrows to search next or previous day. Or, click the date to open a calendar.
		Maximum matches	Choose between 10–1000 Maximum matches.
		Time filter	Use the slider to narrow the time filter.
		Camera filter	Select cameras for a search.
	✓ Search	Finally , clicl	< Search.



9.5 Search Results

Search results appear in the main panel. These are images which match the reference frame.

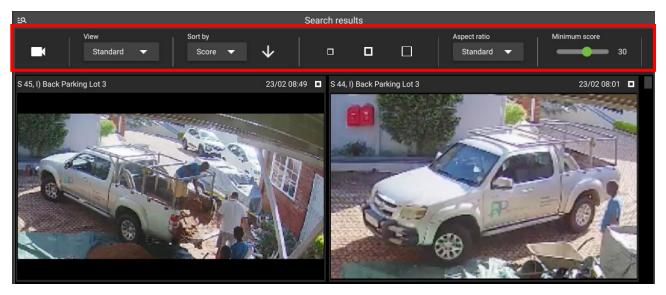

Use the search tools to refine the results.

	Click the camera icon to narrow down results by camera.
View Standard ▼	Choose between: - Standard view - View By camera.
Sort by Score ▼	Choose between viewing by Score or Time . The "Score" is the extent to which the match is accurate.
\checkmark	Choose to view results in ascending or descending order. This indicates how the "Sort by" index will be applied.
□□□	Choose small, medium, or large thumbnails of results.
Aspect ratio Standard 🔻	Adjust aspect ratio. Choose between Standard, Tall, or Wide .
Minimum score 30	Adjust the Minimum score. This includes or excludes matches based on accuracy.



9.5.1 Review Video Footage Using a Search Result

Search results for a feature search allow users direct access to the video footage.



Double-click a thumbnail in the search result area on the right-hand side.

The video footage associated with the selected search result will begin to play in the reviewing area on the left.




To expand the Review area, click the white square in the right corner of the frame.

To reduce the expanded frame, click the white square in the right corner.

9.5.2 Search Using a Search Result

Use a thumbnail (search result) as a reference frame to conduct a further search.

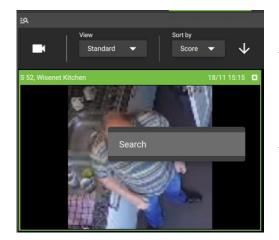

 \rightarrow **Right-click** the thumbnail.

A menu will open.

 \rightarrow Click Search.

Results will show in the main panel.



10. Archive Player

The CathexisVision Carbon Archive Player has two interfaces: the <u>file interface</u> for browsing, and the <u>review</u> <u>interface</u>.



From the home menu, click the **Archive player** icon to open a new Archive player tab.

10.1 File Interface


When the Archive Player opens, the file interface will be displayed. Here, files may be browsed in search of CathexisVision archives to review.

The numbers (1-4) in the image correspond to an explanation in the table below.



Area	Description					
1	Current location. This shows the location on the computer that is currently selected.					
2	File browsing buttons:					
	 Folders Click Up to open the parent folder of the currently selected location. Click Browse to open a file browse window. 					
3	Folders List. This area will list the folders in the current location. Click a folder to open it.					



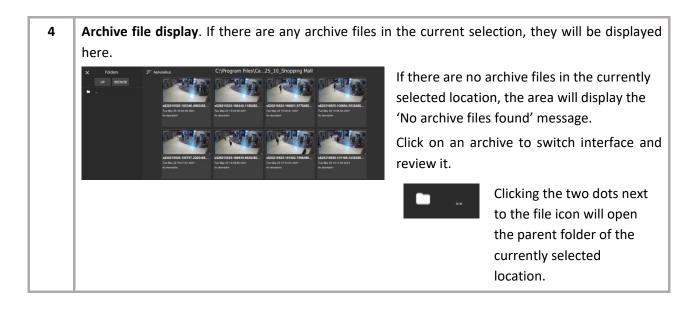

10.1.1 Review Archive


To review, click on a specific archive in the archive file display area. The interface will then switch to Review.



Clicking on the arrow in the top-left corner will also switch to the Review interface. The last archive reviewed will be displayed. If no archive has been previously selected for review, the review interface will be blank.

10.2 Review Interface

The numbers (1-9) in the image correspond to description/instructions in the tables below.

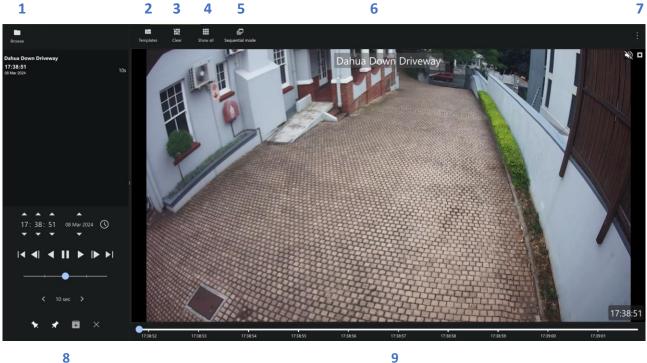



Area	Description
1	Switch interface
2	Change template
3	Clear all cameras
4	Show all cameras
5	Toggle sequential mode
6	Archive file name
7	More options
8	Timeline and review control
9	Review area

1	\rightarrow When in the review interface, click the folder icon /button to switch to the browsing interface.
2	 → Click the Templates button to open the templates panel. The review layout of archived video is managed in the templates panel. → Alternatively, hover the mouse over the left side of the review panel. An arrow will appear. Click on it to display the templates panel. Note: This is disabled in sequential mode. → Scroll through the list by clicking the arrows at the top and bottom of the panel, or use the mouse wheel. → Click a template to apply it. If archives have already been selected for review, the archives/archived cameras will automatically be distributed into the panels of the selected template. → To close the list, click the X in the top-right of the panel.
3	\rightarrow Click this icon to clear all cameras. The camera panel/s will go blank.
4	→ Click this icon to show all cameras in the review area. Note: For archives with only one archived camera, only one camera will be listed in the panel on the left. For archives with multiple archived cameras, all archived cameras will be listed.
5	 → Click this icon to toggle in and out of sequential mode. Sequential mode can be used where multiple files have been saved together. This mode plays the files in time order, one after the other. (If necessary, the display will divide to play overlapping files). This is useful when a sequence has been saved to record an incident using adjacent cameras or tags. Note: Tagging and exporting are disabled in sequential mode.
6	Camera name
8	Timeline & review control. See Timeline and Review Control.
9	Review area. See <u>Review Panel</u> .



10.2.1 More Options

:	
Verify	
About	
Open log file location	

- → Click **the menu** (three dots) at the top-right of the review interface to see the options available for the selected archive file:
 - <u>Verify</u>
 - <u>About</u>
 - Open log file location


10.2.1.1 Verify

Archive verification checks for the overall signature which links the archive to the source NVR, and provides a verification report indicating the authenticity of the archive.

The details of the verification report may be copy-pasted and emailed to Cathexis Support for guidance (<u>support@cathexisvideo.com</u>).

Note: Sub-archives (archives of archives) cannot be reliably verified because they do not contain the signature generated by the original NVR that sourced the video data.

Once the verification process is complete, one of two reports will be issued: **Archive Verified** or **Archive** cannot be verified.

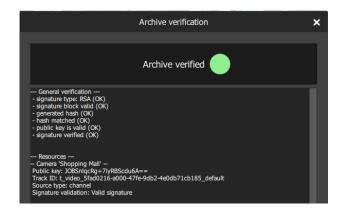

Archive Verified

The archive file will be determined a verified archive. The **General Verification** information is listed.

In the case of archives with multiple cameras, the camera resources are listed along with the verified information for each camera.

Report text may be copied.

Archive Not Verified

In this case, the verification has failed. The general verification information will be listed, particularly the fact that no signature has been retained. Report text may be copied.



10.2.1.2 About

Dec 300817-1252 Dahu Road Front Gate .car User description Yine Password protected No 203-08-17 12:52 No UUTD Watermark UUTD 64ddr:07-7005-4a2b-94ad-542a7ffcdd64 User Client platform info Not available Camera Name Server 1D Server Name Track ID Site Name Site Name <th></th>	
No description Time 2023-08-17 12:52 Password protected No Watermark TEST UUID 64ddr/7-7005-4a2b-84ad-542a7ffcdd64 User Client platform info Not available	
Time Password protected 2023-08-17 12:52 No Watermark UUTD TEST 640dr:77-7005-4a2b-84ad-542a7ffcdd64 User Client platform info No vavalable No	ser description
2023-08-17 12:52 No Watermark TEST UUID 64ddr07-7005-4a2b-94ad-542a7ffcdd64 User Client platform info Not available	o description
Watermark UUID TEST 64ddr:7r.7005-4a2b-94ad-542a7ffcdd64 User Client platform info Not available Not available	ime
TEST 64ddfc7f-7005-4a2b-94ad-542a7ffcdd54 User Client platform info Not available	023-08-17 12:52
User Client platform info Not available	Vatermark
Not available	EST
	lser
Contain North D. Contain Annua T. Contain North	
Camera Name Server Camera Idx Server ID Server Name Track ID Site Name Site	Camera Name Server Ca
Dahua Road Front Gate 149 aa8149a97f706172 Security System NVR 1 t_video_5b000d62-3000-4a50-ac6a-0e427c708fe0_default	Dahua Road Front Gate 149

 \rightarrow Click **About** to display information about the selected archive.

The archive information window will display the title of the archive, as well as any user description that was set for it during the archive process. Camera/s will be listed along with associated information. The fields include:

- Archive time
- Password protected status
- Watermark
- Archive UUID
- User
- Client platform info
- \rightarrow Drag the scrollbar along the bottom of the window to view all information.

Some of the information listed includes the ID of the camera on the server, the ID and name of the recording server, and the ID and name of the site.


10.2.1.3 Open Log File Location

 \rightarrow Click **Open log file location** to open the folder containing the application log file in an Explorer window.



10.2.2 Timeline and Review Control

The **timeline and review control panel** is used to navigate the archived video, as well as to export video from an archive into another archive file, or into a media file.

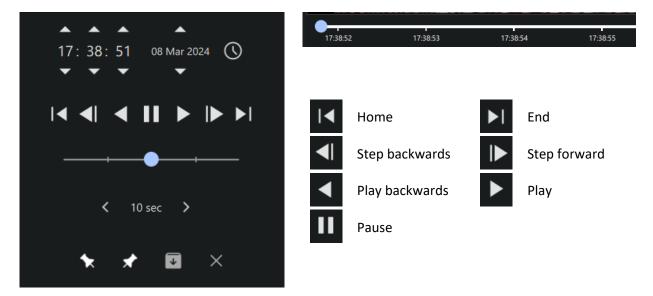

10.2.2.1 Rewind/Fast-Forward

There are two ways to rewind and fast-forward in the Review Control Panel.

Option 1



Adjust the playback speed by clicking the **play** or **play backwards** icons again – up to 4 times. Four dots represent the maximum playback speed.

Option 2

Drag the slider left to rewind, and drag it right to fast-forward. Leaving the slider in the middle will play video at normal speed.



The further **left** the slider is dragged, the faster the video will rewind. The further **right** the slider is dragged, the faster the video will fast-forward.


10.2.2.2 Go Back/Ahead



Click the left/right arrows to go back/ahead in video by ten seconds.



10.2.8.3 Start/End Tags

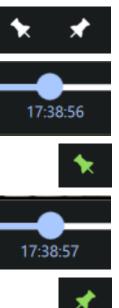

These tags are used to select periods of the video to archive into archive or media files. To select portions for archive/export:

- \rightarrow Click and drag the blue dot on the timeline to set desired beginning point of the video portion to be archived or exported.
- \rightarrow Click the left/start tag. It will turn green.





- \rightarrow Drag the blue dot to the desired end point of the selection.
- \rightarrow Click the right/end tag. The selected video portion will be highlighted in green on the timeline.
- \rightarrow Click the right/end tag. The tag icon will turn green and the selected video portion will be highlighted in green on the timeline.


The Create archive and Erase tags icon will turn red when a selection has been made.

Note: Tagging and exporting is disabled in sequential mode.

10.2.2.4 Archiving Window



Once the portion of video has been selected, click this icon to archive or export it. The archiving window will then open, explained below.

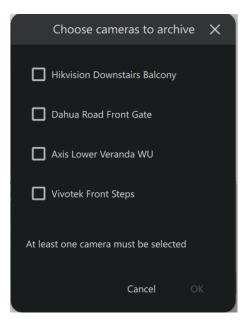

If archiving/exporting an archive that has multiple cameras, the user will be prompted to select the camera/s to archive before the archiving window opens. At least one camera must be selected in order to proceed.

Note: Exporting to media (MP4) file will not be available if more than one camera is selected for archive.

Once the camera/s for archive have been selected (if applicable), the video is ready to be archived. There are two applicable tabs: Archive and Settings.



Archive Tab

😸 Archive	2	?	×
Archive	Settings		
Destination	Folder ~		
Output type	Media file \sim		
Folder	C:/Users	E	lrowse
Filename	20210525-101831	.mp4	
Password No	ine 🗸	Set o	description
Shop	ping Mall		
Ready	Start		.: Cancel

- \rightarrow Set the archive **Destination**.
- \rightarrow Select the **Output Type**.

Note: The media file (MP4) option is not available if more than one camera has been selected in the case of multiple-camera archives.

- \rightarrow Select the **output Folder**. (Only applicable when Folder destination is selected.)
- \rightarrow Set the **filename**.
- → If desired, set a random generated or Custom password required to view the archive later on. (Only applicable to archive/.CAR files).
- \rightarrow Set a **Description** for the archive. (Only applicable to archive/CAR files).

Settings Tab

Archive	/e			
Archive	Settings			
🛃 Make ar	chive exporta	ble		
Copy ar	chive viewer			
Redact	faces			
Watermark	profile None	× [Help	
O Co	mplete	?		×
	mproto			
Arel	hive		anla	
ALC	hive	con	iibie	ete
	C	ose		

- → Check the Make archive exportable box to enable an archive/.CAR file to be exported as a media/MP4 file at a later stage.
- → Check the Copy archive viewer box if the archive will be viewed on a unit that does not have the software installed. (Only available for archive/CAR files).

→ Check **Redact faces** (media/MP4 files only) if faces need to be redacted from the video.

- → Select predefined Watermark profiles from the drop-down menu (if available). Watermark profiles are used to enforce/offer the option to apply a watermark to archived video and are created by site administrators in CathexisVision / Setup Tab / General Site setup. Click Help to show a Watermark profile help window.
- \rightarrow When settings configuration for archiving is complete, return to the Archive tab and click **Start**.

A pop-up window will appear when archiving is complete.




10.2.2.5 Cancel Period Selection



 \rightarrow Click this icon to cancel the selection of video for archiving.

10.2.2.6 Date and Time Panel

There are two ways to select the date and time to review on the Timeline and Review Control.

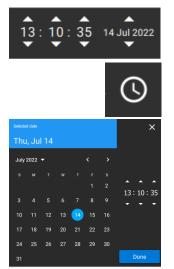

Use the time and date spinner to set the hour/minute/second/day.

Click the clock icon to access up a full calendar to select a specific day.

Navigate to the desired date, and use the time spinner to set the desired time.

10.2.2.7 Timeline and Time Markers



The timeline displays the current location/progression in the playback with a green dot.

Markers along the timeline indicate time intervals. These are determined in relation to the total length of the video.




10.2.3 Review Panel


The review panel is the area where archived video is viewed. Depending on the template chosen, and the number of archived cameras, the review area may display one or multiple camera panels.

- \rightarrow To drag cameras from the cameras list onto the review area, left-click a camera and drag it to the desired panel.
- → Multiple cameras may be dragged simultaneously onto the review area by control/shift-clicking on the desired cameras and dragging them onto the review area.

Note: If multiple cameras are dragged onto review area, they will only be shown if a review template with enough panels has been selected. To show all listed cameras and automatically adjust number of panels, rather use the **Show all Cameras** button.

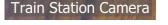

13:10:04

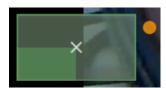

The name of the archived camera is displayed over the video at the top of the camera panel.

The time in the video is displayed at the bottom right corner of the camera panel.

→ Hold the cursor over the footage in the review panel and scroll with the mouse scrolling wheel to zoom in and out on the video. The scale of the zoom is shown in the bottom left corner of the camera panel.




An orange dot appears on the point of focus for the zoom.

Export snapshot	
Overlays	
Dewarping	•


- → Right-click anywhere in the review area to configure these options from the context menu:
 - Export snapshot
 - Overlays
 - Dewarping

10.2.9.1 Export Snapshot

Export snapshot...

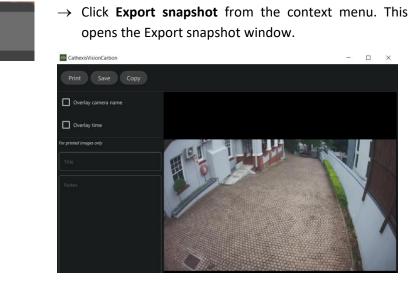



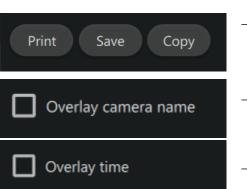

- \rightarrow Click the options at the top left corner to Print/Save/Copy the snapshot. Note: The snapshot will be copied to the clipboard.
- \rightarrow Select **Overlay camera name** to overlay the camera name on the snapshot.
- \rightarrow Select **Overlay time** to overlay the time on the snapshot.

For printed snapshots only: Give the snapshot a title and description to be printed along with the image.


10.2.9.2 Overlays

Configure overlays X	\rightarrow	Select Overlays from the context menu to configure
Dahua Down Driveway		overlays. Available overlays for applicable cameras will be shown.
		If a file has multiple cameras, overlay options for each camera will be displayed.
		If a camera has multiple overlay options, all will be displayed.
	\rightarrow	Select the desired overlay.

- d overlay.
- \rightarrow Click **OK**.

10.2.9.3 Dewarping

Select Dewarping from the context menu to see options.

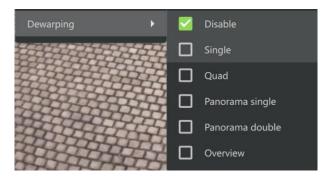


- \rightarrow Check the relevant box to select the desired dewarping option.
- \rightarrow Use the **dewarping** tools to transform a fisheye camera into a flat view, or, select Disable to see the full fisheye (circular) view.




11. Video Walls Tab

Monitors and video walls may be configured in the Video Walls tab. The single site monitor environment and the Enterprise/MultiSite monitor environment are explained below.

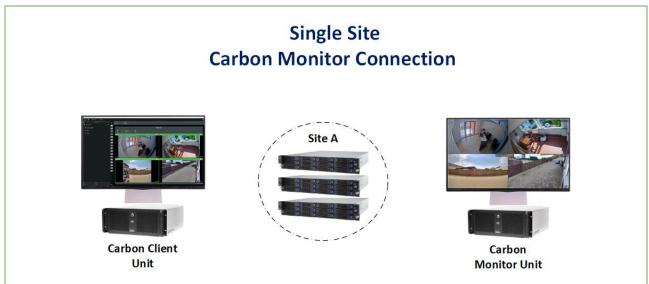

The single site connection is when the Carbon client makes a direct site connection to a single site. The Carbon client can only control the Carbon monitors for the connected site.

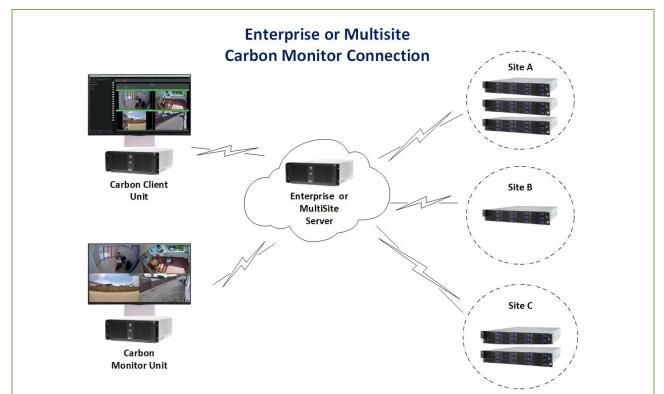

The **Multisite** monitor setup provides central monitor access and allows for the streaming of all site cameras based on the user's camera and site access user permissions. The **Enterprise** monitor setup allows for the creation and access to monitors at all levels of the Enterprise. It allows for monitors in the control room at the root domain, monitors for specific domains and sub-domains overlooking sites that form part of the domains/Sub domains. It also allows for monitors to be created for specific sites.



To add and set up a monitor, follow these steps. If the monitor has already been added, jump to Step 4.

	Step	Where
1.	Add the monitor as a resource and copy the token $(\underline{11.1.1}$ for a single site connection or $\underline{11.1.2}$ for MultiSite/Enterprise).	Configuration tab (Carbon)
2.	Add the token and create a new monitor. (<u>11.2</u>)	CathexisVision Carbon Monitor desktop app
3.	Set monitor permissions (<u>11.3</u>).	Configuration tab (Carbon)
4.	Configure the new monitor (<u>11.4</u>).	Video Walls tab (Carbon)

To add and configure a Video Wall, follow the steps outlined in <u>11.5</u>.

11.1 Add a Monitor



When a monitor is added, a user needs to be set for the monitor $(\underline{11.1.1.2})$ to determine what resources that monitor can access. Then, the administrator needs to set permissions for the users who will view or control that monitor $(\underline{11.3})$.

11.1.1 New Monitor (Single Site Connection)


Note: CathexisVision 2024+ is required to set up a Carbon Site monitor.

To set up a new monitor for a single site connection, follow this sequence:

- 1. Set up the site monitor in CathexisVision.
- 2. Set up the Site Monitor desktop application.
- 3. Control the site monitor from Carbon.

11.1.1.1 Set up Monitor in CathexisVision

Open CathexisVision server software.

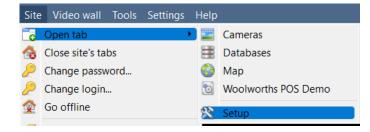

1. Follow the file path shown on the left (Site / Open tab / Setup).



	-	2.	Select the Configuration icon.
> 🔜 Security System NVR	1 (MASTER)	3.	Choose a server from the list.
> 🔜 Security System NVR 3	2		
Monitors		4.	Select Monitors from the list.
	New	5.	Select New .
New monitor -		6.	In the new window, click the drop- down menu next to Monitor type .
Configure a new monitor		7.	Select Carbon site.
Settings Access Monitor type VGA VGA VGA Name VGA Address Carbon site			
New monitor —		8.	Enter a name .
New monitor Configure a new monitor		9.	Click OK.
Settings Access Monitor type Carbon site Name			
ОК	Cancel		



11.1.1.2 Set up Monitor in Carbon Configuration Tab

Return to CathexisVision Carbon.



The token must be added to the CathexisVision Carbon Monitor desktop app (11.2).




11.1.2 New Monitor (Enterprise or MultiSite)

When a monitor is added, a user needs to be set for the monitor $(\underline{11.1.2.1})$ to determine what resources that monitor can access. Then, the administrator needs to set permissions for the users that might need to view or control that monitor $(\underline{11.3})$.

11.1.2.1 Carbon Configuration Tab: Add Monitor as a Resource

→ C Configuration	Open the Configuration tab.
Domains	Cathexis Security Enterprise
Q : A Home	Q = + :
Cathexis Security Enterprise Cathexis Sec DBN First test Cathexis Sec DBN Resource tree Cathexis Sec DBN Cathexis	Name Server Custom ID III Some inside cameras III III Fad tes 2 III III New test VMS group IIII IIII Test layout 2 IIII
A monitor can be added	to the root domain or a sub-domain .
Domains Q : Cathexis Security Enterprise CathexisSec DBN 1 Home Home	→ Select the domain to which the monitor will be added. In this example, the root domain has been selected.
Resource management Resources Resource tree	→ Select Resources in the middle panel menu.
Q = + :	→ In the configuration panel, click the menu icon. Alternatively, click the plus icon.
New monitor	→ Select New monitor. The Add monitor window will open.



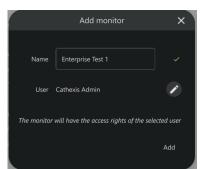


- \rightarrow Enter the name of the monitor.
- → To set a user for the monitor, click anywhere in the User field, or click the edit icon.

Th user set for the monitor will determine the permissions the monitor will use when connecting to the Enterprise. The monitor will only be able to display resources that are available with that user's permissions.

For example: A retail manager might want a monitor on the shop floor that is visible to the public. In this case, they could set up a user for the monitor that is only able to stream cameras on the shop floor, not office cameras.



 → Select the user and then click
 OK. (Note: In the example, user names are redacted.)

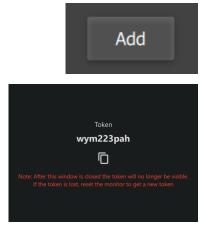

\rightarrow Click **Add**.

The token will be displayed.

 \rightarrow Click the **copy icon** to copy the unique token.


The token must be added to the CathexisVision Carbon Monitor desktop app (11.2).



11.2 Create New Monitor in CathexisVision Carbon Monitor Desktop App

Õ


The **CathexisVision Carbon Monitor** (also known as the Video Wall Manager) is a separate desktop application.

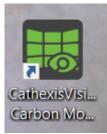


 \rightarrow Double-click the **CathexisVision Carbon Monitor** desktop icon.



The icon in the taskbar indicates that the CathexisVision Carbon Monitor app is open. (Note: Click this icon in the taskbar to return to the Videowall Manager at any time.)

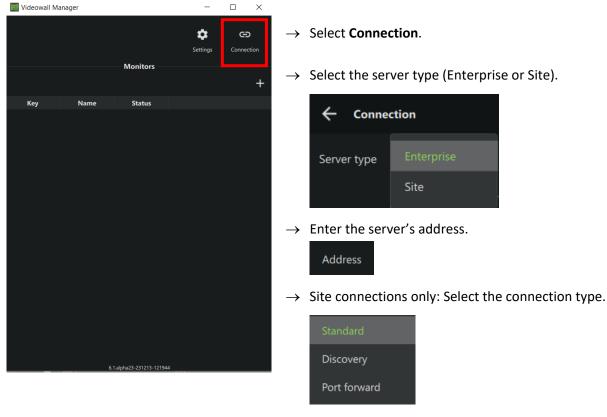

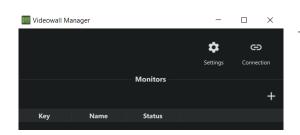

- \rightarrow Once the address has been entered, click **Save**.
- \rightarrow Click the plus icon. **New monitor**.

The "Create new monitor" window will open.



	Enter monitor token 🛛 🗙
Token	~
	Cancel OK
	Create new monitor X
Token	wym223pah
Monitor name	Enterprise Test 1
Organisation name	e cat
Domain name	Cathexis Security Enterprise
	Cancel Create monitor

First, a prompt for the monitor token will appear.

- \rightarrow Paste the monitor token in the field.
- \rightarrow Click **OK**.

In the "Create new monitor" window, the other fields will fill automatically once the token has been added.


→ Click **Create monitor**. The new monitor will open, ready to be configured in Carbon.

11.2.1 Carbon Monitor Desktop App: Settings

11.2.1.1 Default Settings

Videowall Manager – \Box X Settings Connection	→ To configure the default (settings, click Settings.	global) monitor
Videowall Manager	Show live time Toggle this option live time on the r	
Show live time Video fill mode Normal Video decoder Software	Video fill modeChoose from the fill modes: - Normal - Crop to fit - Stretch to fit	-
Decoder GPU index +	Video decoderSelect a video deSoftware-Software (CNvidia-Nvidia	coder: athexisVision)
Save	Decoder GPU This refers to the index used for decode example, if using Nvidia card, spect 1 uses card 1, and card 2. The Deco	ing video. For more than one ify that Monitor Monitor 2 uses

refers to the card number.

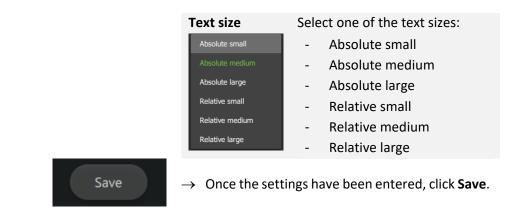

11.2.1.2 Individual Monitor Settings

CATHEXIS

Key	Name	S	Settings	\rightarrow	To char the mo
369	Unknown	Onli	-		the mor
42834	Enterprise Test 1	Onlii	Remove	\rightarrow	Click Se
					To cont
Use defa	ult settings			\rightarrow	To conf monito


Note: Each monitor can be configured individually to override the default monitor settings.

- nge a monitor's settings, right-click nitor name.
- ettings.
- figure the settings for the selected r, de-select "Use default settings".
- elect the desired settings for the selected monitor.

Once the new monitor has been added and settings selected, configure it in Carbon (11.3 and 11.4).


11.3 Set User Permissions in Carbon

Return to Carbon to set permissions for user/s who will view or control the new monitor.

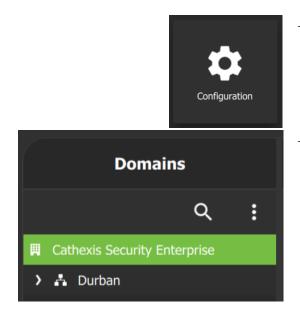


- \rightarrow From the home menu, click **Configuration** to open a new tab.
- \rightarrow Select the domain to which the new monitor has been added.



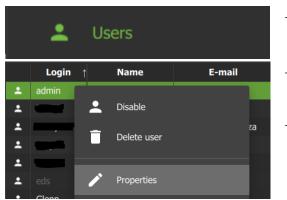

- \rightarrow In the menu panel, click **Users**.
- → In the configuration panel, right-click the User to which the new monitor has been assigned.
- \rightarrow Select **Properties**.

The User configuration window will open.

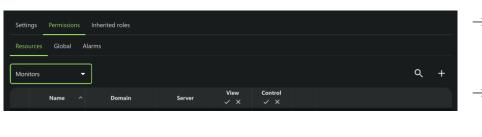

- → Click on the Permissions tab and select Resources.
- → Select Monitors in the resource type dropdown menu.
- \rightarrow Click the **plus icon**.

1		Select monitors to add					Select the new monitor.
		Show monitors in sub-domains Q					Click OK .
	-	Name Brad PC	Domain CathexisSec DBN	Server		,	
	Ö	Brad test	Cathexis Security I	Enterprise			
	ō	Doc meeting monitor Cathexis Security Enterprise					
	•	Enterprise Test 1 Cathexis Security Enterprise					
	0	Support Office Cathexis Security Enterprise					
	P		Cathexis Security I	Enterprise			
	View			Control		\rightarrow	Assign permissions to the monitor.
		~ ×		~ ×			To select all permissions, click the tick icon .
		\sim			~ X		
				_			To clear all permissions, click the cross icon .


After setting the monitor permissions, configure the new monitor in the Video Walls tab (<u>11.4</u>).

11.4 Control Monitor in Video Walls Tab




- \rightarrow From the Carbon home menu, click **Video Walls** to open a new tab.
- Once adjacent cameras are configured on a site, this feature can be used in the Video Walls tab.
- For panels with PTZ cameras, a **PTZ control tool is** available. A menu will appear on the sidebar.
- Panels can be maximised or restored by double-clicking.


11.4.1 View Options

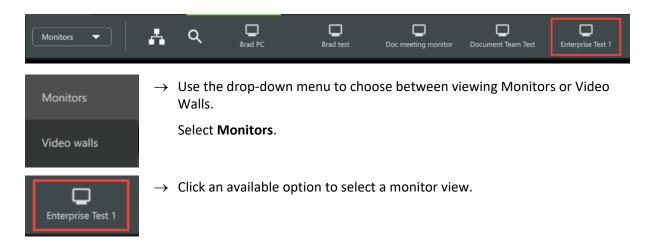

11.4.2 Options: Basic Live Streaming Control

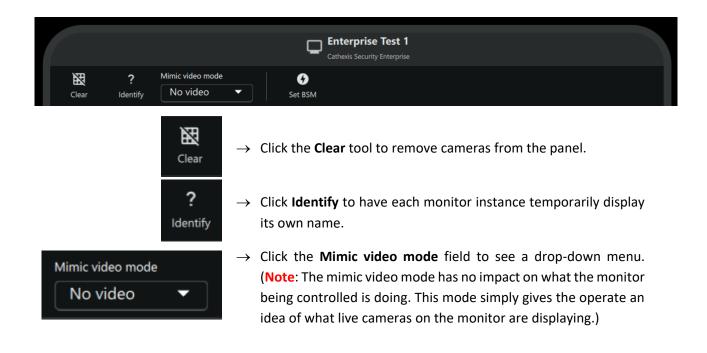



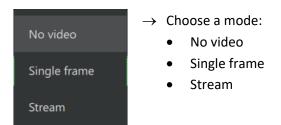

• Panels in the Video Walls tab can be maximised or restored by double-clicking.

11.4.3 Manage View (Camera Panels)

- The instructions below show how the panels can be managed, by:
 - o Adding individual cameras manually
 - Using the auto layout tool to arrange multiple cameras
 - Opening an existing (saved) layout.
- Panel content may be swapped by dragging between panels in the monitor controller.


11.4.3.1 Change Template



Click a template to select it.


11.4.3.2 Add or Change Cameras (Resources)

Add or change video feeds.

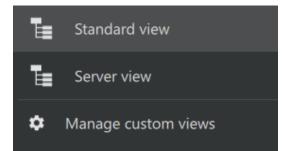

- → Click the **drop-down menu** within the Resources panel to see view options.
- \rightarrow Click an option to select.



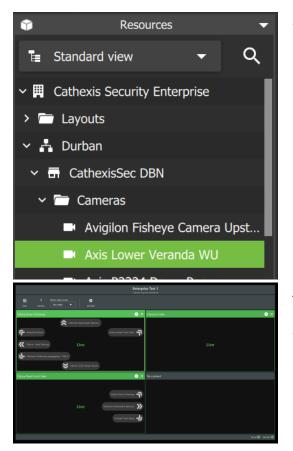


→ Drag and drop into the main section to place individual cameras.

The cameras will show as text.

→ Click to arrows to use the adjacent camera tool. This will change the camera to a nearby feed in the direction of the arrow.

11.4.3.3 Add Multiple Cameras Using Auto Layout Selection

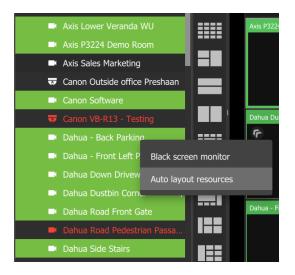

- → Use Shift+click or Ctrl+click to select multiple cameras from the Resources list.
- \rightarrow Right-click.
- \rightarrow Click Auto layout resources.

The cameras will be arranged in the main panel automatically.


11.4.3.4 Open a Camera Group

Camera groups can be created in the Resources section of the **Configuration tab**.



Camera groups are indicated by this icon.




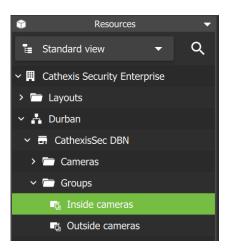

- \rightarrow Navigate to the **Resources menu** in the side panel.
- \rightarrow **Click the camera group** to select the camera group.
- → Drag and drop into the main panel, or, right-click and select **Auto layout resources**.

11.4.3.5 Open a Saved Layout

Layouts that have been created in the **Monitoring tab** can be selected and opened in the **Video Walls tab**.

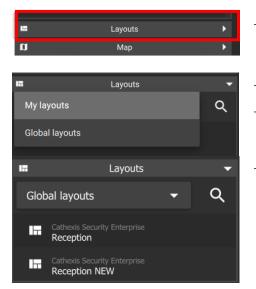

- → Click on "Layouts" on the bottom left of the Video Walls tab. This will open the drawer.
- \rightarrow Click the **drop-down**.
- \rightarrow Choose from "My layouts" or "Global layouts".
- \rightarrow **Double-click** a saved layout to open in the monitor.

The selected layout will populate the panels.

11.4.3.6 Open a Saved Map



- → **Click on "Map"** to open the drawer. Available maps will appear in the panel below it.
- $\rightarrow\,$ Identify a camera using the map. Click and hold the camera icon.
- \rightarrow **Drag and drop** into an available panel.




11.5 Manage Video Walls

The Video Wall represents the arrangement of physical monitors.

11.5.1 Create Video Wall

New video walls can be created in the Configuration tab.

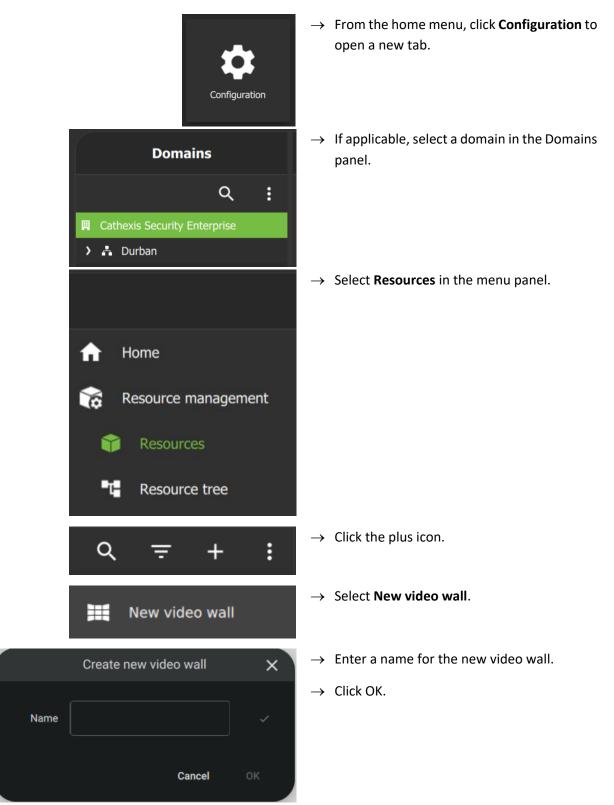





- → Click Add monitor in the Create new video wall dialog.
- \rightarrow Ctrl+click or shift+click to select multiple resources.
- → Click OK. The added resources will appear in the Video Wall editor.

- \rightarrow Click and drag to move a monitor.
- → Hover over the border of a monitor and move the arrows to adjust the size of a monitor.
- \rightarrow Click OK to save changes.




ightarrow To view the additional video wall, return to the Video Walls tab.

The new video wall will appear in the top panel.



11.5.2 View Video Wall


Once a video wall has been created in the Configuration tab, it can be viewed in the main panel of the Video Walls tab.

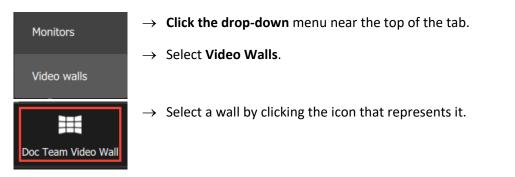

The wall will show in the main panel. Cameras on this virtual representation will display as text.

					Doc Team Video Wall	
Document	Team Test 🌶					
	AmanB HW		Hikvis Foyer	Hunt Door		
	Canontware	Axis Room	Hikvisg Back	Hikvisalcony		
Hikvisg Area	UNV Finance	Wisentchen	HikvisOffice	HikvisOffice		
Hikvi/Door	Hikvisircase		Surveotairs	HikVisfrica		
Hikvisanding						
7						

11.5.2.1 View Cameras: Quick Access to Single Monitor Control

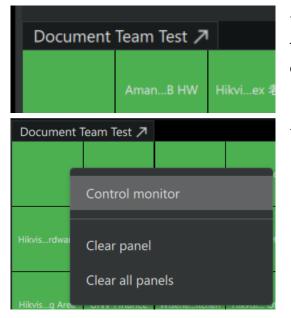

It is possible to view the video feed of a single monitor.

 \rightarrow Click the label.


This will open quick access to the single monitor control without exiting wall mode.

→ Alternatively, right-click the monitor and select **Control monitor**.


The layout will open in the main panel.



X	?		nic video mode		0					
Clear	Identify	<u> </u>	No video 🔻	Se	et BSM					
	(Ν×	Amano COD4123R	▶ ×	Hikvision Annex 老板	▶ ×	Hikvison Foyer	▶ ×	Hunt Upstairs Mark	• ×
			e				e «	9	e «	
	Live		Live		Live		Clive	>	Clive	
					6		8		6	ઝ
No content			Canon Software	▶ ×	Axis P3224 Demo R	▶ ×	Hikvision Testing Ba	► ×	Hikvision Upstairs B	• ×
							©		R.	
			Live	»	Live		Clive		Clive	
				3		3			e *	
Hikvision D	ining Area	► ×	UNV Finance	► ×	Wisenet Kitchen	► ×	Hikvision Support	▶ ×	Hikvision Rob Office	⊳ ×
		r	• •		e *		¢ «			
	Live	»	« Live		« Live		« Live	>	Live	
6	*	ઝ	8	3	е В		6	3		
Hikvision-U	pstairs	Ъ×	Hikvision Staircase	► ×	Axis Sales Marketing	ъ×	Surveon CAM4360	► ×	HikVision Dome Ca	► ×
		Ŷ	•		e		6 8		e	
	Live		« Live	»	Live		« Live	>>	Live	
e							e 8		6	
Hikvision U	pstairs I (⊗	► ×	No content		No content		No content		No content	
ф К	۵ Live	۴ ۵								
<i>a</i>										
	*	৵								

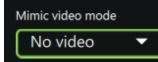

→ Click the mode field to show the drop-down. Select **Stream** to make the video visible.

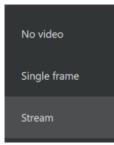



 \rightarrow Press the **cancel icon** in the top-right corner to return to the main video wall screen in the Carbon Video Walls tab.

11.5.3 Control/Edit Monitor from Video Wall


11.5.3.1 Add or Change a Monitor Camera

m = Resources Video walls 🔻 > Standard view Q 📕 Cathexis Security Enterprise Unassigned Layouts 📩 Durban G CathexisSec DBN _ Cameras Amano COD4123RB HW Avigilon Fisheye Camera Upstairs Axis Lower Veranda WU Axis P3224 Demo Room

- → Click a camera in the Resource panel to select.
- → Drag and drop onto a display.

The selected camera will reflect in the display.

11.5.3.2 Copy a Layout into a Monitor

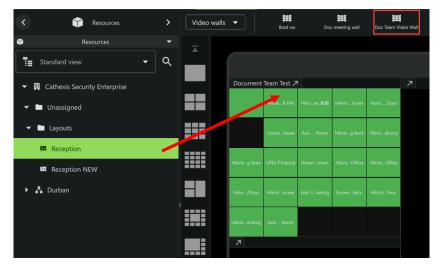

From the video wall, it is possible to make changes to the layout of a monitor using a saved layout.

- \rightarrow Select a layout from the side panel.
- \rightarrow **Drag and drop** onto a monitor.

11.5.3.3 Add a Camera Group to the Monitor



 \rightarrow Select a camera group from the sidebar.




Û	Resources						
T=			۹			🗰 Doc Team Test 2	
	Hunt Upstairs Marks Door					Doc	umen
	Intercom Gate				Doc meeting monitor 7		
	Surveon CAM4360 Stairs						Axis
	UNV Finance						
	UNV Side of House						
	Vivotek Front Steps					Ах	xis P
	Wisenet Kitchen						
-	Groups					Enter	erprise
	🖏 Inside cameras	-					Dahu
	Outside cameras						arit

→ Drag and drop onto the wall, or, right-click and select Auto layout.

The camera group will be displayed in the monitor on the wall.

11.5.4 Edit a Video Wall

Video walls can be edited in the Configuration tab.

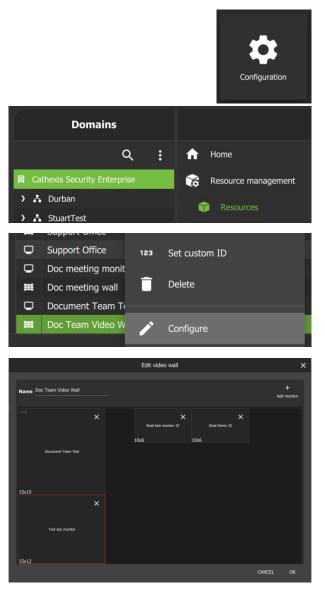


- → From the Carbon home menu, click Configuration to open a new tab.
- \rightarrow Select **Resources** in the menu panel.
- \rightarrow Right-click the video wall.
- \rightarrow Select **Configure**.

The video wall editor will open.

- $\rightarrow\,$ Hover over the border of a monitor so that arrows appear.
- \rightarrow Adjust the size of the monitor as desired.
- \rightarrow Click OK to save changes.



12. Dashboard Tab (Enterprise Connections Only)

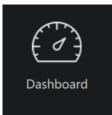

From the home menu, click the Dashboard icon to open a new Dashboard tab.

The Dashboard tab allows the user to view information about sites, servers, and cameras.

This tab allows the user to locate the time and place of a disconnected camera or server easily. The information can be used to search footage from the Monitoring tab around the time of the incident.

12.1 Health Information Display

Information is presented in a summary format. This is represented visually as well as in the table, as illustrated in the image below.

				1		2	3				4	5	6
Cathexis Security Ente	erprise										۹	G	Ę
				5 Cites	2	11 Servers	44 Camer						
Site CathexisSec DBN	^ Status	Up time 1 hour, 3 minutes	Last seen	Servers up	Servers down	Servers unknown		Cameras down	Cameras unknown	Packet loss			

1	Sites: a graphical summary of the status of the sites.
2	Servers: a graphical summary of the status of all servers.
3	Cameras: a graphical summary of the status of all cameras.
4	Search
5	Refresh
6	Export (<u>12.3</u>)
7	Double-click a site name to open a summary of the last 24 hours (<u>12.2</u>).

The status of sites, servers, and cameras are represented using colours.

Up Up with packet loss Up and down	Up and unknown	Down	Unknown
------------------------------------	----------------	------	---------



12.2 View Site Information/Details



To view details about a specific site, **double-click a site name** on the list in the table.

A more detailed screen will appear, as illustrated in the example below.



- The blocks arranged in rows represent camera status over 24 hours.
- Each block represents a 15-minute segment.


12.3 Export Data Table

Information from the data table can be exported in a customised format.



 \rightarrow Click the **Export icon** to begin customising the report.

A new dialogue will open. Here, configure the report Settings and Columns.

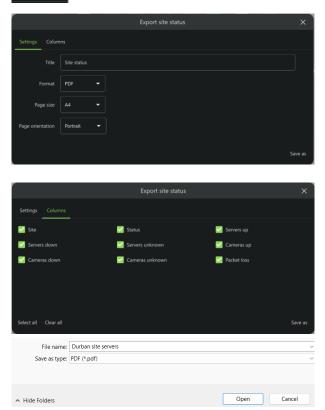

SETTINGS TAB

- \rightarrow Click the **SETTINGS** tab to open if necessary.
- \rightarrow Enter a suitable **Title** for the report.
- \rightarrow Choose a **format**: PDF or CSV.
- \rightarrow Choose the **page size**: A3 or A4.
- \rightarrow Choose a page orientation.

COLUMNS TAB

- \rightarrow Click the **COLUMNS** tab to open.
- → Check or uncheck the columns which show on the table to control which information appears in the report.
- \rightarrow Click Save as.
- \rightarrow Open an appropriate **folder** on the computer.
- \rightarrow Enter a descriptive file name.
- \rightarrow Click **Open**.



13. Hardware Tab (Enterprise Connections Only)

The hardware tab allows the user to view specifications and addresses of cameras, and specifications and status of databases, disks and servers.



From the home menu, click the Hardware icon to open a new Hardware tab.

The Hardware Tab allows the user to search or filter the items, and export this list.


13.1 Select Domain



- $\rightarrow\,$ Click on the domain name in the top-left corner to open the domain selection options.
- \rightarrow Select the desired domain or site.

That domain's hardware information will then be shown in the main display.

13.2 Select Category (Cameras, Video Databases, Disks or Servers)

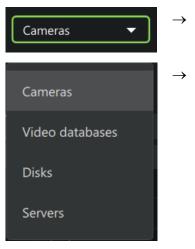

- \rightarrow Click the drop-down menu.
- \rightarrow Select whether to view Cameras, Video databases, Disks, or Servers.



13.2.1 Display Columns

The display shows the following columns for cameras, video databases, disks, and servers.

Cameras	 Site name Server name Camera manufacturer Camera model Firmware Camera name Serial number MAC address
Video databases (Note: For information about viewing the content of databases, see <u>5. Databases (Main) Tab</u>) Degraded databases are highlighted with this icon.	 Health Name Site Server Capacity Tracks Recording duration (days) Slices
Disks	 Health Site Server Manufacturer Model Rotation Capacity Firmware Serial number Power-on years Temperature
Servers View all columns Click the drop-down in the top-right corner to select which categories of columns to display.	 Site Server Machine IP addresses MAC addresses MAC addresses Motherboard CPU CPU speed Memory Serial number ID board OS family OS version SW version Site role Time Time zone Master time-difference Enterprise time-difference



13.2.2 Graph (Disks)

In the Disks category, it is possible to see a graphical representation of the disks' temperature and power on periods.


\rightarrow	Click the
\rightarrow	lt is possi Tempera
	The unit years. Th

- > Click the Graph heading to expand.
- It is possible to view graphs depicting Power on or Temperature.

The unit of measurement in the **Power on** graph is in years. The unit of measurement in the **Temperature** graph is degrees Celcius.

13.2.2.1 See List of Corresponding Items

 \rightarrow Click a bar in the graph to view the list of items it represents.

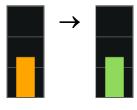


The bar will turn from orange to green, and the details of the items represented by the bar will be listed below the graph.

13.3 Change List Display (Cameras, Disks, Servers)

For cameras, disks, and servers, it is possible to sort by categories. Sorting by category is a way of filtering the items in the main display. Once the main display has been organised, the list can be exported.

1. **Click the drop-down menu** in the left panel (underneath the domain name) to change how the items are sorted in the panel beneath.

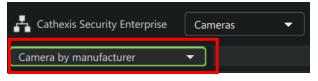

A drop-down menu will open.

2. Click the desired option to sort items in the panel beneath. The options are as follows:

Cameras

- Camera by manufacturer
- Camera by model
- Camera by firmware

Disks

- Disks by manufacturer
- Disks by model
- Disks by firmware




Servers

- Servers by motherboard
- Servers by CPU
- Servers by OS family
- Servers by OS version
- Servers by SW version
- 3. Then, **select an item from the list** to filter results. The items that fulfil the search criteria will display in the right-hand panel.

13.4 Generate Reports

To generate a report, first conduct a search and create a list in the main display. This is the table which will be exported.

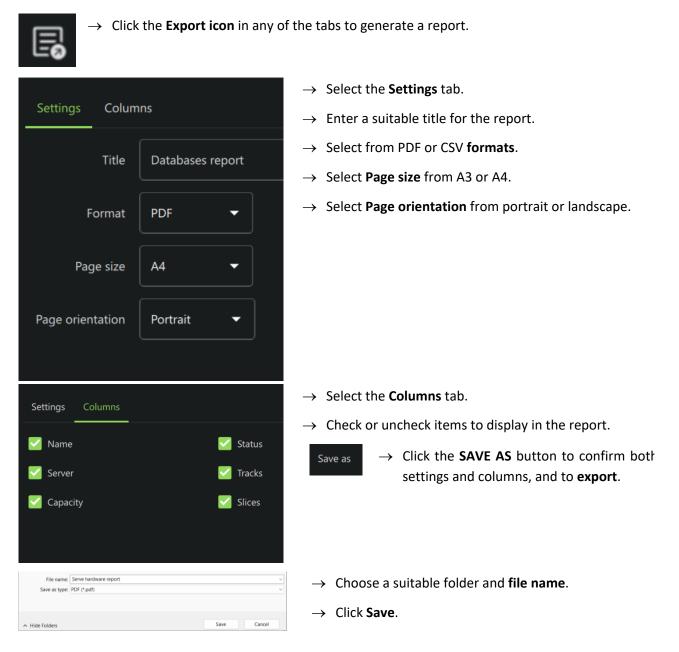




14. Alarms Tab (MultiSite and Enterprise)

Events and technical alarms must be set up in CathexisVision. All other alarm configuration is done in Carbon. Refer to 8.7 Alarms (MultiSite and Enterprise) for instructions on configuring alarms in Carbon.

Note: For alarms to be delivered from a site to the Enterprise/MultiSite, the site must be connected to the Enterprise/MultiSite.

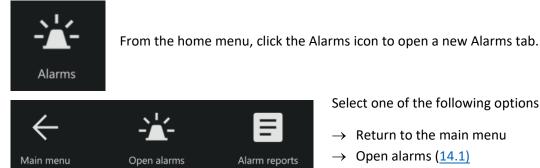

Select one of the following options:

- \rightarrow Return to the main menu
- \rightarrow Open alarms (<u>14.1</u>)
- \rightarrow Alarm reports (<u>14.2</u>)

14.1 Open Alarms

	⊈ ¥k alarm Ciose alarm	Modily tay	JS										:
	Filter			Key	Time	Alarm	Priority	Domain	Description	Owner	State	Tags	
۹				7849777	10:04:23	Motion		CathexisSec DBN	Motion on Hikvision Support Office - mo		New		.
_		_	8	7849778		Doc Team Test		CathexisSec DBN	Motion on Hikvision Support Office - mo				
Ŧ	My open alarms		-	7849775		Motion		CathexisSec DBN	Motion on Hikvision Rob Office - motion		New		
÷	Any user		8	7849776	10:04:20	Doc Team Test		CathexisSec DBN	Motion on Hikvision Rob Office - motion				
				7849773	10:04:14	Motion		CathexisSec DBN	Motion on nfy Hikvision Upstairs Balcon		New		
ⁿ	Any domain		8	7849774				CathexisSec DBN	Motion on nfy Hikvision Upstairs Balcon				
*	Any alarm		-	7849771		Motion		CathexisSec DBN	Motion on Hikvision Reception - motion				
			8	7849772		Doc Team Test		CathexisSec DBN	Motion on Hikvision Reception - motion		New		
*	Priority		-	7849769	10:04:09	Motion		CathexisSec DBN	Motion on Hikvision Testing Back - moti				
*	State		8	7849770	10:04:09	Doc Team Test		CathexisSec DBN	Motion on Hikvision Testing Back - moti		New		
			-	7849767	10:04:05	Motion		CathexisSec DBN	Motion on UNV Side of House - motion				
٠	Тад		3	7849768	10:04:05			CathexisSec DBN	Motion on UNV Side of House - motion				
			*	7849765	10:04:04	Motion		CathexisSec DBN	Motion on nfy Hikvision Upstairs Balcon		New		
			8	7849766	10:04:04	Doc Team Test		CathexisSec DBN	Motion on nfy Hikvision Upstairs Balcon				
			8	7849763	10:04:01	Motion		CathexisSec DBN	Motion on Hikvision Reception - motion				
			8	7849764	10:04:01	Doc Team Test		CathexisSec DBN	Motion on Hikvision Reception - motion				
				7849761	10:04:00	Mation		CathexisSec DBN	Motion on Hikvision Testing Back - moti				
			8	7849762		Doc Team Test		CathexisSec DBN	Motion on Hikvision Testing Back - moti		New		
			-	7849759		Motion		CathexisSec DBN	Motion on Hikvision Support Office - mo				
			8	7849760		Doc Team Test		CathexisSec DBN	Motion on Hikvision Support Office - mo				
			-	7849757		Motion		CathexisSec DBN	Motion on Hikvision Reception - motion				
			8	7849758		Doc Team Test		CathexisSec DBN	Motion on Hikvision Reception - motion		New		
				7849755	10:03:49	Motion		CathexisSec DBN	Motion on UNV Side of House - motion				
			8	7849756				CathexisSec DBN	Motion on UNV Side of House - motion				
			- 2	7849753		Motion		CathexisSec DBN	Motion on Canon Software VMD - motion				
			8	7849754	10:03:46			CathexisSec DBN	Motion on Canon Software VMD - motion				
	arms 9745 ws 9745		-	7849751		Motion		CathexisSec DBN	Motion on Hikvision Testing Back - moti				

Filters (14.1.3)

Open alarms

Further options





The alarm icon colour is set in the Configuration tab.

(Carbon / Configuration tab / Enterprise / Alarms / New Alarm / Colour)

- \rightarrow Click a category to sort the alarms by that category.
- $\rightarrow~$ Right-click an individual alarm to view and select options.

Preview	
Handle alarm	
Assign to me	
Close	
Add tag	Þ
View alarm history	

14.1.1 Quick Actions

- \rightarrow Click on an alarm in the list of open alarms.
- \rightarrow Then click one of the buttons in the top-left.



Click to open the <u>Alarm viewer</u>.

Click to close the selected alarm/s.

Click to modify the tags of the selected alarm.

14.1.2 Open Alarms Tab Viewing Options

	Status		Explanation		
NO		Unlocked	Click this icon to lock the table manually. The icon will change to manually locked .	٦	→
TABLE LOCK ICON	a	Auto- locked	When there is mouse movement, the table view auto- locks (the icon changes from unlocked to auto-locked). After several seconds of inaction, the icon will change back from auto-locked to unlocked .	6	
	6	Manually locked	The table view will not change as new alarms come in. Click the icon to change the status to auto-locked .		→ 💰



:	ightarrow Click the ellipses icon	in the top-right corner of the Open alarms tab to view further options.						
	Selection	Explanation						
	Filter panel	Select this option to open the filter panel in the Open alarms tab.						
	New alarms panel	Select this option to open the New alarms panel , which shows new alarms as they come in.						
		▼ New alarms × Alarm Motion on nfy Hikvision Upstairs Balcon The New Alarms panel will open, showing new alarms as they come in. Domain CathexisSec DBN Alarm Motion on HikVision Dome CatAfrica - m Alarm Motion on HikVision Dome CatAfrica - m → Alarm Motion on HikVision Dome CatAfrica - m → Alarm Motion on HikVision Dome CatAfrica - m → Alarm Motion on HikVision Dome CatAfrica - m →						
		Alarm Motion on HikVision Dome CatAfrica - m alarms. Domain CathexisSec DBN → Click to collapse the Alarm Motion on Canon Software VMD - motion New alarms panel.						
	Previews panel	Select this option to open the Previews panel , which shows alarm previews as they come in.						
PTIONS		► Provide information - model ► Provide information - model ► Provide information - model ► Click to filter the new alarms.						
FURTHER OPTIONS		★ Record in which foreign + move ★ Noor of dy likeword back foreign + move ★ Click to collapse the Live preview panel.						
FUF		→ To change the number of columns in the live preview panel, click this icon.						
		The time elapsed since the alarm began is indicated by the shape of this icon.						
	Sync filters	Sync filters : Selecting this will use the filters set in the <i>Filter panel</i> to override any filters set in the <i>New alarms panel</i> and <i>Previews panel</i> .						
	Choose columns	Select this option to choose the columns that will appear in the open alarms area. Check or uncheck categories as necessary. The available column categories are: Alarm priority, Key, Time, Alarm, Priority, Domain, Description, Owner, State, Tags, Trigger time, Arrival time.						
		Choose columns X Key 🏹 Time 🎽						



14.1.3 Filters Panel




 \rightarrow To collapse the filters panel, click the icon.

The alarms listed in the **Open alarms** panel can be filtered according to the following parameters.

	Filter	×		
م			Entries that match the text entered here	
T	My open alarms		Open alarms belonging to the user	
÷	Any user		A specified user	
A	Any domain		A specified domain	
*	Any alarm		A specified alarm	
*	Priority		Critical, high, medium or low priority alarms	
*	State		New, assigned or active alarms	
۰	Тад		Alarm tags	
	Currently open alarms and table rows are listed at the bottom o the filters panel.			

14.1.3.1 Any User, Any Domain and Any Alarm

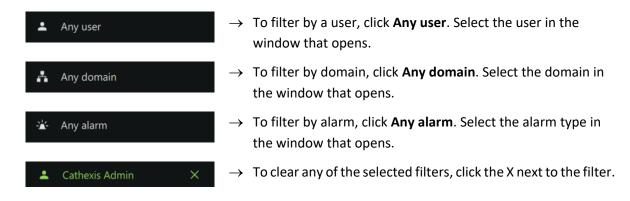

14.1.4 Assign to Me

- \rightarrow Right-click an alarm entry and select **Assign to me** to assign the alarm to the current user.
- \rightarrow To remove one's ownership of the alarm, right-click the alarm entry and select **Clear ownership**.

14.1.5 Close

 \rightarrow To close an alarm, right-click an alarm entry and select **Close.**

14.1.6 Tags


 \rightarrow To add a tag to an alarm, right-click an alarm entry and hover the mouse over Tags. Then select a tag.




14.1.7 Preview Alarm

→ Right-click an alarm entry and select Preview to open a preview of the event that triggered the alarm. Alternatively, double-click the alarm entry to preview it.

The preview footage will display on the left, and the live stream from that camera will display on the right.

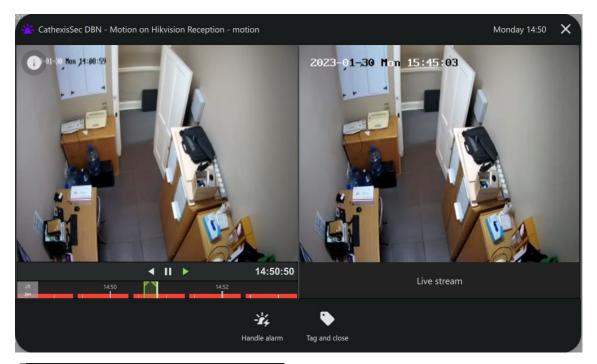

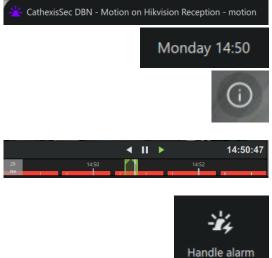

The domain and alarm trigger are listed in the top left.


The day and time are listed in the top right.

- $\rightarrow~$ Click this icon to view alarm information.
- → Use the navigation bar at the bottom of the preview panel to pause, play, go back, and scrub the feed.
- \rightarrow Click **Handle alarm** to open the <u>Alarm Viewer</u>.
- → Click **Tag and close** to select a tag for the alarm and then close it.

Tag and close

14.1.8 Handle Alarm (Alarm Viewer)

- → Right-click an alarm entry and select **Handle Alarm** open the Alarm Viewer.
- \rightarrow To close the Alarm viewer, hover the mouse over the Alarm Viewer tab until the **close icon** appears.

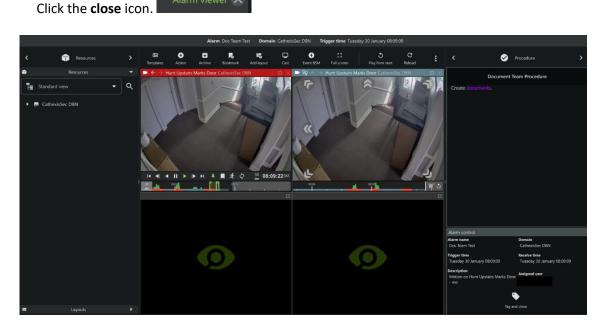

Monitoring area



Alarm information and alarm resources / procedures

Information about the alarm is displayed at the top of the viewer.

MONITORING AREA




		Description			
1	< 🕆 Resources >	Click the arrows on the left and right to move between Resources, Bookmarks, Layouts, and Cameras with Activity . Alternatively, click on the name to display a drop-down menu.			
2	Resources Layouts	Click to view saved layouts and resources.			
3	Click to select a template , open the template editor, or remove a template.				



4	0	Click to switch all feeds to live, review all live fees, pause/unpause all feeds, or clear all panels.
5		Click to open the <u>Archive builder</u> .
6	Po	Click to open Bookmarks . A bookmark can be added.
7	15	Click to save a layout .
8		Click to send/cast a layout to a monitor . Select a monitor.
9	0	Click to open black screen monitor .
10	53	Click to make the monitor panels full screen.
11	S	Play from start
12	G	Reload
		Settings Menu
	•	Resource view editor
13	:	Monitoring tab settings
		Live streaming stats
14	Camera	Panel Display

ALARM INFORMATION: RIGHT PANEL

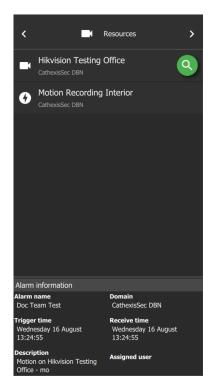

Click the arrows to switch between **Resources** and **Procedures** associated with the alarm.



>

Click this icon to search.


 $\rightarrow\,$ To add a camera to the viewing panels, double-click the camera listed under Resources.

The procedure associated with the alarm (if any) will be displayed when the **Procedures** option is selected.

The alarm information will be listed.



14.2 Alarm Reports

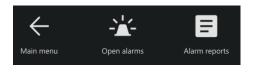

After opening a new Alarms tab, select **Alarm reports**.



 \rightarrow Click the arrow to select to view the **Alarm list** or **Alarm summary**.



 \rightarrow To refresh the page, click the **refresh icon**.



 \rightarrow Click the **ellipses icon** to reveal further options.



Selecting any option in the filters panel of the **Alarm reports** tab will display this overlay.

Click Fetch report to fetch the report.


14.2.1 Copy and Paste



The **copy and paste buttons** (in the top-left corner of the left panel) allow for the copying and pasting of alarm filters, or alarm summaries (depending on whether the user is in the **Alarm list** or **Alarm summary** view).



- \rightarrow Click the copy icon to copy either an alarm filter or an alarm summary.
- \rightarrow Click the paste icon to paste the last item copied.
- → Pressing and holding the paste button will reveal the clipboard. This will allow the user to paste items into the alarm filter (if in the Alarm list view) or the alarm summary setting (if in the Alarm summary view).

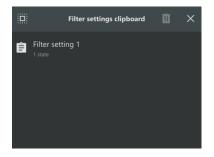



14.2.2 Further Options (Alarm List and Alarm Summary)




14.2.2.1 Export

Settings Tab		Columns 1	Гаb	
Export X	r	Export		×
Settings Columns	Settings Columns			
Title	✓ State	🗹 Key	🗹 Alarm	
Format PDF 👻	Trigger time	🗹 Arrival time	🗹 Time	
Page size A4	Description	Priority Tags	🗹 Owner	
Page orientation Portrait	Domain	iugs		
Save as	Select all Clear all			Save as
\rightarrow Enter a title for the report.	ightarrow Check the	e desired colur	nns.	
ightarrow Select a format (PDF or CSV).				
\rightarrow Select a page size (A3 or A4).				
→ Select a page orientation (portrait or landscape).				

 \rightarrow To export the report, click **Save as**. Choose a location, enter a file name and click **Save**.

14.2.2.2 Manage Report Templates

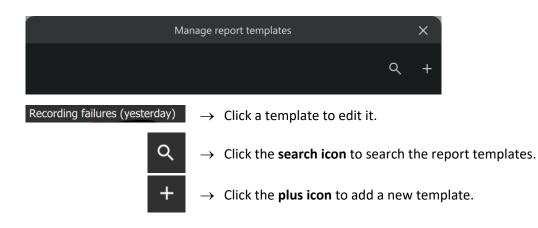



Edit Templat	e				
Settings Content Schedule	Edit 'Current vs last month'	□ ×	\rightarrow	Clicking a template will open template dialogue.	the Edit
Format PDF Orientation Portrait	·			tal	ck on the bs to edit the ntent in em.
View		Cancel Ok			
		View	\rightarrow	Click View to view the report	file.
	Cancel	Ok	\rightarrow	Click Cancel to cancel the cha	nges.
			\rightarrow	Click OK to save changes.	

Add a New Template

8	Create report template	ı X
Settings Content Sche	dule	
Settings	Content Schedule	
Title		
Format	PDF 🔻	
Orientation	Portrait 👻	
Settings Content Sche	dule	
Sections		+
Alarms		Î

→ Clicking the plus icon will open the Create report template dialogue.

Settings tab

- \rightarrow Enter a name for the report template.
- \rightarrow Select a format (PDF or CSV).
- \rightarrow Select an orientation (portrait or landscape).



Click **Next** to move to the next tab.

Content tab

- → Click the **plus icon** to add a section to the report template. The **Create section** window will open.
- → Or, click the name of a section (in this example, "Alarms") to edit a section that has already been created. This will open the window to edit the section.
- $\rightarrow~$ Edit the name and select the category.
- \rightarrow Click **OK** to save changes.

Next >>

Click **Next** to move to the next tab.



Settings Content Schedule	Schedule tab
Email report	\rightarrow Check Email report .
	\rightarrow Click the fields to edit them.
Send Hourly at 0 min after the hour	\rightarrow Use the up and down arrows to adjust the values.
	\rightarrow Enter an email subject.
Email subject	\rightarrow Click the plus icon to add email recipients.
Email recipients	Save \rightarrow Click Save to save changes.

14.2.3 Alarm List

	Key	Time 🗸	Alarm	Priority	Domain	Description	Owner	State	Tags
- X -	8783527	05:29:05	Motion	Low	CathexisSec DBN	Motion on Hikvision Reception - motion		Closed	
- '	8783526	05:28:55	Motion	Low	CathexisSec DBN	Motion on Hikvision Reception - motion	tion - motion Closed		



The alarm icon colour is set in the Configuration tab.


- → Click a category to sort the alarms by that category. The possible categories are: Key, Trigger time, Arrival time, Time, Alarm, Priority, Domain, Description, Owner, State, Tags.
- \rightarrow Right-click an individual alarm to view the options. See below.

Preview	-
View alarm	_
Assign to me	
Close	_
Add tag	
Edit tags	_
View alarm history	_
Copy cell value	_

- \rightarrow Click **Preview** to preview the selected alarm.
- \rightarrow Click **View alarm** to open the <u>Alarm viewer</u>.
- \rightarrow Click **Assign to me** to assign the alarm to the current user.
- \rightarrow Click **Close** to close the selected alarm.
- → To add a tag to the selected alarm, hover the mouse over Add tag. Then select a tag.
- \rightarrow To modify the tags of the selected alarm, click **Edit tags**.
- → Select View alarm history to view the history of the selected alarm.
- \rightarrow Click **Copy cell value** to copy the cell text to the clipboard.



14.2.3.1 Export, Choose Columns or Manage Report Templates

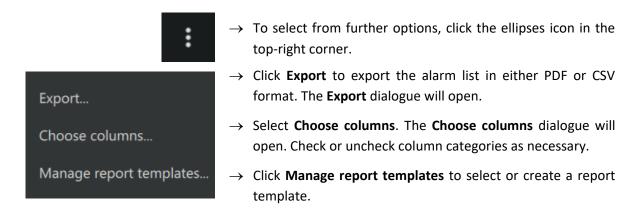


14.2.3.3 Filters

The alarms in the **Alarm list** can be filtered according to the following parameters:



→ To choose a filter template, click **Templates**. Select the template in the dialogue that opens.

Note: To create a new template, see <u>Manage report templates</u>. Filter templates are defined by the sections that are set up in the report template. Any section created when setting up a report template can be used as a filter template.

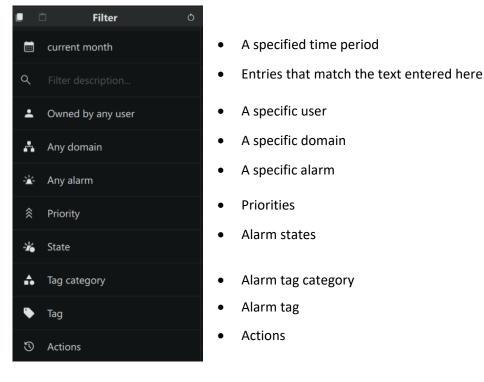


•

 \rightarrow Click the arrows to adjust the maximum number of results that will be shown. Alternatively, enter a value in the field and press ENTER on the keyboard.




→ Once filter/s have been set, it is possible to reset the entire filter panel to its default state (closed alarms) by clicking the **refresh icon**.



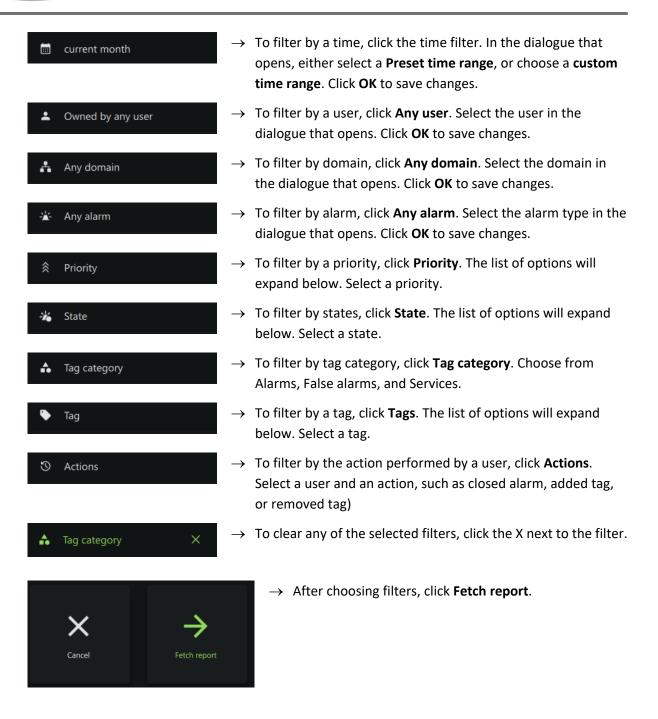

14.2.4 Alarm Summary

The Alarm Summary section presents the summaries of alarms, grouped according to parameters set by the user.

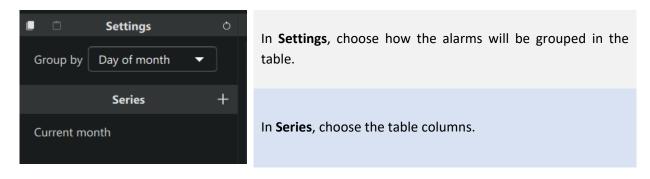



For example:

•

÷

Settings	 → Click the arrow under Settings to choose a grouping from the drop-down menu. Hour Of Day Day Of Week
Series +	→ Click the plus icon next to the Series heading. This will open the Add series dialogue.
Add series	\rightarrow Enter a name for the series in the Series name field.
mmary type Total 🔹	→ Select a Summary type .
current month	\rightarrow Select a filter (column) type.
Filter description	Icons in top-right corner of the Add series dialogue:
Owned by any user Any domain	
Any alarm	\rightarrow Click this icon to paste the copied
Priority	filter settings. \rightarrow Click this icon to reset the filter
State Tag category	settings.
Tag	\rightarrow Click OK .
	Note: It is possible to add multiple series.
	→ Click Fetch report .



Settings				
Group by Day Of Week 🔻	Day Of Week	Current month	Ambulance count	Doc team alarms
	Monday	82825		
Series +	Tuesday	84530		
Current month	Wednesday	67707		
	Thursday	85411		22413
Ambulance count	Friday	82074	11	15693
Doc team alarms	Saturday	58653		
	Sunday	49899		

The report will be presented, showing the parameters set in the left panel.



15. Conclusion

Note: This manual was designed to deal with the installation and setup of Carbon.

For more information about CathexisVision, consult the *CathexisVision Operator's Manual* and the *CathexisVision Setup Manual* (<u>https://cathexisvideo.com/</u>).

For technical support, email support@cathexisvideo.com.

USEFUL LINKS

To view **tutorial videos** on CathexisVision products and setup, visit <u>https://cathexisvideo.com/resources/videos</u>

Find answers to Cathexis Frequently Asked Questions: https://cathexis.crisp.help/en/?1557129162258