

Edeka Scale Integration App-note



Contents

1. Introduction	4
1.1 Requirements	4
1.1.1 General Requirements	4
1.1.2 License Requirements	4
1.2 Integration Components	5
2. Device Addition	6
2.1 CathexisVision Specific Edeka Scale Setup	6
2.2 Devices Section (Add a New Device in CathexisVision)	6
2.2.1 The Integration Panel	6
2.2.2 Device Addition	7
3. Configuration Section (Tabs)	8
3.1 Object Configuration Tab	8
3.1.1 Object Configuration Buttons	8
3.1.2 Object Configuration Right-Click Options	8
3.1.3 Edit Object	9
3.1.4 Configure Overlays	10
3.2 Objects Properties Tab	11
3.3 Device Events Tab	11
3.3.1 Event Type Options	11
3.4 Object Groups Tab	12
3.4.1 Create a Group	12
3.4.2 Add or Remove Objects	12
3.5 General Tab	13
3.5.1 Configure a New Database	13
3.5.2 Select the Integration Database	14
3.5.3 General Settings	14
4. Events	16
4.1 Event Window	16
4.2 Creating an Event	17
4.3 General Tab	17
4.4 Triggers Tab	18
4.4.1 Set the Device as the Trigger	18
4.4.2 Trigger Types (Trigger Using)	19

CATHEXIS

	4.4.3 While/When and Any/All	. 19
	4.4.4 Define the Trigger	. 19
	4.4.5 Trigger Example	. 21
4	4.5 Actions	. 21
	4.5.1 New Action	. 22
5. (Camera Tab Overlay Setup	. 23
ļ	5.1 Navigate to the Cameras Tab	. 23
ļ	5.2 Video Feed Options Panel	. 24
ļ	5.3 Select the Overlay	. 24
6. I	Database	. 25
(5.1 Navigate to the Database	. 25
(5.2 Database Interface	. 26
	6.2.1 Viewing an Entry's Associated Recording	. 27
7. (Conclusion	. 28

While Cathexis has made every effort to ensure the accuracy of this document, there is no guarantee of accuracy, neither explicit nor implied. Specifications are subject to change without notice.



1. Introduction

This document details the integration of the Edeka Scale with the CathexisVision software.

The Edeka Scale Integration works in conjunction with the Edeka POS integration, as the POS receives information from the scale. Functionally, the integration of the Edeka Scale will entail the triggering of standard CathexisVision Events, based on the triggers from the scale device.

1.1 Requirements

1.1.1 General Requirements

- CathexisVision 2016 Service Pack 3 and later.
- Windows 7 64bit and later.
- Windows Server 2008 R2 and later.

Note:

- 1. For information regarding the regular operation of a scale device, please consult the relevant Edeka documentation.
- 2. The connection is via UDP, and the port number needs to be the same on the Edeka Scale system as on CathexisVision. The UDP port number should be 4001.

1.1.2 License Requirements

The Edeka Scale integration license requirements are as follows:

License	Name	Description
CEDS-2000	Device license	This license is the "base" license to integrate with a scale system. It is applied to the server to which the scale system is connected. It will allow for the connection of a single scale system.
CEDS-1001	Single scale license	These licenses apply to the scales in a scale system. The CEDS - 1001 will license a single scale, and may be added on a scale-by-scale basis.
CEDS-3000	Edeka scale bundle; includes device license and unlimited scale licenses.	This license includes the CEDS-2000 device license, and also provides support for unlimited CEDS-1001 scale licenses.

Note: In this integration, individual scales will require a **CEDS-1001** license for each scale.

A NOTE ON CAMERA CHANNELS

The CathexisVision software packages have **limits on camera channels**. A multi-sensor camera is physically a single device (camera) but it requires a camera channel for each one of the internal cameras. The same applies to an encoder: a 16-channel encoder will account for 16 camera channels on the CathexisVision software, even though it is a single device. Even when a camera or device only uses a single IP license, the camera channel limit will still apply.

1.2 Integration Components

All CathexisVision integrations have two component levels: **Device** and **Object**.

- **Device** The device is CathexisVision software's interface, which handles all the interaction between CathexisVision and the integrated hardware. When an integration is added to the CathexisVision system, a device is added. The messages received from the device are called Device events.
- **Objects** Objects are the individual pieces of hardware that comprise the integration. There may be multiple "object types" under the objects group. For example, the main controller and door nodes of an access control system are both objects. They are different types of objects.

USEFUL LINKS

To view tutorial videos on CathexisVision setup, visit <u>https://cathexisvideo.com/resources/videos</u>

Find answers to Cathexis Frequently Asked Questions: <u>https://cathexis.crisp.help/en/?1557129162258</u>

2. Device Addition

CATHEXIS

This section details the procedure for adding an Edeka scale device to CathexisVision.

2.1 CathexisVision Specific Edeka Scale Setup


Ensure that the UDP port numbers are the same for the scale system as well as CathexisVision. The port number should be set to 4001.

2.2 Devices Section (Add a New Device in CathexisVision)

Integrations are added on a server-by-server basis. They are managed in the Integration Devices panel, under the **Setup Tab** of the servers to which they are added.

2.2.1 The Integration Panel

To get to the Integration Panel, follow this path: Site / Open tab / Setup / Configuration icon / Server / Integration devices.

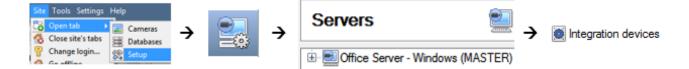

There are two sections in the Integration Panel:

- 1. The **Devices** list shows the integration devices attached to the integration database.
- 2. The **Configuration** section enables editing/reviewing the device selected in the **Devices** section.

DES	БКТОР	-BDF7	791D -	Integr	ation de	evices				503
)evices	s									
Name	~	Driver						6	New	devic
Edeka F	POS	Edeka P	oS						- Ju	devio
Edeka S	deka Scale Edeka Waage								Ealt	aevic
Home	Bargains	Home B	argains PC	DS					Delet	e dev
Intrepio	d	Southwe	est Microw	vave Intrep	bid					
Matrix		Matrix B	arcode Re	ader .						
									5 items	s
	uration of		Scale' Object prop	perties	Device even	ts Object	groups G	General	5 item:	5
Object	t configura		Object prop	perties T	Device even	ts Object	groups G	General	5 item	s
Object	t configura	ation	Object prop	perties TD	Device even Name	ts Object Cameras	groups G Object grou		5 items	s
Object	t configura t type 🚺 Type	ation All obje	Object prop cts	▼ ID	Name					s
Object	t configura t type Type Comm	ation All obje	Object prop cts	▼ ID	Name Default	Cameras				s
Object Object	t configura t type 🚺 Type	ation All obje	Object prop cts	▼ ID default	Name Default			ups Lic		S



2.2.2 Device Addition

New device

- 1. In the Integration Panel, navigate to the **Devices section.**
- 2. Click on the **New device** button on the right-hand side. This will open the addition dialogue.
- 3. Select Edeka Waage driver from the list.

New integration device

4. Give the device a descriptive name.

Configure the device

5. Set the **UDP listening** port to 4001.

Name	Edeka Waage (Scale)	
Conne	ction	
UDP	listen port 4001 ≑	

Once added, the device objects and information should populate automatically.

3. Configuration Section (Tabs)

The configuration section is divided up into a number of tabs. These tabs are: **Object configuration, Object properties, Device events, Object groups,** and **General.**

3.1 Object Configuration Tab

The object configuration tab is where all the individual objects that comprise the integration may be viewed. The Edeka Scale has two object types: **Waage**, and **Communication Channel.**

Waage, and Communication channel objects are automatically added when the NVR receives transactions from the Edeka Scale Server.

Object	configuration	Object prop	perties D	evice even	ts Object	groups	Gener	al	
Object	type 🏾 🏶 All obj	jects	-						
	Туре		ID	Name	Cameras	Object g	roups	License	6
Ψ.	Communicati	on channel	default	Default					
*	Waage		10.0.2.15	Waage 1	Edeka Scale			0	

3.1.1 Object Configuration Buttons

New	
Edit	
Delete	٦

Click **New** to add a new object.

Click Edit to change an existing object.

Click **Delete** to remove an existing object from the CathexisVision configuration.

3.1.2 Object Configuration Right-Click Options

New
Disable
Delete
Properties

New will open up the dialogue to add a new object.

Disable/Enable allows objects to be enabled/disabled manually.

Delete will permanently remove this object from the list.

Properties will open up the object properties. The object may be edited from here. Specifically, assign cameras to this object, and define user access levels.



3.1.3 Edit Object

Use the Object configuration tab to make changes. Open the object **editing window** by selecting object from the list, and clicking the **Edit button**, or **right-click Properties**.

This window is where cameras are added to objects, overlays are configured, and access rights to the integration are added. These are dealt with in two tabs: **Cameras** and **Access**.

3.1.3.1 Properties: Cameras

Adding a camera to an object will mean that whenever there is an event on that object, the recording from that camera will be related to the time and date of the object event, in the Integration database.

Edit object			×
Edit object			\$
Edit object settings			
Name Waage 1			
Cameras Access			
Camera 1 💹 Edeka Scale 🔻 🤌 🧕			
Add camera			
	ОК	Can	ncel

Add camera

To **add** a camera, click Add camera, and select the relevant camera from the dropdown menu.

0

ß

- To **delete** a camera, click the trash icon.
- To **edit** overlays, click the settings icon.

Note: If *continuous recording* is not set up on associated cameras, it runs the risk of device objects triggering while the cameras are not recording. To record only cameras when an object triggers, set up **Events** that trigger a recording, when one of these objects is activated.



3.1.3.2 Properties: Access

Cameras	Access				
🔽 Use the	e default acc	ess rights f	or 'WeighBridge	e' objects 🛛	Configure default access
View		Level 1	Level 2	Level 3	Level 4
	I	Level 5	Level 6	Level 7	Level 8
	1	Level 9	Level 10	Level 1	1 🗌 Level 12

Access protects sensitive objects by only allowing certain user levels access to them.

Under **View**, the access levels may be set.

Note: If *Use default access rights* is checked, make sure that those default rights have been correctly defined. Click on **Configure default access** to do this.

3.1.4 Configure Overlays

Open the Overlay settings dialogue window by following one of the steps below:

- 1. Select the Waage object from the Object type drop-down menu to display the overlay settings icon.
- 2. Right-click object / Properties / Add camera.
 - /> Then click the settings icon.

 Configure 		?	×		
Edeka Waa		Jse de	faults		
🗹 Enable					
General ∛ Palette	Default	•			
Position					
Alignment		Left		•	
Width		Default	•		
Automatic r	esize	Enabled			•
Appearance	Z				
Style	Defaul	t panel	•		
Opacity	30%	•			
🗹 Use def	ault backg	round cold	or		

- Check **Enable** to enable the overlays.
- Select the **Palette style** for the overlay panel from the drop-down menu.
- Define the Alignment and Width of the overlay, and disable/enable the Automatic Resizing of the overlay panel.
- Define the **Appearance** of the overlay panel by selecting a **Style** and **Opacity level**.
- Check Use default background colour to use the white background.
- To set a custom panel colour, uncheck Use Default background colour.
 - Click the colour box to bring up a colour chart.



3.2 Objects Properties Tab

The Object properties tab allows objects to be viewed by type. In the case of the Edeka Scale device, available objects are **Communication Channel** and **Waage**.

Configuration of 'Edek	a Scale'						
Object configuration	Object prope	erties	Device events	Object g	roups	General	
Object type 📝 Waa	ge	•					
ID ID		Name	Letzte kontakt		License	ed	6
Waage.10.0.2.15 Wa	age.10.0.2.15	Waage 1	2016-10-05 11:	21:18.053	\checkmark		


3.3 Device Events Tab

The Device events tab lists real-time events happening on this device. Installers can ensure that the integration is functioning, and monitor the events on site.

Object configu	uration	Obje	Object properties			Device events		Object groups	General	
All events	•					Filt	er			
Event type										•
Summe	201	10.0	1	3616	4	6,88				
Einzelpos	201	10.0	2	3648	R&	1,48	0,1	48		
Einzelpos	201	10.0	2	3648	R&	1,94	0,1	94		
Summe	201	10.0	2	3648	2	3,42				
Einzelpos	201	10.0	1	3616	SC	1,48	0,1	48		
Einzelpos	201	10.0	1	3616	RI	1,96	0,1	96		
Summe	201	10.0	1	3616	4	6,88				
Einzelpos	201	10.0	2	3648	R&	1,94	0,1	94		~

3.3.1 Event Type Options

Events may be viewed according to type. Edeka Scale event types are:

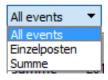



3.4 Object Groups Tab

Groups of the same type of object can be created (e.g. groups of scales).

nfiguration of 'Edek	a Scale'			
Object configuration	Object properties	Device events	Object groups	
Group 🗱 Waage Gro	up 🔻 🎦 📝 📑	k		
Available objects		Objects in 'Wa	age Group' grou	р
Name	° 🗇	Name		1
Waage 1				- 1
Trange 1				
indige i	4			

Tip: This is useful when setting up Events, because events can be triggered by an object group. (I.e. A group will trigger, if any of the devices in that group are triggered.)

3.4.1 Create a Group

- To **create** a group, click on this icon.
- To **edit** a group, click on this icon.
- To **delete** a group, click on this icon.

A new dialogue box will open when the create button is clicked.

Oreate a r	new		×
Create a new Configure t	object group he new object gr	oup	
Group name Object type	🌮 Waage		•
	OK	Can	cel

Give the group a descriptive Group name.

Click on the drop-down menu to select the **Object type** for grouping.

Note: Once a group has been created, the object type of the group may not be edited.

3.4.2 Add or Remove Objects

After creating a group, a list of all the available objects for that group will be displayed on the left-hand side in the Available objects panel.




Objects can then be chosen from this list, and added to the group.



To **add** these objects to the group, select them from the list, and **click on the right arrow**. To **remove** these objects from the group, select them and **click on the left arrow**.

Note: Multiple objects may be selected at a time.

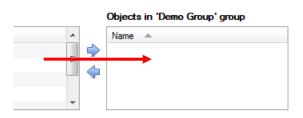

Once individual objects have been added to the group using the arrows (above), they will appear in the section on the right-hand side.

3.5 General Tab

The General tab deals with the **Integration database** and General Settings. Here an existing database can be selected, or a new integration database may be configured.

Configuration of 'Edeka Scale'									
Object configuration	Object properties	Device events	Object groups	General					
Integration database select integration database 🐑									
Configure integration databases									
General settings									

Important Note: Each integrated device needs to be attached to an Integration database. Without setting up/adding a database here the integration will not function properly within the CathexisVision system.

3.5.1 Configure a New Database

Configure integration databases

If there is no database created yet, clicking on this button will begin the integration database setup.

3.5.1.1 Configure Integration Database

🐷 Integration da	atabase setup			? 💌
RACHEL-PC	Key Name 6 POS New	Size(mb) 100	Enabled Yes	Flags
	Connected to u	nit RACHEL-I	PC	Close

Select the unit to which the database will be added from the list on the left.

Click **New** to create a new integration database.



 Create database 			
		-	
. 1)		•	
ОК	Cano	el	
	_		

Give the database a name.

Set the database Size.

Select the **Edeka Waage** driver from the drop-down menu.

3.5.2 Select the Integration Database

Once an integration database has been created, it needs to be selected.

Object configuration Object properties	Device events	Object groups	General	Return to the General tab.
Integration database select integration	database 🕂 🐑			Then, click the settings
Configure integration databases				icon.
General settings				

A dialogue will appear. Only databases which relate to the device being added should appear.

Integration database		×
Integration database Select integration database		
Integration database Edeka Scale		•
ОК	Can	icel

Select the Edeka Scale database from the dropdown menu.

Then click **OK**.

3.5.3 General Settings

Object configuration Object properties Device events Object gro	General General settings	Click the General
Integration database select integration database		settings button to
300		open the settings.
E Configure integration databases		
General settings		



1

	General settings	? ×
	Settings ≷	
1) Ziel IP Adresse	127.0 .0 .1
2	Port der Datenquelle (Daten senden von)	8001 🜲
3	Port des Datennziel (Daten senden an)	8000 🜲
4	Ausgeblendete Verkäufer (Komma getrennte Liste)	
		OK Cancel

- Enter the **IP address** of the unit on which the Edeka POS integration is running.
- 2 Enter the **Port number from** which that data is **sent**.
- 3 Enter the **Port number** on which the Edeka POS will receive data from the Edeka Scale integration.
- 4 Enter the **User IDs** to be blocklisted. Transactions with these IDs will not be sent to the Edeka POS integration.

Enter the user IDs, separated by commas.



4. Events

A CathexisVision Event has a trigger, which causes an action. Integrated devices can be set to act at triggers, or as actions. This document will detail the aspects of Events specific to the Edeka Scale device. There is a comprehensive guide to CathexisVision Events in the main setup manual.

Most of the data that CathexisVision receives from a device is presented in the Events interface. This is in order to give the user a full range of options. As a result, some of the options presented in the interface may be *impractical* for being used as an event trigger, or action.

4.1 Event Window

Events in CathexisVision are set up via the Event Window, which has four tabs.

- In the **General Tab**, an event is given a name, description, schedule and priority.
- In the **Triggers Tab** the trigger for the event is defined.
- In the Actions Tab the action which the event takes, is defined.
- In the **Resources Tab** the various site resources which can be used as part of an event are defined.

New event			×
New Event			
General Triggers Actions Resources Use standard triggers to trigger the event owing are true Perf standard triggers owing are true trigger template intrepid home bargains matrix edeka pos edeka scale only trigger event when select input	6	New Edit Delete	
	OK	Cano	el



4.2 Creating an Event

To create an event using the Edeka Scale device, navigate to Events by following the sequence: Open Tab / Setup / Servers / Master Server / Events. This is shown below.

Site	Tools Settings	Help					
Co	Open tab 🔹 🕨	Cameras			Servers 📃		
6	Close site's tabs	Databases	>	>		>	🂋 Events
8	Change login	Setup			Office Server - Windows (MASTER)		
~	Go offling						

This will allow the user to enter the Events management area.



Once in Events management area, click the New icon at the bottom of the screen. This will open up the New Event window. Alternatively, right-click and select New.

The new event window has four tabs which can be used to set up the event: General, Triggers, Actions, and Resources.

4.3 General Tab

Create a new event under the General tab by filling in the fields.

New Event

Name. New event General Triggers Actions Resources Name New event icon. 8 Description Select a Priority. ×٦ 2 Schedule Every day (DEMO) 🔔 Low Priority

Give the event a descriptive

Set up a Schedule if desired by clicking the

Modify the **Description** if relevant. See below.

Note for group triggers: For an event to be databased under the name of a specific object, and not the name of the triggering group, modify the Description field in the **General tab** of the Event setup.

0 Click on the question mark icon to see a list of available descriptions and instructions for how to enter these descriptions.



4.4 Triggers Tab

The Triggers tab is where a user chooses which events sent from devices (or systems) will be used for an automated CathexisVision action. A trigger is a user-defined input, for example, the user may choose to define the trigger as a door opening on an access control system.

Once the user defines the trigger, it can be used to cause a subsequent action (which the user will also define).

New Event

New event			
General	Triggers	Actions	Resources
	l <u>ard triggers</u> to		
Perform a	Description		lowing are true


The user will need to click on the hyperlinks to set up the trigger.

Clicking on a hyperlink will open further options.

The subsections below provide instructions.

4.4.1 Set the Device as the Trigger

For a new event, the trigger type will default to "standard triggers". The user will need to change this to the Edeka Scale device.

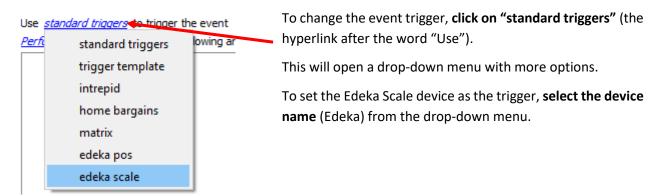



4.4.2 Trigger Types (Trigger Using)

It is useful to think of this as a master trigger type.

Trigger using <u>any waage</u>		
	*	any waage
<u>Start actions v</u>	*	waages in group 'Waage Group'
Description	*	specific waage
	ų.	Communication channels
		any device event

Click on "any waage" (the hyperlink after the words "Trigger using").

This will open a drop-down menu with more options.

Click an option from the menu to select.

See the table below for descriptions of the options on the drop-down menu.

MENU OPTION	DESCRIPTION OF TRIGGER TYPE
Any waage	will trigger when any of these scales send the selected trigger.
Scales in group	will trigger if any of the scales in this group send the selected trigger. If a group
'Waage Group'	has been setup it will appear here in this list.
Specific waage	will trigger an event from the specific scale selected.
Communication	will trigger only on the Communication channels.
channels	
Any device event	will trigger on any event that occurs on the device. Within the "any device
	event" setup, set "device event rules" which will constrain which device events
	will trigger the event.

4.4.3 While/When and Any/All

When triggering on an object, there is an option to trigger **while/when** a trigger is active. Multiple triggers may be selected, and it should be defined whether **all/any** of the triggers need to be active to start an event.

Use <u>edeka scale</u> to trigger the event Trigger using <u>any waage</u> To change these settings click on the relevant, blue, hyperlinks.

Start actions when any of the following device events occur

4.4.4 Define the Trigger

After selecting a master trigger type, add a trigger to the event.

New

Click on New in the Triggers tab.



This will bring up a dialogue box for the various trigger types.

4.4.4.1 Example: New Device Event Trigger

For example, within the *any device event* option, choose what type of device Event will be the trigger.

• New device event trigger		×
New device event trigger Configure settings		23
Event Einzelposten Schedule Always The event must also match <u>any</u> of the followin Description	ng rules New Edit	_
	Delet	e
ОК	Can	cel

- Choose an event type from the dropdown menu.
- To add/edit/delete a Trigger (a constraint) use the New, Edit, and Delete buttons on the right hand side.
- Choose whether any, or all constraints need to be fulfilled to set off a trigger. Follow the instructions below.

Note: Multiple constraints (**Device Event Triggers**) may be set. If a constraint is not defined, every single device event will trigger this event.

4.4.4.2 New Device Event Rule

New

To configure a New device event rule, **click on New** in the New device event trigger window (above, <u>4.4.4.1</u>).

This will bring up a further window, called **New device event rule**.

• New device		×
New device event rule Configure settings		233
<u>Waaqe</u> equals		
ОК	Can	cel

To change the constraint, click on the first hyperlink. This will bring up the full list of available rules.

To modify the way this rule will be treated, click on the second hyperlink (*equals* in the example). This will show display the rules options.



Note: When all available options are known to CathexisVision, a drop-down menu will appear. When these variables are not pre-defined, a written description will need to be filled in manually. The information pulled through to the events is information sent to CathexisVision from the Edeka Scale device. See the scale settings for the strings needed here.

4.4.5 Trigger Example

Below is an example of a trigger.

When a sum total which equals 6.88 is received from any scale, a device event will be triggered.

General Triggers Actions Resources	
Use <u>edeka scale</u> to trigger the event Trigger using <u>any waage</u>	
Start actions when any of the following device events occur	
Description 👸	New
'Summe' device event with 'summe' equals 6.88	Edit
	Delete
	1 item
Stop actions <u>after</u> 20sec 🔹 🗌 or when select input 🔻 <u>goes high</u>	
On re-trigger stop and restart active event	
Only trigger event when select input v is high	

A typical action here could be to mail the store/security manager to notify them of this.

4.5 Actions

New Event Ha New event ne General Triggers Actions Description Set

Having defined the triggers that will initiate an event, the user will need to define Actions.

Select the Actions tab from the New event window.




With many integrations there will be the option to control the device as one of the actions. However, the Edeka Scale device **cannot be controlled as one of the actions**.

4.5.1 New Action

New

To add an action, **click New** from the Actions tab.

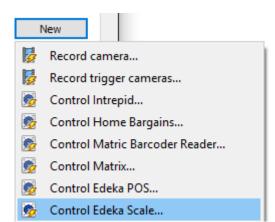

A list of available actions will appear. The drop-down contains all the available action types. The icons represent the device action type.

Select an option, for example, Record Camera.

Note: Although the option is presented in the menu, it is **not possible** to control the Edeka Scale device as a CathexisVision action:

🐷 Control device	- • •
Control device	(Brand)
Configure command	
Device Advanced	
No commands available for this device	
ОК	Cancel




5. Camera Tab Overlay Setup

Once all the relevant settings have been configured, the Edeka Scale overlay can be pulled through over the relevant camera feed.

🗱 SiteName 🗵 🖃 SiteName 🛛		
ECERCI SCOR SCHINKENKRUSTENB 0,148 1,48 SCHINKENKRUSTENB 0,156 1,96 SCHINKENKRUSTENB 0,148 1,48 RI-BRATENGULASCH 0,196 1,96		■ Resources
4 Posten Summe 6,88 R&R Afle Rote, R 0,148 1,48 R&R Pfeffer-Suiz 0,194 1,94 2 Posten Summe 3,42 Summe 3,42 R&R Ahle Rote, R 0,148 1,48		👳 2 💭 Edeka Scale
4 Posten Summe 6,88 R&R Ahle Rote R 0.148 1.48 R&R Pfeffer-Suc 0.194 1.94 2 Posten Summe 3,42 SCHINKENKRUSTENB 0,148 1.48		
RI-BRATENGULASCH 0,1961 1,96 4 Posten Summe 6,88 R&R Pfeffer-Sülz 0,194 1,94 2 Posten Summe 3,42		
	11;53:08 1, 5 Oct	Wed \$ 11 \$ 53 \$ 08 \$ 5 oct \$ 11 \$ 53 \$ 08 \$
💄 admin (Administrator) 🛛 🮯 CathexisV	ision Premium Supplied by Cathexis In	ternal P 🖗 🗠 🎄 👍

Note: Cameras must have already been added to the Waage objects.

5.1 Navigate to the Cameras Tab

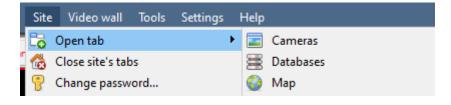

To see the camera feeds, go to the Cameras tab by following this path:

Site / Open tab / Cameras



5.2 Video Feed Options Panel



To bring up the overlay, click the arrow to the left of the screen, to pop out the video feed options panel.

The Video feed options panel will present a number of options specific to the settings configured for that video feed.

5.3 Select the Overlay






Clicking this icon will bring up the overlay options for this video feed.

Select the device and enable the overlay.



6. Database

The databases tab will allow navigation of the databased entries, for each individual database. In the databases tab each database is presented as a table. It has built in filters, and the ability to navigate by timestamp. If a database entry has an associated recording, it can be launched from within the databases tab.

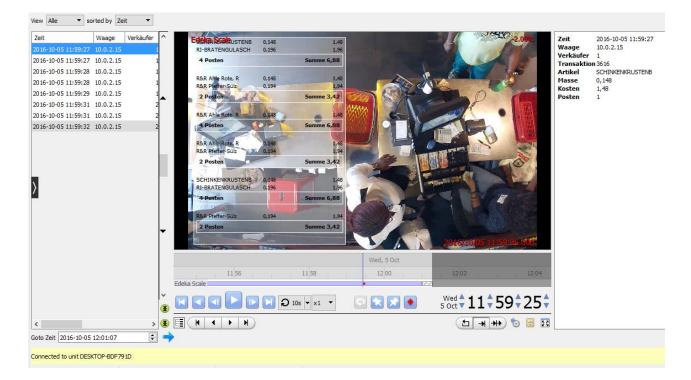

Most integrations will have a different database presentation, and unique filters, due to the different parameters sent to CathexisVision by the integrated device.

The Edeka Scale database is information rich. This is an example of some of the information that is included.

6.1 Navigate to the Database

Site	Tools Settings Help	<u> </u>
Co 0	pen tab	🕨 🖃 Cameras
🔞 C	lose site's tabs	Databases

To open the Database tab, follow **Site / Open tab** / **Databases**.





When the database tab opens, select the relevant integration database from the database panel that opens on the left hand side.

The databases are ordered under the NVRs to which they are attached.

To open and close this list, click on the arrow in the centre of the list:



6.2 Database Interface




	View changes the way the database is presented. Some integration databases have
View	multiple view options.
	View Alle Alle Zeit Einzelposten Summe
2	Sort the Events by clicking on the drop-down menu:
Sorted By	sorted by Zeit Zeit
3	The easy search option quickly searches the database within one of the following options:
Easy Search	 No EasySearch ▼ No EasySearch ▼ Waage Verkäufer Transaktion Artikel Posten
4	Filter offers a more advanced manner of sorting information in the Integration Database
Filter	table.
	 Once the filters dialogue is open, these are the options: 1. To enable filters check this box: Enable filters 2. To add a new filter click on . The filter icon will change to when filters are active. 3. To delete an added filter click on .
	The options in this integration are:



	Transaction	
	Zeit	
	Waage	
	Verkäufer	
	Transaktion	
	Artikel	
	Masse	
	Kosten	
	Posten	
	Note:	
	1. Multiple filters may be run simultanously simultaneously.	
	2. The same perameter may be used more than once.	
	3. To change a filter click on the blue hyperlinked text.	
	(For example, click on <i><u>Timestamp</u></i> to change the filter from Timestamp, to any of the other available options.)	
5	This will navigates to a specific point in time, down to the second. To navigate to a	
Go to Time	timestamp set the time using the time and date boxes.	
	Then, click on the arrow icon.	

6.2.1 Viewing an Entry's Associated Recording

This integration uses the new video option where the video player is embedded in the database view. This player uses the same timeline features as the CathexisVision Cameras tab.

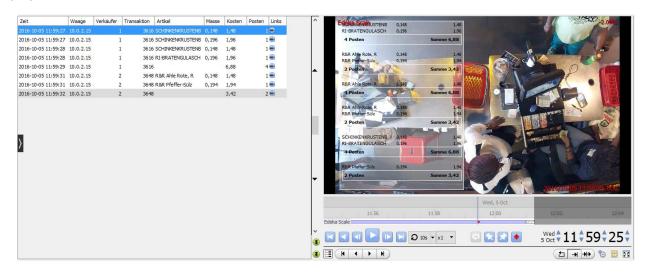

To view an associated recording, simply left-click on a database entry which has the camera icon in the Links column.

Then click **play** in the video player.

To view the recording in a pop-out window, click the Expand icon.

23



7. Conclusion

This app-note was designed to deal specifically with this integration. For further information about the CathexisVision software please consult the main manual (<u>http://cathexisvideo.com/</u>).

For support please contact support@cat.co.za.