



Huawei Lens App-note

Contents

- 1. Introduction 3
 - 1.1 Requirements 3
- 2. Run App 4
- 3. Conclusion 6

While Cathexis has made every effort to ensure the accuracy of this document, there is no guarantee of accuracy, neither explicit nor implied. Specifications are subject to change without notice.

1. Introduction

An app has been developed for use with Huawei cameras integrated with CathesisVision. This standalone application allows for the resetting of the lenses of Huawei cameras.


The camera list is exported from the stats page on the NVR. The list file must then be copied into the app directory, where the app will read it and use the content to reset the Huawei camera lens.

1.1 Requirements

- CathesisVision 2023.3 and later
- Relevant IP camera license/s


2. Run App

1. Contact the Cathesis support team to receive the installation file (**huaweilensreset.exe**):
support@cathesisvideo.com
2. Open the CathesisVision client software and follow the path: **Help / Viewing station stats**

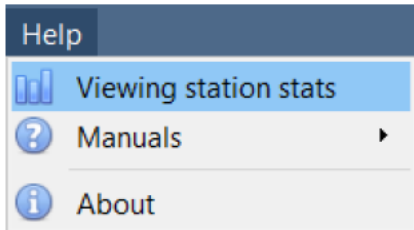

The **Local stats** window will open.

3. Select the **Profiler** server from the “**Other**” heading.
4. Select the **Huawei** cameras tab.

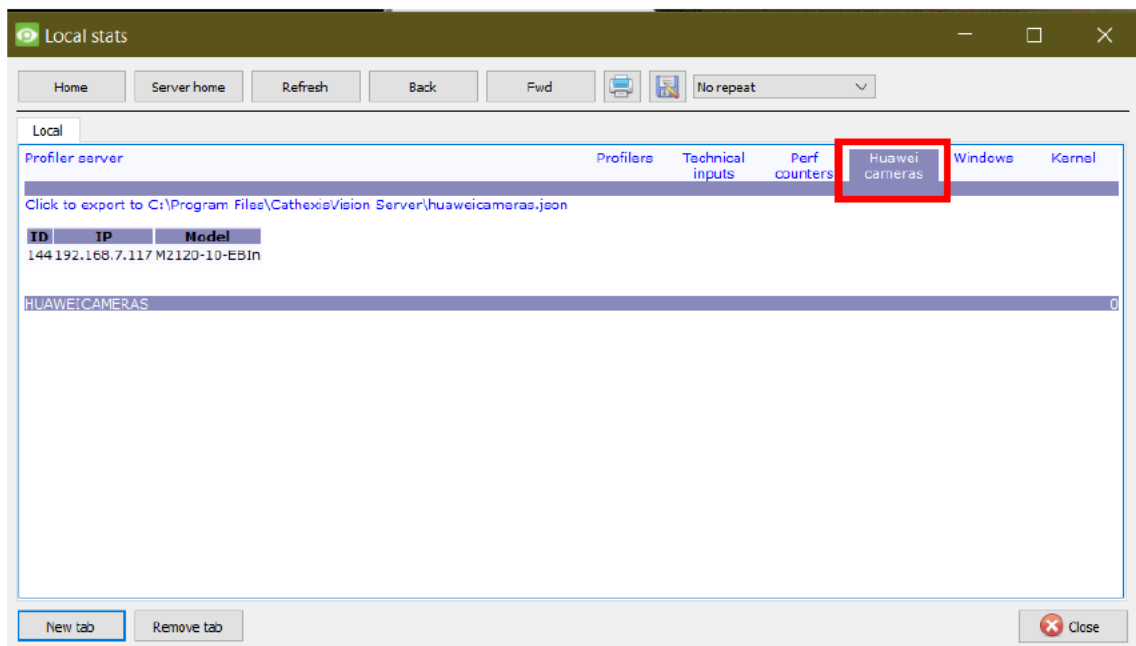

5. Click the blue text link to export the Huawei cameras list.


Copy the huaweicameras.json from **C:\Program Files\CathesisVision Server\huaweicameras**

(Note: The JSON file must be copied before starting the Huawei lens application.)


- Paste the JSON file into the app directory, then open the **Huawei lens application**.

(Note: There is no installation wizard for the app. Simply extract the file.)


The cameras will be listed in the app.

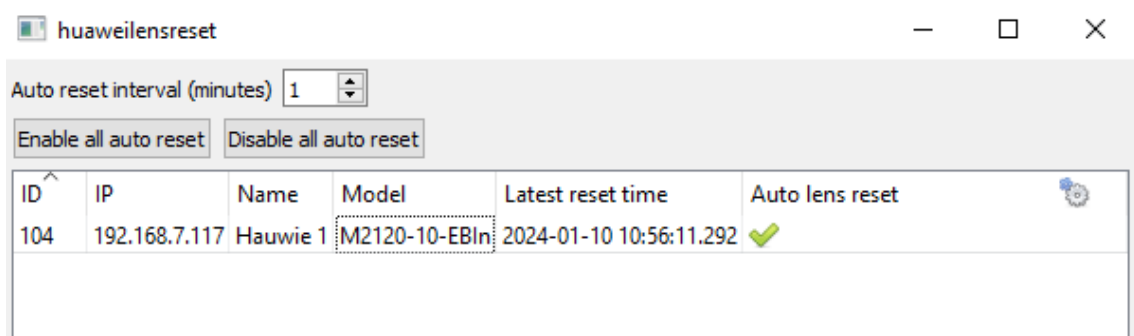

 
- To reset a camera lens, right-click the camera in the list and select **Reset lens**.



 To disable auto lens reset on a camera, right-click the camera in the list and select **Disable auto lens reset**.



 
To enable auto lens reset on a camera, right-click the camera in the list and select **Enable auto lens reset**.



- To change the auto reset interval, click the up/down arrows.



 - To enable auto lens reset on *all* cameras, click the button: **Enable all auto reset**.
To disable auto lens reset on *all* cameras, click the button: **Disable all auto reset**.



3. Conclusion

For more information on setting up CathesisVision, please consult the ***CathesisVision Setup Manual***, available on the Cathesis website (<https://cathesisvideo.com>).

For technical support, contact support@cathesisvideo.com.

USEFUL LINKS

To view **tutorial videos** on CathesisVision setup, visit <https://cathesisvideo.com/resources/videos>

Find answers to Cathesis **Frequently Asked Questions**: <https://cathesis.crisp.help/en/?1557129162258>