



# Commend Intercom Integration White Paper



## Contents

1. Introduction.....	3
1.1 Requirements .....	3
1.1.1 General Requirements.....	3
1.1.2 CathesisVision License Requirements .....	3
1.2 Integration Components .....	4
2. Features and Abilities .....	5
2.1 General Device Features.....	5
2.2 Device Objects .....	5
2.3 Device Events.....	6
2.4 Metadatabase.....	6
2.5 Maps .....	7
3. Conclusion .....	8

While Cathesis has made every effort to ensure the accuracy of this document, there is no guarantee of accuracy, neither explicit nor implied. Specifications are subject to change without notice.



# 1. Introduction

This document indicates the features/abilities of the Commend Intercom system when integrated with CathesisVision. Functionally, this integration will include the triggering of standard CathesisVision system events, based on information received from the device.

For instructions on installation or configuration of the integration, please consult the **Commend Integration App-note**, available on the Cathesis website, and/or the **CathesisVision Setup Manual**.

## 1.1 Requirements

### 1.1.1 General Requirements

- CathesisVision version 2020.4 RC50 or later.
- CathesisVision version 2021.3 RC13 or later.
- CathesisVision version 2022.1 or later.
- The communication medium can be either RS232 serial connection or TCP over Ethernet.

**Note:**

For information regarding the regular operation of the Commend Intercom device, please consult the relevant manufacturer's documentation.

### 1.1.2 CathesisVision License Requirements

License No.	License Name	Description
CCMD-2000	Commend Intercom Device license.	This licenses a single Commend Intercom device.

**Note:** In this integration, individual devices will require a license for each device.

#### A NOTE ON CAMERA CHANNELS

The CathesisVision software packages have **limits on camera channels**. A multi-sensor camera is physically a single device (camera) but it **requires a camera channel for each one of the internal cameras**. The same applies to an encoder: a 16-channel encoder will account for 16 camera channels on the CathesisVision software, even though it is a single device. Even when a camera or device only uses a single IP license, the camera channel limit will still apply.



## 1.2 Integration Components

All CathesisVision integrations have two component levels: **Device** and **Object**.

**Device** The device is CathesisVision software's interface, which handles all the interaction between CathesisVision and the integrated hardware. When an integration is added to the CathesisVision system, a device is added. The messages received from the device are called Device Events.

**Objects** Objects are the individual pieces of hardware that comprise the integration. There may be multiple "object types" under the objects group. For example, the main controller and door nodes of an access control system are both objects. They are different types of objects.



## 2. Features and Abilities

This section indicates the features/abilities of the Commend Intercom software when integrated with CathesisVision.

### 2.1 General Device Features

- CathesisVision receives event messages from the Commend Intercom device.
- System and intercom device event messages can be used to trigger a CathesisVision system event.

### 2.2 Device Objects

Objects are populated automatically as soon as communication between the Commend Intercom system and CathesisVision is established.

Object Type		Abilities
<b>General</b>		<ul style="list-style-type: none"> <li>• This integration has Intercom, Output, Server and Communication channel objects.</li> <li>• Objects are automatically created as soon as communication between the CathesisVision unit and device is established.</li> <li>• Device objects can be commanded as an action of a CathesisVision system event.</li> <li>• Device objects support overlays.</li> <li>• Objects may be linked to cameras to associate device events with video footage.</li> </ul>
<b>Intercom</b>	<b>Object Properties</b>	<ul style="list-style-type: none"> <li>• Name.</li> <li>• Used for camera links to metadatabase and for overlays.</li> </ul>
<b>Output</b>	<b>Object Properties</b>	<ul style="list-style-type: none"> <li>• Open.</li> <li>• Closed.</li> <li>• Pulsed.</li> </ul>
	<b>Command</b>	<ul style="list-style-type: none"> <li>• Open.</li> <li>• Close.</li> <li>• Pulse.</li> </ul>
<b>Server</b>	<b>Object Properties</b>	<ul style="list-style-type: none"> <li>• Displays whether connected to the server.</li> </ul>

## 2.3 Device Events

The CathesisVision Commend Intercom integration generates intercom Events, which are triggered on the device and reflected in CathesisVision.

Event Element	Features/Abilities
<b>General</b>	<p>Events triggered on the device are sent to CathesisVision and can be used to create CathesisVision system events.</p> <p>Device event types are:</p>
<b>Device Event Types</b>	<ul style="list-style-type: none"> <li>• Call ended.</li> <li>• Call interrupted.</li> <li>• Call started.</li> <li>• Server status.</li> </ul>
<b>CathesisVision Event Actions</b>	<p>An <b>output</b> object may be controlled via a CathesisVision event action to perform one of the following commands:</p> <ul style="list-style-type: none"> <li>• Close.</li> <li>• Open.</li> <li>• Pulse.</li> </ul>

## 2.4 Metadatabase

A unique metadatabase is created on the CathesisVision server for this integration. It is fully searchable, with configurable filters based on device event information (as above), and time stamping. The filtered event/s, and the associated video, will then be available for review in a new window from which an archive can be created and exported.

Database Element	Features/Abilities
<b>General</b>	<ul style="list-style-type: none"> <li>• All device events are databased.</li> <li>• Database entries include the footage from cameras linked to device objects.</li> <li>• Multiple cameras may be linked to multiple objects.</li> <li>• Device event metadata is displayed where applicable.</li> <li>• Databased device events may be viewed in the embedded video player, which includes the usual CathesisVision video review tools.</li> </ul>
<b>View Options</b>	<ul style="list-style-type: none"> <li>• Server.</li> <li>• Events.</li> </ul>
<b>Sort Options</b>	<ul style="list-style-type: none"> <li>• Time.</li> </ul>
<b>Easy Search</b>	<ul style="list-style-type: none"> <li>• Intercom 1.</li> <li>• Intercom 2.</li> </ul>
<b>Filter</b>	<ul style="list-style-type: none"> <li>• Start time.</li> <li>• End time.</li> </ul>

	<ul style="list-style-type: none"> <li>• Intercom 1.</li> <li>• Intercom 2.</li> </ul>
<b>Export</b>	Database entries may be exported in <b>CSV</b> and <b>PDF</b> format.

## 2.5 Maps

The CathesisVision GUI provides for configurable site maps that feature multi-layered, hierarchical, interactive interfaces providing representation and control of a site and its resources.

Map Element	Features/Abilities
<b>General</b>	Device objects can be embedded in a site map, which offers multiple action options when messages are received from the device, the device triggers an event, and/or the user manually initiates a map action.
<b>Map Action Triggers</b>	<ul style="list-style-type: none"> <li>• All device objects may be set to trigger a map action if the user left-clicks on map.</li> <li>• Some device objects may be set to trigger a map action if a state change message is received from the device.</li> <li>• All device objects may be set to perform a map action if <i>any</i> event occurs on the device.</li> <li>• Device objects, which can be configured to trigger CathesisVision events, may also be set to perform a map action when specific CathesisVision events are triggered.</li> </ul>
<b>Map Actions Options</b>	When triggered (see above), objects may perform the following map actions (where applicable): <ul style="list-style-type: none"> <li>• Connect to a site.</li> <li>• Perform an animation.</li> <li>• Go to a camera preset.</li> <li>• Load a map.</li> <li>• Set a PTZ relay output.</li> <li>• Show a popup menu.</li> <li>• Set a relay output.</li> <li>• Show an HTML block.</li> <li>• Show a block of text.</li> <li>• Show a device popup menu.</li> </ul>



### 3. Conclusion

This document was designed to deal specifically with this integration. For further information about the CathesisVision software, consult the main manual (<http://cathesisvideo.com/>).

For support, email [support@cat.co.za](mailto:support@cat.co.za).

#### USEFUL LINKS

To view **tutorial videos** on CathesisVision setup, visit <https://cathesisvideo.com/resources/videos>

Find answers to Cathesis **Frequently Asked Questions**: <https://cathesis.crisp.help/en/?1557129162258>

