



## Installation Guide

### 1. Introduction

Thank you for purchasing this SAM-3101 encoder.

This guide provides basic information for the installation, connection and configuration of the encoder. For more detailed information please contact your supplier or refer to the detailed product documentation.


### 2. Product Warranty

This product is subject to the Cathexis standard warranty terms and conditions


### 3. Product Features

- PoE (Power over Ethernet) – 12VDC, 5.5Watt max
- Optimized H.264 video compression algorithm to facilitate transmission of High Quality video over low network bandwidth
- Built in monitoring function
- Supports PAL/NTSC
- Provides RS485 serial port
- 12V DC Output (if PoE is active)
- Audio input (1x Microphone input with differential Microphone Amplifier via 3.5 mm Audio Jack)
- Audio Output (200-300mW into 8 Ohms)
- Dual streaming – unicast and multicast
- Fully integrated within the Cathexis Network Video Recorder
- Hardware watchdog and Built-in-tests
- Option to add buffer FLASH in case of network outage (NOTE: Not available in this version)
- Opto-isolated inputs and relay output
- Mini USB interface (NOTE: Not available in this version)

### 4. Encoder dimensions

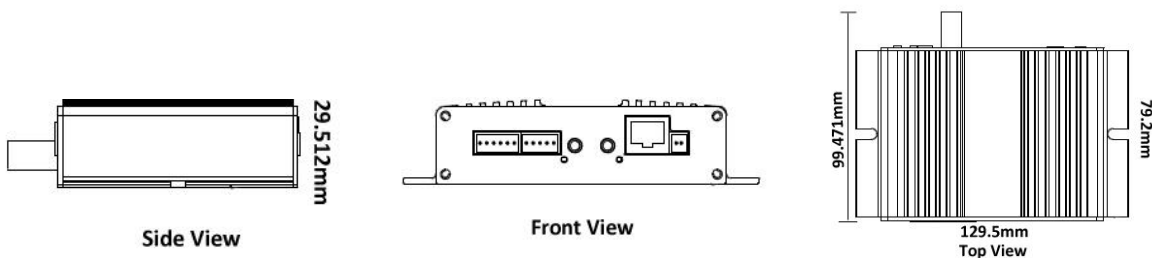

### 5. Connections

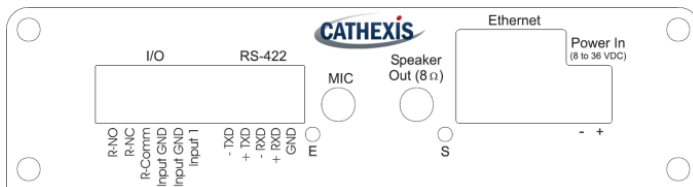

| Ethernet   | Power In                   | Mic In                 |
|--|----------------------------|------------------------|
| 100BaseT RJ45 Poe Ethernet port<br>POE Input Power” 12VDC, 5.5Watt Max | 8 to 36 VDC<br>5.5Watt Max | Differential Mic input |


| I/O Relays             |   |
|------------------------|---|
| R-NO (normally open)   | 1 |
| R-NC (normally closed) | 2 |
| R-Comm (common)        | 3 |
| Input GND              | 4 |
| Input GND              | 5 |
| Input 1                | 6 |

| RS422 Serial Port |   |
|-------------------|---|
| - TXD             | 1 |
| +TXD              | 2 |
| -RXD              | 3 |
| +RXD              | 4 |
| GND               | 5 |


| Audio Jack connections |   |  |
|------------------------|---|--|
|                        | Audio Out:<br>Sleeve = GND<br>Ring = Signal | Audio in:<br>Sleeve = GND<br>Ring = Signal |
|                        | NOTE: Only stereo jack must be used         | NOTE: Only stereo jack must be used        |

## 6. Warnings


Don't install the encoder in direct sunlight

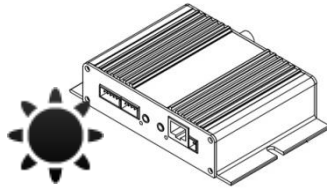


Do not install the product in a damp area, or where it may be exposed to flammable liquids and/or gas

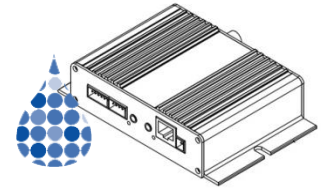

Do not install the product in a location where it may be exposed to extreme heat or cold (SPEC: -10 to +60 degC)

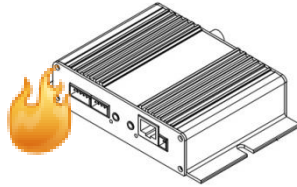

Do not install the product where it may be exposed to rain, water and/or radioactivity

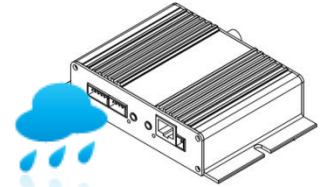

## 7. Setting IP address

IP address can be changed via the Cathexis IP utility. The utility is automatically included when our catVision software package is installed.



The utility can be run from any of these interfaces:

- NetBSD catLite interface: Main Menu > Maintenance > Encoder Setup
- NetBSD catPro interface: Main Menu > Maintenance > Encoder Setup
- Windows Start Menu Start > Programs > Cathexis > catEncoderSetup
- Windows C:\Dvs\cat\_EncoderSetup.exe
- catEncoderSetup icon on Windows Desktop

**NOTE:** If you attempt to change IP Address during a firmware upgrade, the IP address will not change

1. Right-click the listed encoder or click on the File menu, and select "Set IP", to display the "Single IP" window:

|   |                |
|---|----------------|
| Unit IP:  | 192.168.34 .88 |
| Subnet:   | 255.255.240.0  |
| Gateway:  | 192.168.34 .8  |
| <input type="button" value="OK"/> <input type="button" value="Cancel"/> |                |

2. Change the "Unit IP" to the new IP address.
3. If necessary, also modify the "Subnet" and "Gateway" fields.
4. Click "OK".
5. The list refreshes itself approximately every 2 seconds – once refreshed, check that the encoder is now displaying the new details.

**For assistance please contact your supplier or Cathexis support**

**Cathexis Support**

**Tel : +27(0)87 230 1080**

**[support@cat.co.za](mailto:support@cat.co.za)**

|                      |                 |
|----------------------|-----------------|
| Physical Address:    | Postal Address: |
| 259 Montpelier Road, | PO Box 47769,   |
| Morningside,         | Greyville,      |
| 4001                 | 4023            |
| South Africa         | South Africa    |

